



**CROP TIGER 30 TERRA TRAC**

## **Operator's Manual**

**Original Operator's Manual**

## Validity of manual

This manual applies to machine / Cutter Bar:

Designation	Type	Serial number	
		From	To
CROP TIGER 30 Terra-Trac Domestic	070	07053029	07053775
		07060001	07060224
		07064000	07069999

## **Safety and accident prevention regulations for combine-harvesters**

- ▶ Never stand in the slewing range of the unloading auger tube while the engine is running. Instruct other persons too, to leave this area.

## **Prior to putting into operation, general**

- Clear all obstacles from the machine's path.
- Check the horn, the alarm (if available) and all other warning devices works properly.
- Check the state of the front attachment and the combine.

## Identification of warning and danger signs

In this operator's manual, we have marked all points concerning your safety and the safety of the front attachment or of the machine with the symbols below. Please pass all safety precautions on to other users as well.

### **DANGER!**

Nature and source of danger

Consequences: death or serious injury

▶ Countermeasures

---

### **WARNING!**

Nature and source of danger

Consequences: injuries

▶ Countermeasures

---

### **CAUTION!**

Nature and source of danger

Consequences: material damage

▶ Countermeasures

---

### *NOTICE!*

Nature and source of information

Consequences: enhanced machine economy or easy assembly

▶ Measures

---

### **Environment!**

Nature and source of danger

Consequences: damage to the environment

▶ Countermeasures

---

## Lines, tubes and hoses

- Check lines, pipes and hoses carefully.
- Never use your bare hands for searching for leaks. Use a piece of timber or cardboard for locating leaks.
- Tighten all joints to the recommended torque.

### **WARNING!**

Nature and source of danger.

Serious injury

- ▶ Never bend high-pressure lines.
- ▶ Do not knock on high-pressure lines.
- ▶ Do not install bent or damaged lines.

- 
- ▶ Repair all loose or damaged lines. Leaks may cause a fire. Contact the local spare parts dealer.
  - ▶ Replace components when any of the conditions listed below is detected:
    - ▶ End valves are damaged or leaky.
    - ▶ Outer covers are chafed open.
    - ▶ Wires are bare.
    - ▶ Outer covers are bloated.
    - ▶ Moving hose sections are bent.
    - ▶ Outer covers have embedded reinforcements.
    - ▶ End valves are mislocated.

Ensure that all clamps, protective guards and thermal shields are properly fitted. During machine operation, this will contribute to avoiding vibrations, friction with other parts and excessive heat.

## Transporting persons

- Only persons who are instructing the driver of the machine should be transported.
- Otherwise, it is not permissible to transport persons on the machine.

## **Leaving the machine**

- When shutting down the machine for an extended period, disconnect the battery isolating switch.
- Never leave the machine unattended as long as the engine is running.
- Lower the front attachment fully to the ground before leaving the machine.

## **Diesel engine**

Absolutely follow the safety measures listed below in order to avoid damage to the engine, components and wiring looms and to prevent personal injuries that may result from the above conditions.

- Start the engine only with the batteries firmly connected.
- Do not disconnect the batteries while the engine is running.
- Do not use a quick charger for starting the engine.
- Carry out assist-starting only with separate batteries.
- Bear in mind that the battery terminals must be removed for quick charging of the batteries.
- Incorrect polarity of the supply voltage (e.g. due to incorrect polarity of batteries) may destroy the control units.

## Hints regarding the diesel engine

### *NOTICE!*

Operation of diesel engine under unsuitable operating conditions.

Increased fuel consumption.

Increased diesel engine wear.

- ▶ Do not let the diesel engine warm up at idle speed.
  - ▶ Stop the diesel engine during operational waiting times.
  - ▶ Check fuel consumption at regular intervals.
  - ▶ Carry out the specified maintenance work at regular intervals.
-

## Anti-freeze

Anti-freeze is highly flammable.

Keep anti-freeze out of reach of children.

Vapours could cause tiredness and lethargy.

Repeated contact can cause brittle or cracked skin.

The following problems can occur:

- Irritation of the eyes.
- Irritation of the airways.
- Headache
- Dizziness

Influences on the central nervous system with high doses:

- Breathlessness
- Unconsciousness

Swallowing:

- Nausea
- Vomiting
- Liver damage

Do not release anti-freeze into the environment.

- Collect in a suitable container.
- Dispose of properly.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)