

SCORPION 960 VARIPOWER

SCORPION 756 VARIPOWER

SCORPION 746 VARIPOWER

Operator's Manual

Exhaust standard stage III A

Australia

Genuine Operator's Manual

Validity of manual

Telehandler	Type	Sub-type	Vehicle identification number	
			From	To
SCORPION 960 VARIPOWER	K38	410	K38 00021	–
SCORPION 756 VARIPOWER	K37	410	K37 00021	–
SCORPION 746 VARIPOWER	K35	410	K35 00021	–

Information about this Operator's Manual

Read this Operator's Manual thoroughly in order to make yourself familiar with safe and correct operation, maintenance and transportation of the machine. This avoids injuries and machine damage. If you cannot understand parts of the Operator's Manual, contact a CLAAS Sales Partner.

This Operator's Manual is part of the machine and must be handed over to the buyer of the machine in case of resale. In case of loss or damage, the Operator's Manual and the safety decals applied to the machine can be reordered from a CLAAS Sales Partner. This Operator's Manual is also available in other languages.

Directions such as front, rear, right and left refer to the direction of forward travel.

Optional equipment

The Operator's Manual describes all machine types, series and special equipment available at the time of the copy deadline of this Operator's Manual.

In this Operator's Manual, optional equipment is marked with a <*>.

- ▶ In case of questions regarding machine equipment, please contact a CLAAS Sales Partner.

Qualified specialist workshop

Qualified specialist workshops have the knowledge, tools and skills necessary to perform any required work properly, such as:

- ▶ Maintenance work
- ▶ Repair work
- ▶ Installation and retrofitting

In accordance with CLAAS regulations, the qualified specialist workshops keep a record of the work that has been carried out. This documentation may be required for warranty claims.

CLAAS recommends using a CLAAS sales partner.

Maintenance notes

Respecting the specified maintenance intervals ensures optimum performance, reliability and safety of the machine.

CLAAS recommends having maintenance work carried out by a qualified specialist workshop.

Notes on warranty

Warranty claims result from the conditions of sale agreed with the CLAAS Sales Partner.

Before delivery, the specialist workshop has carried out a pre-delivery inspection in accordance with the service booklet. The specialist workshop must confirm this inspection and delivery to the customer in the delivery advice. The instructions in this Operator's Manual and the service booklet must be observed. Failure to observe these instructions may result in loss of warranty claims.

Maintenance work that is not described in this Operator's Manual may be carried out only by a qualified specialist workshop.

Spare parts and technical questions

- ▶ Enter the vehicle identification number into the adjacent field.
The vehicle identification number can be found on the identification plate.
- ▶ Please specify the vehicle identification number when ordering spare parts and in case of technical questions.

Intended use

The telehandler is designed for professional use according to the recognized rules of agricultural practice in agricultural work exclusively.

The telehandler, when using the implements designed for this machine and intended for the respective application, is intended for picking up, transporting, stacking, relocating, transferring and loading materials and loads.

The telehandler can be used either as a self-propelled working machine or as a tractor with the corresponding registration (LoF).

The telehandler may be used, serviced and repaired only by persons who are familiar with the machine and who have been instructed about the hazards involved, relating to the machine functions.

Compliance with the conditions of operation, maintenance and servicing as specified in the Operator's Manual and by the manufacturer also constitute essential elements for the intended use.

The relevant accident prevention regulations, all other recognised regulations on safety and occupational medicine and the road traffic regulations must be observed by users and owners at all times.

Any use going beyond the above shall be considered as <contrary to the intended use>. The manufacturer accepts no liability for damage resulting from this. All liability is borne by the user.

You may request specific information about the intended use regarding special cases from CLAAS.

Reasonably foreseeable misuse

Use outside of the intended use is a use not provided for by the manufacturer and therefore represents a misuse. The manufacturer accepts no liability for damage resulting from this. All liability is borne by the user.

Such misuse of the telehandler includes:

- Use of areas and spaces that are not described in the Operator's Manual as workplaces, maintenance space or access area
- Performing of adjusting work, cleaning work and maintenance operations that are not specified in the Operator's Manual
- Performing troubleshooting and maintenance work with the diesel engine running
- Failure to observe warnings on the telehandler and in the Operator's Manual
- Performance of servicing and repair work by untrained personnel
- Unauthorized modifications on the telehandler
- Fitting of non-approved additional equipment
- Use of spare parts not meeting CLAAS requirements
- Transport of liquid materials in the bucket
- Use in spraying operations
- Use in forestry operations
- Use as a transport vehicle for implements not approved or released by CLAAS
- Use in bodies of water or flooding areas
- Exceeding the permitted technical gross weight or of the technically admissible axle load
- Transporting of persons
- Lifting of persons
- Fitting and operating work platforms
- Operating the vehicle although the machine drive is not sitting on the driver's seat

Hazard signs



This hazard sign warns of risks of injury.

- ▶ To avoid injuries and death, follow all measures marked by this hazard sign.

Signal word

The warnings in this Operator's Manual are introduced by the hazard sign and a signal word. The signal word expresses the extent of the hazard.

DANGER!

DANGER identifies a dangerous situation that leads to death or serious injury if not avoided.

WARNING!

WARNING identifies a dangerous situation that may lead to death or serious injury if not avoided.

CAUTION!

CAUTION identifies a dangerous situation that may lead to slight injuries if not avoided.

Importance of Operator's Manual

The Operator's Manual is an important document and a part of the machine. It addresses the user and contains safety-relevant information. Only the procedures specified in the Operator's Manual are safe.

- ▶ Read and observe the safety chapter of the machine before using it for the first time.
- ▶ Read and observe the relevant chapters of the Operator's Manual before starting work.
- ▶ When failing to understand content or when help is needed, contact a CLAAS Sales Partner.

Observing safety decals and warnings

Safety decals on the machine and warnings in the Operator's Manual warn you of hazards in danger areas and are important parts of the machine's safety equipment. Missing or unidentifiable safety decals increase the risk of serious and fatal injuries.

- ▶ Read and observe the safety instructions and warnings in the Operator's Manual and the safety decals on the machine before putting the machine into operation.
- ▶ Clean any dirty safety decals.
- ▶ Replace any missing and unidentifiable safety decals with new ones immediately.
[Overview of warning signs](#)
- ▶ Apply the appropriate safety decals to spare parts.
[Overview of warning signs](#)
- ▶ Spare parts and components from suppliers may contain safety instructions that are not mentioned in this Operator's Manual.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com