

en

Service manual

Wheel loader

Document ID

Order number: 11450177
Issued: 04-2019
Version: 17
Author: LBH / Technical Documentation Department

Product ID

Manufacturer: Liebherr-Werk Bischofshofen GmbH
Valid for: L 576-1169

Conformity:



Contact

Liebherr-Werk Bischofshofen GmbH
Dr. Hans Liebherr-Straße 4
A – 5500 Bischofshofen

Contents

010	Introduction	010-1
010.1	Safety instructions	010-4
010.1.1	General safety instructions	010-4
010.1.2	Instructions on preventing crushing injuries and burns	010-5
010.1.3	Instructions on preventing fires and explosions	010-5
010.1.4	Safety instructions for start-up	010-6
010.1.5	Safety precautions during start-up	010-6
010.1.6	Instructions for safe working	010-7
010.1.7	Safety instructions for driving on slopes	010-8
010.1.8	Parking safely	010-8
010.1.9	Transporting the machine safely	010-8
010.1.10	Towing the machine safely	010-9
010.1.11	Measures for ensuring safe maintenance	010-9
010.1.12	Safety instructions for maintenance work on machines with hydro accumulators	010-12
010.1.13	Safety instructions for welding work on the machine	010-12
010.1.14	Safety instruction for working on the working attachment	010-12
010.1.15	Safety instructions for transporting the machine by crane	010-13
010.1.16	Safe maintenance of hydraulic hoses and hose lines	010-13
010.1.17	Roll over protective structure (ROPS) and falling object protection structure (FOPS)	010-14
010.1.17.1	Preventing accidents	010-14
010.1.17.2	Preventing injuries	010-14
010.1.18	Attachments and accessories	010-14
010.1.19	Protection against vibrations	010-15
010.1.20	See and be seen	010-15
010.1.20.1	Field of view and visual aids	010-15
010.1.20.2	Measures during operation.	010-16
010.1.20.3	Modifications to the machine	010-16
010.1.21	Danger area of the machine	010-16

010.2	Special tools for maintenance and repair work	010-18
010.2.1	Special tools in general	010-18
010.2.2	Special tools for Liebherr diesel engines	010-19
010.2.3	Special tools for hydraulic cylinders (z-bar kinematics)	010-20
010.2.4	Special tools, hydraulic cylinder (industrial machine)	010-20
010.2.5	Special tools for steering cylinders	010-21
010.2.6	Special tools for the electrical system	010-21
010.2.7	Special tools for the transmission	010-21
010.2.8	Special tools for front axle MT-L II	010-22
010.2.9	Special tools for rear axle MT-L II	010-22
010.2.10	Special tools for the air conditioning system	010-22
010.2.11	Special tools for Grammer driver's seat	010-23
010.2.12	Special tools for cab glazing	010-23
010.2.13	Special tools for the central lubrication system (Liebherr)	010-23
010.2.14	Special tools for the central lubrication system (Groeneveld)	010-24
010.3	Standards and regulations	010-25
010.3.1	Prestressing forces and tightening torques for bolts with metric standard and fine threads as per DIN ISO 261	010-25
010.3.1.1	Range of application and purpose	010-25
010.3.1.2	Other applicable documents	010-25
010.3.1.3	Modifications and descriptions	010-26
010.3.1.4	Tightening torques	010-26
010.3.2	Liebherr standards for assembly instructions and tightening torques	010-32
010.4	Preservation guidelines	010-33
010.4.1	General information	010-33
010.4.2	Machine out of service for an unknown period of time	010-33
010.4.3	Putting the machine out of service	010-34
010.4.3.1	Out of service for up to 2 months	010-34
010.4.3.2	Out of service for up to 12 months	010-35
010.4.3.3	Out of service for longer than 12 months	010-36
010.4.4	Putting back into service	010-36
010.4.4.1	After being out of service for 2 months	010-36
010.4.4.2	After being out of service for 12 months	010-37
010.4.4.3	After being out of service for longer than 12 months	010-37

020	Technical data	020-1
020.1	Overall machine	020-5
020.1.1	Complete machine with bucket (Z lift arms) <i>L576-1169/23813-;</i>	020-5
020.1.2	Complete machine with bucket (industrial lift arms) <i>L576-1169/23813-;</i>	020-6
020.1.3	Attachment: Light material bucket <i>L576-1169/23813-;</i>	020-8
020.1.4	Attachment: High dump bucket <i>L576-1169/23813-;</i>	020-10
020.1.5	Attachment: Forklift <i>L576-1169/23813-;</i>	020-11
020.1.6	Attachment: Timber grabber <i>L576-1169/23813-;</i>	020-13
020.2	Drive group	020-15
020.2.1	Diesel engine <i>L576-1169/23813-;</i>	020-15
020.2.2	Diesel particulate filter temperature sensors <i>L576-1169/23813-;</i>	020-16
020.2.3	Fuel tank <i>L576-1169/23813-;</i>	020-17
020.2.4	Fuel pre-filter (separator filter) <i>L576-1169/23813-;</i>	020-17
020.2.5	Fuel fine filter <i>L576-1169/23813-;</i>	020-17
020.2.6	Air filter vacuum switch <i>L576-1169/23813-;</i>	020-17
020.2.7	Clutch <i>L576-1169/23813-;</i>	020-18
020.2.8	Splitter box <i>L576-1169/23813-;</i>	020-18
020.3	Cooling system	020-19
020.3.1	Fan gear pump <i>L576-1169/23813-;</i>	020-19
020.3.2	Fan gear motor <i>L576-1169/23813-;</i>	020-19
020.3.3	Hydraulic oil temperature sensor B8 <i>L576-1169/23813-;</i>	020-19
020.4	Working hydraulics	020-20
020.4.1	Working hydraulics pump <i>L576-1169/23813-;</i>	020-20
020.4.2	Control valve block <i>L576-1169/23813-;</i>	020-20

020.4.3	Pilot control unit <i>L576-1169/23813-;</i>	020-21
020.4.4	Working hydraulics lockout solenoid valve Y14 <i>L576-1169/23813-;</i>	020-21
020.4.5	Pilot control hydro accumulator <i>L576-1169/23813-;</i>	020-21
020.4.6	Float position pressure switch <i>L576-1169/23813-;</i>	020-21
020.4.7	Stabilisation module <i>L576-1169/23813-;</i>	020-22
020.4.8	Ride control hydro accumulator <i>L576-1169/23813-;</i>	020-22
020.4.9	Z kinematics and industrial lift arms lift cylinder <i>L576-1169/23813-;</i>	020-22
020.4.10	Z kinematics tilt cylinder <i>L576-1169/23813-;</i>	020-23
020.5	Travel hydraulics	020-24
020.5.1	Variable displacement pump <i>L576-1169/23813-;</i>	020-24
020.5.2	Variable displacement motor 1 <i>L576-1169/23813-;</i>	020-24
020.5.3	Variable displacement motor 2 <i>L576-1169/23813-;</i>	020-25
020.5.4	Variable displacement motor scavenging gear pump <i>L576-1169/23813-;</i>	020-25
020.6	Hydraulic components	020-26
020.6.1	Filter unit <i>L576-1169/23813-;</i>	020-26
020.6.2	Breather filter <i>L576-1169/23813-;</i>	020-26
020.7	Steering system	020-27
020.7.1	Steering pump <i>L576-1169/23813-;</i>	020-27
020.7.2	Servostat <i>L576-1169/23813-;</i>	020-27
020.7.3	Steering cylinder <i>L576-1169/23813-;</i>	020-27
020.7.4	Steering damper hydro accumulator <i>L576-1169/23813-;</i>	020-28
020.7.5	Emergency steering pump <i>L576-1169/23813-;</i>	020-28
020.7.6	Emergency steering pressure switch B3 <i>L576-1169/23813-;</i>	020-28

020.7.7	Emergency steering check pressure switch B3a <i>L576-1169/23813-;</i>	020-28
020.8	Brake system	020-29
020.8.1	Brake system gear pump <i>L576-1169/23813-;</i>	020-29
020.8.2	Compact brake valve <i>L576-1169/23813-;</i>	020-29
020.8.3	Service brake hydro accumulator <i>L576-1169/23813-;</i>	020-29
020.8.4	Brake light pressure switch B12 <i>L576-1169/23813-;</i>	020-29
020.8.5	Accumulator charge pressure switch B19 <i>L576-1169/23813-;</i>	020-30
020.8.6	Parking brake hydro accumulator <i>L576-1169/23813-;</i>	020-30
020.8.7	Overspeed protection solenoid valve Y16 <i>L576-1169/23813-;</i>	020-30
020.9	Electrical system	020-31
020.9.1	Central control unit (Master 4) <i>L576-1169/23813-;</i>	020-31
020.9.2	Input module <i>L576-1169/23813-;</i>	020-31
020.9.3	Output module <i>L576-1169/23813-;</i>	020-31
020.9.4	Battery <i>L576-1169/23813-;</i>	020-32
020.9.5	Voltage transformer <i>L576-1169/23813-;</i>	020-32
020.9.6	Reversing camera <i>L576-1169/23813-;</i>	020-32
020.10	Gearbox	020-34
020.10.1	Transmission <i>L576-1169/23813-;</i>	020-34
020.10.2	Gear shifting solenoid valves <i>L576-1169/23813-;</i>	020-35
020.10.3	Speed sensors <i>L576-1169/23813-;</i>	020-35
020.10.4	Transmission gear pump <i>L576-1169/23813-;</i>	020-35
020.11	Axles and drive shafts	020-36
020.11.1	Front axle <i>L576-1169/23813-;</i>	020-36
020.11.2	Rear axle <i>L576-1169/23813-;</i>	020-36

020.11.3	Front cardan shaft <i>L576-1169/23813-;</i>	020-36
020.11.4	Rear cardan shaft <i>L576-1169/23813-;</i>	020-37
020.11.5	Tyres <i>L576-1169/23813-;</i>	020-37
020.11.5.2	Tyres for timber handling	020-38
020.11.5.3	Special tyres	020-39
020.11.5.4	Tyres for machines with optional accessories	020-39
020.12	Steel parts of the basic machine	020-41
020.12.1	Ballast weight <i>L576-1169/23813-;</i>	020-41
020.13	Working attachment	020-42
020.13.1	Lift arms with Z kinematics <i>L576-1169/23813-;</i>	020-42
020.14	Operator's cab, heating and air conditioning	020-43
020.14.1	Heating, air conditioning <i>L576-1169/23813-;</i>	020-43
020.14.2.1	Air conditioning	020-43
020.14.3.1	Air conditioning compressor	020-43
020.14.4	Condenser <i>L576-1169/23813-;</i>	020-43
020.14.5	Dryer <i>L576-1169/23813-;</i>	020-44
020.14.6	Air conditioning pressure switch <i>L576-1169/23813-;</i>	020-44
020.14.7	Anti-icing temperature sensor <i>L576-1169/23813-;</i>	020-44
020.15	Lubrication system	020-46
020.15.1	Central lubrication system (Liebherr) <i>L576-1169/23813-;</i>	020-46
020.15.1.1	Central lubrication pump	020-46
020.15.1.2	Progressive distributor	020-46
030	Maintenance	030-1
030.1	Maintenance and inspection schedule	030-10
030.2	Filling quantities and lubrication chart	030-15
030.2.1	Recommended lubricants <i>L576-1169/23813-;</i>	030-15
030.2.2	Recommended operating fluids <i>L576-1169/23813-40348;</i>	030-16

030.2.3	Recommended operating fluids <i>L576-1169/40349-;</i>	030-16
030.3	Lubricants and fuels	030-17
030.3.1	General information on lubricants and fuels	030-17
030.3.1.1	General questions	030-17
030.3.1.2	Safety data sheets	030-17
030.3.1.3	Technical data sheets	030-17
030.3.1.4	Specific Liebherr standards	030-17
030.3.2	General information on changing lubricants and fuels	030-17
030.3.3	Converting hydraulic system from mineral oils to biodegradable hydraulic fluids	030-18
030.3.4	Diesel fuels <i>L576-1169/23813-;</i>	030-18
030.3.4.1	Specification	030-18
030.3.4.2	Sulphur content of the diesel fuel, lubricity	030-18
030.3.4.3	Diesel fuel at low temperatures (winter operation)	030-19
030.3.4.4	Flow improvers at low temperatures	030-19
030.3.5	Diesel fuels for diesel engines without emission-type approval <i>L576-1169;</i>	030-19
030.3.5.1	Minimum quality requirement	030-19
030.3.6	Lubricating oils for diesel engines <i>L576-1169/23813-;</i>	030-20
030.3.6.1	Lubricating oil quality	030-20
030.3.6.2	Lubricating oil viscosity	030-20
030.3.6.3	Complicating factors affect the oil change	030-21
030.3.7	Engine oils for diesel engines without emission-type approval <i>L576-1169;</i>	030-21
030.3.7.1	Liebherr recommendation	030-21
030.3.7.2	Other approved engine oils	030-21
030.3.7.3	Minimum quality requirement	030-22
030.3.7.4	Changing intervals	030-22
030.3.7.5	Complicating factors	030-22
030.3.8	Refrigerant <i>L576-1169;</i>	030-22
030.3.9	Coolants for diesel engines <i>L576-1169/23813-40348;</i>	030-23
030.3.9.1	General recommendations	030-23
030.3.9.2	Water (fresh water)	030-23

	030.3.9.3	Coolant mixing ratio	030-23
	030.3.9.4	Permissible antifreeze and corrosion inhibitors	030-24
	030.3.9.5	Corrosion inhibitors without antifreeze	030-24
030.3.10	Coolants for diesel engines <i>L576-1169/40349-;</i>		030-25
	030.3.10.1	General recommendations	030-25
	030.3.10.2	Water (fresh water)	030-25
	030.3.10.3	Coolant - Mixing ration	030-26
	030.3.10.4	Approved antifreeze and corrosion inhibitors	030-26
	030.3.10.5	Permissible premixed antifreeze/corrosion inhibitors	030-26
	030.3.10.6	Corrosion inhibitors without antifreeze	030-27
030.3.11	Hydraulic oil <i>L576-1169/23813-;</i>		030-27
	030.3.11.1	Liebherr hydraulic oil	030-28
	030.3.11.2	Using engine oil as hydraulic oil	030-28
	030.3.11.3	Warming up	030-29
	030.3.11.4	Biodegradable hydraulic oils	030-29
	030.3.11.5	Changing the oil, analysing the oil, changing filters	030-30
030.3.12	Lubricating oils for splitter boxes <i>L576-1169/23813-;</i>		030-31
030.3.13	Lubricating oils for transmissions <i>L576-1169/23813-;</i>		030-32
030.3.14	Lubricating oils for axles <i>L576-1169/23813-;</i>		030-33
030.3.15	Lubrication grease and other lubricants <i>L576-1169/23813-;</i>		030-33
	030.3.15.1	Minimum quality requirements	030-34
	030.3.15.2	Liebherr lubrication grease	030-34
030.4	Maintenance tasks		030-36
030.4.1	Safety precautions <i>L576-1169/23813-;</i>		030-36
030.4.2	Preparatory tasks for maintenance		030-36
	030.4.2.1	Maintenance positions <i>L576-1169/23813-;</i>	030-37
	030.4.2.2	Opening the service accesses <i>L576-1169/23813-;</i>	030-38
	030.4.2.3	Turning off the battery main switch <i>L576-1169/23813-;</i>	030-40
030.4.3	Overall machine		030-41

030.4.3.1	Checking the machine for external damage <i>L576-1169/23813-;</i>	030-41
030.4.3.2	Removing loose parts, dirt, ice and snow from the machine <i>L576-1169/23813-;</i>	030-41
030.4.3.3	Cleaning the machine <i>L576-1169/23813-;</i>	030-41
030.4.3.4	Checking the machine for leaks <i>L576-1169/23813-;</i>	030-43
030.4.3.5	Making sure the bolted connections are tight <i>L576-1169/23813-;</i>	030-43
030.4.3.6	Corrosion protection system for use with salt and artificial fertilisers (optional): Carrying out corrosion protection <i>L576-1169/23813-;</i>	030-43
030.4.3.7	Oil analyses <i>L576-1169/23813-;</i>	030-43
030.4.4	Drive group	030-50
030.4.4.1	Checking the engine oil level <i>L576-1169/23813-;</i>	030-50
030.4.4.2	Changing diesel engine oil <i>L576-1169/23813-;</i>	030-51
030.4.4.3	Changing the engine oil filter <i>L576-1169/23813-;</i>	030-52
030.4.4.4	Checking the V-ribbed belt on the engine <i>L576-1169/23813-;</i>	030-53
030.4.4.5	Changing the V-ribbed belt on the engine <i>L576-1169/23813-;</i>	030-54
030.4.4.6	Checking the mounting and sensor cable connections of the engine control units <i>L576-1169/23813-;</i>	030-55
030.4.4.7	Checking the engine valve clearance <i>L576-1169/23813-;</i>	030-55
030.4.4.8	Changing the diesel engine oil separator filter cartridge <i>L576-1169/23813-;</i>	030-59
030.4.4.9	Checking the engine heating flange <i>L576-1169/23813-;</i>	030-60
030.4.4.10	Changing the engine heating flange <i>L576-1169/23813-;</i>	030-60
030.4.4.11	Draining off condensate and sediment from the fuel tank <i>L576-1169/23813-;</i>	030-61
030.4.4.12	Draining off condensate from the Separ fuel pre-filter <i>L576-1169/23813-;</i>	030-62

030.4.4.13	Changing the Separ fuel pre-filter insert <i>L576-1169/23813-;</i>	030-63
030.4.4.14	Changing the fuel fine filter <i>L576-1169/23813-;</i>	030-64
030.4.4.15	Bleeding the fuel system <i>L576-1169/23813-;</i>	030-65
030.4.4.16	Diesel engine - checking the tightening torque of the clips on the external EGR radiator <i>L576-1169;</i>	030-67
030.4.4.17	Cleaning the air filter service cover and dust discharge valve <i>L576-1169/23813-;</i>	030-67
030.4.4.18	Checking the air suction system for leaks and tight fitting <i>L576-1169/23813-;</i>	030-68
030.4.4.19	Cleaning or changing the main filter element <i>L576-1169/23813-;</i>	030-69
030.4.4.20	Changing the air filter safety element <i>L576-1169/23813-;</i>	030-72
030.4.4.21	Cleaning the oil bath air filter (optional) <i>L576-1169/23813-;</i>	030-73
030.4.4.22	Checking the oil level in the splitter box <i>L576-1169/23813-;</i>	030-74
030.4.4.23	Changing the splitter box oil <i>L576-1169/23813-;</i>	030-75
030.4.4.24	Checking the exhaust system for leaks and tight fitting <i>L576-1169/23813-;</i>	030-76
030.4.4.25	Cleaning or changing the diesel particulate filter <i>L576-1169/23813-;</i>	030-77
030.4.5	Cooling system	030-86
030.4.5.1	Checking the coolant antifreeze and corrosion inhibitor concentration <i>L576-1169/23813-;</i>	030-86
030.4.5.2	Cleaning the cooling system <i>L576-1169/23813-;</i>	030-90
030.4.5.3	Changing the coolant <i>L576-1169/23813-40348;</i>	030-91
030.4.5.4	Changing the coolant <i>L576-1169/40349-;</i>	030-93
030.4.6	Working hydraulics	030-96
030.4.6.1	Lubricating the solenoids, universal joints and tappets on the pilot control unit <i>L576-1169/23813-;</i>	030-96
030.4.7	Hydraulic components	030-96

030.4.7.1	Checking the oil level in the hydraulic tank <i>L576-1169/23813-;</i>	030-96
030.4.7.2	Checking and cleaning the magnetic rod on the hydraulic tank <i>L576-1169/23813-;</i>	030-98
030.4.7.3	Draining off condensate and sediment from the hydraulic tank <i>L576-1169/23813-;</i>	030-99
030.4.7.4	Changing the hydraulic tank return suction filter <i>L576-1169/23813-;</i>	030-100
030.4.7.5	Changing the hydraulic tank breather filter <i>L576-1169/23813-;</i>	030-101
030.4.7.6	Hydraulic tank - changing the oil in the hydraulic system <i>L576-1169/23813-;</i>	030-101
030.4.8	Steering system	030-103
030.4.8.1	Testing the steering <i>L576-1169/23813-;</i>	030-103
030.4.8.2	Lubricating the bearing points on the steering cylinders <i>L576-1169/23813-;</i>	030-104
030.4.9	Brake system	030-105
030.4.9.1	Testing the service brake and parking brake <i>L576-1169/23813-;</i>	030-105
030.4.9.2	Checking the service brake discs for wear <i>L576-1169/23813-;</i>	030-106
030.4.9.3	Checking the gap and wear on the parking brake linings <i>L576-1169/23813-;</i>	030-108
030.4.10	Electrical system	030-113
030.4.10.1	Checking the lights <i>L576-1169/23813-;</i>	030-113
030.4.10.2	Checking the batteries, fluid level and terminals <i>L576-1169/23813-;</i>	030-114
030.4.10.3	Changing the travel direction rocker switch and cap (optional) on the control lever <i>L576-1169/23813-;</i>	030-116
030.4.11	Gearbox	030-118
030.4.11.1	Checking the transmission oil level <i>L576-1169/23813-;</i>	030-118
030.4.11.2	Changing the transmission oil <i>L576-1169/23813-;</i>	030-119
030.4.11.3	Changing the transmission oil filter <i>L576-1169/23813-;</i>	030-120
030.4.12	Axles and drive shafts	030-121

030.4.12.1	Checking the axle oil levels <i>L576-1169/23813-;</i>	030-121
030.4.12.2	Changing the axle oil <i>L576-1169/23813-;</i>	030-121
030.4.12.3	Checking the cardan shafts <i>L576-1169/23813-;</i>	030-123
030.4.12.4	Checking the tyre pressure <i>L576-1169/23813-;</i>	030-123
030.4.12.5	Checking the wheel tightness <i>L576-1169/23813-35541;</i>	030-123
030.4.12.6	Checking the wheel tightness <i>L576-1169/35542-;</i>	030-124
030.4.13	Steel parts of the basic machine	030-125
030.4.13.1	Lubricating the articulation bearing and the rear axle oscillating bearing <i>L576-1169/23813-;</i>	030-125
030.4.13.2	Covering - lubricating locks and hinges <i>L576-1169/23813-;</i>	030-126
030.4.13.3	Greasing the rear section cover lower hinges <i>L576-1169/23813-;</i>	030-126
030.4.14	Working attachment	030-127
030.4.14.1	Lubricating the lift arms and attachment <i>L576-1169/23813-;</i>	030-127
030.4.14.2	Checking the bucket bearing seals and the bearing bushings on the lift arms <i>L576-1169/23813-;</i>	030-128
030.4.14.3	Checking the lift arm bucket stops <i>L576-1169/23813-;</i>	030-130
030.4.14.4	Lubricating and testing the quick-change device <i>L576-1169/23813-;</i>	030-131
030.4.15	Operator's cab, heating and air conditioning	030-132
030.4.15.1	Lubricating the elongated hole on the accelerator pedal and checking the bearing <i>L576-1169/23813-;</i>	030-132
030.4.15.2	Cleaning the fresh and recirculated air filters <i>L576-1169/23813-;</i>	030-133
030.4.15.3	Changing the fresh and recirculated air filters <i>L576-1169/23813-;</i>	030-135
030.4.15.4	Checking the condition and function of the safety belt <i>L576-1169/23813-;</i>	030-136
030.4.15.5	Checking and topping up the windscreen washer reservoir <i>L576-1169/23813-;</i>	030-136
030.4.15.6	Lubricating the cab door hinges <i>L576-1169/23813-;</i>	030-137

030.4.15.7	Checking the seals on the driver's cab <i>L576-1169/23813-;</i>	030-137
030.4.15.8	Heating and air conditioning unit: Testing the function <i>L576-1169/23813-;</i>	030-137
030.4.16	Lubrication system	030-139
030.4.16.1	Checking the lubrication system grease reservoir level <i>L576-1169/23813-;</i>	030-139
030.4.16.2	Checking the pipes, hoses and lubrication points of the lubrication system <i>L576-1169/23813-;</i>	030-140
030.4.16.3	Checking whether metered quantities are adequate at the bearing points (grease collars) of the lubrication system <i>L576-1169/23813-;</i>	030-140
030.5	Testing and adjustment checklist <i>L576-1169/23813-;</i>	030-141
030.6	Testing and adjustment tasks	030-146
030.6.1	Safety precautions <i>L576-1169/23813-;</i>	030-146
030.6.2	Overall machine	030-147
030.6.2.1	Preparatory tasks for testing and adjustment <i>L576-1169/23813-;</i>	030-147
030.6.2.2	Bringing the machine up to operating temperature <i>L576-1169/23813-;</i>	030-148
030.6.3	Drive group	030-149
030.6.3.1	Calibrating the pedals <i>L576-1169/23813-;</i>	030-149
030.6.3.2	Checking the engine speed <i>L576-1169/23813-;</i>	030-149
030.6.3.3	Engine: Reading the service files <i>L576-1169/23813-;</i>	030-150
030.6.3.4	Diesel particulate filter: Performing service regeneration. <i>L576-1169/23813-;</i>	030-151
030.6.4	Cooling system	030-153
030.6.4.1	Fan gear motor proportional pressure relief valve <i>L576-1169/23813-;</i>	030-153
030.6.5	Working hydraulics	030-155
030.6.5.1	Working hydraulics pump flow regulator (standby pressure) <i>L576-1169/23813-;</i>	030-155
030.6.5.2	Working hydraulics pump, flow regulator (differential pressure) <i>L576-1169/23813-;</i>	030-157

030.6.5.3	Working hydraulics pump, power regulator <i>L576-1169/23813-;</i>	030-158
030.6.5.4	Z kinematics control valve block secondary pressure relief valves <i>L576-1169/23813-;</i>	030-159
030.6.5.5	Z kinematics control valve block primary pressure relief valve <i>L576-1169/23813-;</i>	030-161
030.6.5.6	Z kinematics control valve block LS pressure cut-off valve <i>L576-1169/23813-;</i>	030-162
030.6.5.7	Industrial lift arm control valve block secondary pressure relief valves <i>L576-1169/23813-;</i>	030-163
030.6.5.8	Industrial lift arm control block, primary pressure relief valve <i>L576-1169/23813-;</i>	030-165
030.6.5.9	Industrial lift arms control valve block LS pressure cut-off valve <i>L576-1169/23813-;</i>	030-167
030.6.5.10	Stabilisation module cut-off function <i>L576-1169/23813-;</i>	030-168
030.6.5.11	Nitrogen filling of ride control hydro accumulator <i>L576-1169/23813-;</i>	030-168
030.6.5.12	Testing the control valve block for leakage <i>L576-1169/23813-;</i>	030-171
030.6.6	Hydraulic components	030-174
030.6.6.1	Checking the hydraulic lines for damage <i>L576-1169;</i>	030-174
030.6.7	Travel hydraulics	030-179
030.6.7.1	Travel pump, high pressure sensor <i>L576-1169/23813-;</i>	030-179
030.6.7.2	Travel pump replenishing pressure relief valve <i>L576-1169/23813-;</i>	030-180
030.6.7.3	Travel pump high pressure relief valves <i>L576-1169/23813-;</i>	030-181
030.6.7.4	Travel pump pressure cut-off <i>L576-1169/23813-;</i>	030-183
030.6.7.5	Travel pump block curve calibration <i>L576-1169/23813-;</i>	030-185
030.6.7.6	Travel motors, automatic calibration <i>L576-1169/23813-;</i>	030-187
030.6.7.7	Hydro accumulator supply, nitrogen filling <i>L576-1169/23813-;</i>	030-188
030.6.7.8	Engine output <i>L576-1169/23813-;</i>	030-190

030.6.7.9	Service code M2080 - check hydraulic oil contamination sensor and magnetic rod <i>L576-1169/23813-;</i>	030-191
030.6.8	Steering system	030-194
030.6.8.1	Steering pump LS pressure cut-off valve <i>L576-1169/23813-;</i>	030-194
030.6.8.2	Steering pump flow regulator (standby pressure) <i>L576-1169/23813-;</i>	030-195
030.6.8.3	Steering pump flow regulator (differential pressure) <i>L576-1169/23813-;</i>	030-196
030.6.9	Brake system	030-198
030.6.9.1	Compact brake valve, hydro accumulator charging function <i>L576-1169/23813-;</i>	030-198
030.6.9.2	Service brake pressure <i>L576-1169/23813-;</i>	030-199
030.6.9.3	Service brake hydro accumulator capacity <i>L576-1169/23813-;</i>	030-200
030.6.9.4	Accumulator charge pressure switch shift pressure <i>L576-1169/23813-;</i>	030-201
030.6.10	Electrical system	030-202
030.6.10.1	Central control unit (Master4) Creating a Servicefile <i>L576-1169/23813-;</i>	030-202
030.6.10.2	Central control unit (Master4): software update <i>L576-1169;</i>	030-205
030.6.10.3	Setting the IP addresses of the central control unit (Master4) <i>L576-1169/23813-;</i>	030-208
030.6.10.4	Resetting the central control unit (Master4) <i>L576-1169/23813-;</i>	030-210
030.6.10.5	Testing the CAN line <i>L576-1169/23813-;</i>	030-211
030.6.10.6	Addressing the CAN module and checking the system information <i>L576-1169/23813-;</i>	030-215
030.6.11	Gearbox	030-219
030.6.11.1	Control valve block shift pressure <i>L576-1169/23813-;</i>	030-219
030.6.11.2	Nitrogen filling of transmission hydro accumulator <i>L576-1169/23813-;</i>	030-219
030.6.12	Operator's cab, heating and air conditioning	030-221
030.6.12.1	Checking the pressure and temperature conditions of the air conditioning unit <i>L576-1169/23813-;</i>	030-221

	030.6.12.2	Calibrating the display (Display4) <i>L576-1169/23813-;</i>	030-222
	030.6.12.3	Formatting the display and reinstalling the software (Display4) <i>L576-1169/23813-;</i>	030-223
030.6.13	Options		030-225
	030.6.13.1	Checking the LiDAT connection status <i>L576-1169/23813-;</i>	030-225
	030.6.13.2	LiDAT: activating data transmission manually <i>L576-1169;</i>	030-227
040	Drive group		040-1
040.1	Engine		040-3
	040.1.1	Diesel engine overview <i>L576-1169/23813-;</i>	040-3
	040.1.2	Electrical components on the engine <i>L576-1169/23813-;</i>	040-7
	040.1.3	Speed sensor for crankshaft <i>L576-1169/23813-;</i>	040-8
	040.1.4	Camshaft speed sensor <i>L576-1169/23813-;</i>	040-9
	040.1.5	Fuel system	040-10
	040.1.5.1	Overview of the fuel system <i>L576-1169/23813-;</i>	040-11
	040.1.5.2	Fuel level sensor <i>L576-1169/23813-;</i>	040-12
	040.1.6	Air filter system	040-12
	040.1.6.1	Air filter <i>L576-1169/23813-;</i>	040-13
	040.1.6.2	Vacuum switch <i>L576-1169/23813-;</i>	040-14
	040.1.7	Exhaust system	040-14
	040.1.7.1	Overview of the diesel particulate filter <i>L576-1169/23813-;</i>	040-15
	040.1.7.2	Diesel oxidation catalyst (DOC) <i>L576-1169/23813-;</i>	040-20
	040.1.7.3	Diesel particulate filter module <i>L576-1169/23813-;</i>	040-21
	040.1.7.4	Removing the diesel particulate filter <i>L576-1169;</i>	040-21
	040.1.7.5	Installing the diesel particulate filter <i>L576-1169;</i>	040-25

040.2	Clutch <i>L576-1169/23813-;</i>	040-29
-------	------------------------------------	--------

040.3	Splitter box <i>L576-1169/23813-;</i>	040-31
-------	--	--------

050 Cooling system 050-1

050.1	Overview of the cooling system <i>L576-1169/23813-;</i>	050-2
-------	--	-------

050.2	Cooling system hydraulics	050-3
-------	---------------------------	-------

050.2.1	Overview of the hydraulics cooling system <i>L576-1169/23813-;</i>	050-3
---------	---	-------

050.2.2	Fan gear pump <i>L576-1169/23813-;</i>	050-5
---------	---	-------

050.2.3	Fan gear motor <i>L576-1169/23813-;</i>	050-7
---------	--	-------

050.3	Cooling system electronics	050-11
-------	----------------------------	--------

050.3.1	Electric fan speed control <i>L576-1169/23813-;</i>	050-11
---------	--	--------

050.3.2	Hydraulic oil temperature sensor <i>L576-1169/23813-;</i>	050-13
---------	--	--------

060 Working hydraulics 060-1

060.1	Working hydraulics - Overview <i>L576-1169/23813-34156;</i>	060-3
-------	--	-------

060.2	Overview of the working hydraulics <i>L576-1169/34157-;</i>	060-10
-------	--	--------

060.3	Working hydraulics pump <i>L576-1169/23813-;</i>	060-15
-------	---	--------

060.4	Control valve block <i>L576-1169/23813-;</i>	060-23
-------	---	--------

060.5	Pilot control	060-29
-------	---------------	--------

060.5.1	Overview of the pilot control unit <i>L576-1169/23813-;</i>	060-29
---------	--	--------

060.5.2	Pilot control unit <i>L576-1169/23813-;</i>	060-33
---------	--	--------

060.5.3	Pilot control solenoid valve <i>L576-1169/23813-;</i>	060-38
---------	--	--------

060.5.4	Pilot control hydro accumulator <i>L576-1169/23813-;</i>	060-39
---------	---	--------

060.5.5	Float position pressure switch <i>L576-1169/23813-;</i>	060-40
---------	--	--------

060.6	Ride control	060-42
-------	--------------	--------

060.6.1	Ride control overview <i>L576-1169/23813-34156;</i>	060-42
060.6.2	Overview of the ride control system <i>L576-1169/34157-;</i>	060-48
060.6.3	Stabilisation module <i>L576-1169/23813-;</i>	060-51
060.6.4	Hydro accumulator unit <i>L576-1169/23813-;</i>	060-55
060.7	Hydraulic cylinders of the working hydraulics	060-57
060.7.1	Hydraulic cylinders for Z kinematics	060-57
060.7.1.1	Z kinematics lift cylinder <i>L576-1169/23813-;</i>	060-57
060.7.1.2	Z kinematics tilt cylinder <i>L576-1169/23813-;</i>	060-58
060.7.2	Hydraulic cylinders for industrial lift arms	060-59
060.7.2.1	Lift cylinder for industrial lift arms <i>L576-1169/23813-;</i>	060-59
060.7.2.2	Industrial lift arms tilt cylinder <i>L576-1169/23813-;</i>	060-60
070	Travel hydraulics	070-1
070.1	Travel hydraulics overview <i>L576-1169/23813-35016;</i>	070-2
070.2	Travel hydraulics overview <i>L576-1169/35017-37527;</i>	070-12
070.3	Travel hydraulics overview <i>L576-1169/37528-;</i>	070-16
070.4	Variable displacement pump <i>L576-1169/23813-37527;</i>	070-20
070.5	Travel pump <i>L576-1169/37528-;</i>	070-31
070.6	Travel motors	070-37
070.6.1	Overview of the variable displacement motors <i>L576-1169/23813-;</i>	070-37
070.6.2	Variable displacement motor <i>L576-1169/23813-;</i>	070-40
070.6.3	Discharge cut-off solenoid valve <i>L576-1169/23813-;</i>	070-45
070.6.4	Supply hydro accumulator <i>L576-1169/23813-;</i>	070-47
080	Hydraulic components	080-1
080.1	Hydraulic tank	080-2

080.1.1	Overview of the hydraulic tank <i>L576-1169/23813-;</i>	080-2
080.1.2	Filter unit <i>L576-1169/23813-;</i>	080-5
080.1.3	Breather filter <i>L576-1169/23813-;</i>	080-10
090	Steering system	090-1
090.1	Steering system overview <i>L576-1169/23813-34445;</i>	090-2
090.2	Steering system overview <i>L576-1169/34446-;</i>	090-9
090.3	Steering pump <i>L576-1169/23813-;</i>	090-13
090.4	Servostat <i>L576-1169/23813-;</i>	090-20
090.5	Steering cylinder	090-25
090.5.1	Steering cylinder overview <i>L576-1169/26443-;</i>	090-25
090.5.2	Steering cylinder pressure relief valve <i>L576-1169/34446-;</i>	090-27
090.5.3	Steering damper hydro accumulator <i>L576-1169/23813-;</i>	090-28
090.6	Emergency steering	090-30
090.6.1	Emergency steering overview <i>L576-1169/23813-;</i>	090-30
090.6.2	Emergency steering pump <i>L576-1169/23813-;</i>	090-34
090.6.3	Emergency steering electronics	090-36
090.6.3.1	Overview of the electronic control system <i>L576-1169/23813-;</i>	090-36
090.6.3.2	Emergency steering pressure switch <i>L576-1169/23813-;</i>	090-38
090.6.3.3	Emergency steering check pressure switch <i>L576-1169/23813-;</i>	090-39
090.6.4	Valve block <i>L576-1169/26443-;</i>	090-40
090.7	Joystick steering	090-43
090.7.1	Joystick steering - overview <i>L576-1169/34446-;</i>	090-43

100	Brake system	100-1
100.1	Overview of the brake system <i>L576-1169/23813-;</i>	100-2
100.2	Service brake and parking brake	100-9
100.2.1	Compact brake valve <i>L576-1169/23813-;</i>	100-9
100.3	Service brake	100-13
100.3.1	Service brake hydro accumulator <i>L576-1169/23813-;</i>	100-13
100.3.2	Brake light pressure switch <i>L576-1169/23813-;</i>	100-14
100.3.3	Accumulator charge pressure switch <i>L576-1169/23813-;</i>	100-15
100.4	Parking brake	100-16
100.4.1	Parking brake <i>L576-1169/23813-;</i>	100-16
100.4.2	Disc brake <i>L576-1169/23813-;</i>	100-18
100.4.3	Parking brake hydro accumulator <i>L576-1169/23813-;</i>	100-21
100.5	Overspeed protection	100-22
100.5.1	Overview of the overspeed protection system <i>L576-1169/23813-;</i>	100-22
100.5.2	Overspeed protection solenoid valve <i>L576-1169/23813-;</i>	100-26
110	Electrical system	110-1
110.1	Overview of the electrical system <i>L576-1169/23813-;</i>	110-2
110.2	Lighting <i>L576-1169/23813-;</i>	110-7
110.3	Circuit diagrams <i>L576-1169/23813-;</i>	110-9
110.4	Electronic control unit	110-11
110.4.1	Central control unit (Master4) <i>L576-1169/23813-;</i>	110-11
110.4.2	Modules	110-15
110.4.2.1	Input modules <i>L576-1169/23813-;</i>	110-15
110.4.2.2	Output modules <i>L576-1169/23813-;</i>	110-18
110.5	Electrical components of the driver's cab	110-23

110.5.1	Overview of electrical components in the cab <i>L576-1169/23813-;</i>	110-23
110.5.2	Fuse and relay board <i>L576-1169/23813-;</i>	110-24
110.6	Electrical components in the rear section	110-30
110.6.1	Battery installation <i>L576-1169/23813-;</i>	110-30
110.7	Rear area monitoring with camera	110-32
110.7.1	Overview of rear area monitoring with camera <i>L576-1169/23813-;</i>	110-32
110.7.2	Camera <i>L576-1169/23813-;</i>	110-33
120	Gearbox	120-1
120.1	Overview of the transmission <i>L576-1169/23813-;</i>	120-2
120.2	Mechanical transmission <i>L576-1169/23813-;</i>	120-4
120.3	Transmission hydraulics	120-10
120.3.1	Overview of the hydraulic control system <i>L576-1169/23813-;</i>	120-10
120.3.2	Transmission gear pump <i>L576-1169/23813-;</i>	120-14
120.3.3	Control valve block <i>L576-1169/23813-;</i>	120-16
120.3.4	Transmission hydro accumulator <i>L576-1169/23813-;</i>	120-17
120.4	Transmission electronics	120-18
120.4.1	Overview of the electronic control system <i>L576-1169/23813-;</i>	120-18
120.4.2	Gear shifting solenoid valves <i>L576-1169/23813-;</i>	120-20
120.4.3	Speed sensors <i>L576-1169/23813-;</i>	120-21
120.4.4	Gear oil temperature switch <i>L576-1169/23813-;</i>	120-22
130	Axles and drive shafts	130-1
130.1	Axles	130-2
130.1.1	Axles <i>L576-1169/23813-;</i>	130-2
130.2	Cardan shafts	130-8

130.2.1	Front cardan shaft <i>L576-1169/23813-;</i>	130-8
130.2.2	Rear cardan shaft <i>L576-1169/23813-;</i>	130-9
140	Steel parts of the basic machine	140-1
140.1	Vehicle frame	140-2
140.1.1	Articulation bearing <i>L576-1169/23813-;</i>	140-2
140.1.2	Oscillating bearing and oscillating axle frame <i>L576-1169/23813-;</i>	140-4
140.1.3	Articulation lock <i>L576-1169/23813-;</i>	140-5
140.2	Ballast weight <i>L576-1169/23813-;</i>	140-7
140.3	Covering	140-8
140.3.1	Covering overview <i>L576-1169/23813-;</i>	140-8
140.4	Cab access <i>L576-1169/23813-;</i>	140-11
150	Working attachment	150-1
150.1	Lift arms for Z kinematics	150-2
150.1.1	Overview of z-bar lift arm kinematics <i>L576-1169/23813-;</i>	150-2
150.1.2	Pin bearing	150-3
150.1.2.1	Standard bearing <i>L576-1169/23813-;</i>	150-3
150.1.2.2	Bucket bearing <i>L576-1169/23813-;</i>	150-5
150.1.2.3	Removing the bucket bearing <i>L576-1169/23813-;</i>	150-6
150.1.2.4	Installing the bucket bearing <i>L576-1169/23813-;</i>	150-9
150.2	Quick coupler	150-12
150.2.1	Quick-change device (optional) <i>L576-1169/23813-;</i>	150-12
150.3	Bucket <i>L576-1169/23813-;</i>	150-14
150.4	Forklift <i>L576-1169/23813-;</i>	150-15

160	Operator's cab, heating and air conditioning	160-1
160.1	Overview of the cab, heating and air conditioning unit <i>L576-1169/23813-;</i>	160-3
160.2	Display and control elements	160-6
160.2.1	Electrical components in the control panel	160-6
160.2.1.1	Overview of electrical components in the control panel <i>L576-1169/23813-;</i>	160-6
160.2.1.2	Control unit for main functions <i>L576-1169/23813-;</i>	160-6
160.2.1.3	Electric control unit <i>L576-1169/23813-;</i>	160-8
160.2.1.4	Starter switch <i>L576-1169/23813-;</i>	160-12
160.2.2	Touch screen display <i>L576-1169/23813-;</i>	160-13
160.2.3	Control lever <i>L576-1169/23813-;</i>	160-15
160.3	Heating, ventilation, air conditioning	160-18
160.3.1	Heating and air conditioning unit	160-18
160.3.1.1	Heating and air conditioning unit <i>L576-1169/23813-;</i>	160-18
160.3.1.2	Blower <i>L576-1169/23813-;</i>	160-20
160.3.2	Heating/air conditioning electronics <i>L576-1169/23813-;</i>	160-21
160.4	Air conditioning	160-23
160.4.1	Air conditioning compressor <i>L576-1169/23813-;</i>	160-23
160.4.2	Condenser <i>L576-1169/23813-;</i>	160-24
160.4.3	Dryer <i>L576-1169/23813-;</i>	160-26
160.4.4	Air conditioning pressure switch <i>L576-1169/23813-;</i>	160-27
160.4.5	Evaporator <i>L576-1169/23813-;</i>	160-28
160.4.6	Anti-icing temperature sensor <i>L576-1169/23813-;</i>	160-29
160.4.7	Automatic air conditioning	160-29
160.4.7.1	Overview of the automatic air conditioning <i>L576-1169/23813-;</i>	160-29

160.4.7.2	Interior temperature sensor and air flow temperature sensor <i>L576-1169/23813-;</i>	160-31
160.4.7.3	Outside temperature sensor <i>L576-1169/23813-;</i>	160-31
160.4.7.4	Sun sensor <i>L576-1169/23813-;</i>	160-32
170	Lubrication system	170-1
170.1	Liebherr automatic central lubrication system	170-2
170.1.1	Overview of Liebherr automatic central lubrication system <i>L576-1169/23813-;</i>	170-2
170.1.2	Liebherr central lubrication pump <i>L576-1169/23813-;</i>	170-6
170.1.3	Progressive distributor MX-F <i>L576-1169/23813-;</i>	170-10
190	Options	190-1
190.1	Diesel engine without emission type approval <i>L576-1169;</i>	190-2
190.2	LiDAT	190-3
190.2.1	Overview of LiDAT <i>L576-1169/23813-;</i>	190-3
190.2.2	LiDAT on the machine <i>L576-1169/23813-;</i>	190-5
190.3	Refuelling system <i>L576-1169/23813-;</i>	190-9
190.4	Weighing device (Liebherr) <i>L576-1169/23813-;</i>	190-12
200	Diagnosis	200-1
200.1	Malfunctions	200-2
200.1.1	Service codes in the display unit	200-2
200.1.1.2	Display of service codes	200-2
200.1.1.3	Effects of a fault	200-2
200.1.1.4	Correcting an error	200-3
200.2	Troubleshooting	200-4
200.2.1	Replacing fuses	200-4
200.2.1.1	Fuses in the engine compartment	200-4
200.2.1.2	Plug-in fuses on the relay and fuse board	200-5

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com