


Operator's Manual

CLAAS

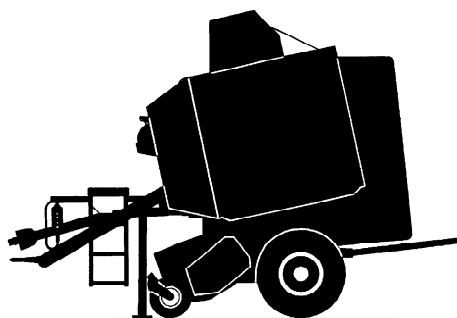

CLAAS
VARIANT 180 RC

Contents

Introduction

1. Specifications

2. Prior to operation

3. Basic adjustments and operation

4. Maintenance

Important	5
Safety rules	6
Identification plate	9
Baler serial number	9

Safety decals with pictorials	11
--	-----------

1. Specifications

CLAAS VARIANT 180 RC	1. 1
Basic components of machine	1. 4
Description and function	1. 6
Transmission of power	1. 6
Pick-up	1. 6
Cutting unit	1. 6
Bale chamber	1. 6
Wrapping	1. 6
Bale transport	1. 6
Storage of round bales	1. 6

2. Prior to operation

Before using the machine, check and observe the following	2. 1
Baler hook-up	2. 2
Connecting the universal drive shaft to the baler	2. 2
Hook-up to the swinging drawbar	2. 3
Greasing the hitch eye	2. 4
Connecting the universal drive shaft to the tractor	2. 4
Hook-up to top-fitted tow jaw	2. 4
Attaching the universal drive shaft to the tractor	2. 6
Electrics	2. 6
Hydraulic system	2. 7
Jack stand	2. 7
Unhitching the baler	2. 8
Disconnecting the universal drive shaft	2. 8
Transport and working position of pick-up	2. 9
Ladder	2. 9
Wheel chocks	2. 9
Safety lock-up valve for tailgate	2.10
Bale discharge ramp	2.10
Fire extinguisher	2.10
Before transporting the baler	2.11

3. Basic adjustments and operation

Pick-up	3. 2
Adjusting the working height of the pick-up (pick-up without gauge wheels)	3. 2
Adjusting the working height of the pick-up (pick-up with gauge wheels)	3. 2
Work in hay	3. 2
Work in straw	3. 2
Pick-up crop guard	3. 2
Baling	3. 3
Compression delay device	3. 3
Crop feed indicator (option)	3. 5
Main drive	3. 6
Cam-type cut-out clutch – universal drive shaft	3. 6
Shear bolt – pick-up drive	3. 6
Backwinder	3. 7
Bale discharge	3. 7
Bale counter	3. 8
Setting the bale density	3. 9

Setting the bale diameter	3. 9
Cutting unit	3.10
Removing knives	3.11
Blank knives	3.12
Rotor cut-out clutch	3.12
Net wrapping	3.12
Adjusting the net brake	3.12
Adjusting pressure springs for net feed pressure roller	3.13
Spare net roll	3.15
Operating the net wrapping system	3.15
Twin twine wrapping	3.17
Twine box	3.17
Threading the twine	3.18
Adjusting twine tensioner (7)	3.20
Varying the wraps of twine on the outside edges of the bale	3.20
Adjusting the number of twine wrappings	3.21
Operating the twin twine wrapping system	3.22
Delaying start of twine wrapping	3.23
Starting twine wrapping prematurely	3.23
Operating the net wrapping system	3.24
Operating the twin twine wrapping system	3.26
Problem / Cause and Remedy	3.29

4. Maintenance

Important maintenance instructions	4. 1
Drive system	4. 3
Angle drive gearbox – input speed 540 rpm	4. 3
Angle drive gearbox – input speed 1000 rpm ...	4. 3
Adjusting the tension of the drive chains	4. 4
Tensioning spring for pick-up drive	4. 4
Tensioning the drive chain for the pick-up stub auger	4. 4
Adjusting pressure springs for net feed pressure roller	4. 4
Adjusting the tensioning device for the knife that cuts the net	4. 5
Adjusting the disc brake	4. 5
Tensioning the springs for the chain drive (belts and rotor)	4. 5
Tensioning the spring for the tailgate chain drive	4. 6
Adjusting the counter-balance spring for the pick-up	4. 6
Adjusting the tension spring for net roll brake ...	4. 6
Adjusting spring cylinder for free-wheel drive ...	4. 6
Drive brake – twine wrapping	4. 7
Adjusting pressure springs at cut-out clutch	4. 7
Slackening the flat belts	4. 8
Installing flat belts	4. 9
Repairing flat belts	4.10
Adjusting belt run	4.12
Automatic chain lubrication	4.13
Type of lubricant	4.13
Fire extinguisher	4.13
Checking the fire extinguisher for proper working order	4.13

5. Lubrication chart

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com