8160, 8260, 8360, 8560 TRACTOR REPAIR MANUAL CONTENTS

SECTION 1 – ENGINES

SECTION 2 – ELECTRICAL SYSTEM

SECTION 3 – CLUTCH

SECTION 4 – TRANSMISSIONS

SECTION 5 – MECHANICAL REAR WHEEL DRIVE

SECTION 6 – BRAKES

SECTION 7 – POWER TAKE-OFF

SECTION 8 – HYDRAULIC SYSTEM

SECTION 9 – DRIVE LINES – FWD

SECTION 10 – CAB

SECTION 0 INTRODUCTION

CHAPTER 1 INTRODUCTION

CONTENTS

| FOREWORD | 0-1-2 |
|------------------------------------|----------------|
| PRECAUTIONARY STATEMENTS | 0-1-3 |
| PERSONAL SAFETY | 0-1-3 |
| MACHINE SAFETY | 0-1-3 |
| SAFETY PRECAUTIONS | |
| HEALTH AND SAFETY PRECAUTIONS | |
| PRODUCT IDENTIFICATION | |
| SERVICE TECHNIQUES | |
| SEALER SPECIFICATIONS | 0-1-1 9 |
| HARDWARE TORQUE VALUES | |
| MINIMUM HARDWARE TIGHTENING TORQUE | |
| MINIMUM HARDWARE TIGHTENING TORQUE | 0-1-2 1 |
| INDEX | |

FOREWORD

Appropriate service methods and correct repair procedures are essential for the safe, reliable operation of all equipment, as well as the personal safety of the individual performing the repair.

This Service Manual provides troubleshooting, overhaul, and pressure-testing instructions using recommended procedures and equipment. Following these instructions will ensure the safe, efficient, and timely completion of the service or repair.

There are numerous variations in procedures, techniques, tools, and parts for servicing machines, as well as in the skill of the individual doing the work. This manual cannot possibly anticipate all such variations and provide advice or cautions as to each. Accordingly, anyone who departs from the instructions provided in this manual must first establish that their personal safety, the safety of others, and the integrity of the machine will not be compromised by the choice of methods, tools or parts.

The manual is divided into sections which are subdivided into chapters. Each chapter contains information on general operating principles, detailed inspection, overhaul and, where applicable, specific troubleshooting, special tools, and specifications.

Any reference in this manual to right, left, rear, front, top, or bottom is as viewed from the operator's seat, looking forward.

All data and illustrations in this manual are subject to variations in build specification. This information was correct at the time of issue, but New Holland policy is one of continuous improvement, and the right to change specifications, equipment, or design at any time, without notice, is reserved.

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com