

SERVICE MANUAL

T9.390 / T9.450 / T9.505 /

T9.560 / T9.615 / T9.670

Tier 4

Tractor

Part number 47488217

English

February 2013

Replaces part number 84354096





SERVICE MANUAL

T9.390 [ZBF200001 -], T9.390 [ZCF200001 -], T9.390 [ZDF200001 -], T9.450 [ZBF200001 -], T9.450 [ZCF200001 -], T9.450 [ZDF200001 -], T9.505 [ZBF200001 -], T9.505 [ZCF200001 -], T9.505 [ZDF200001 -], T9.560 [ZBF200001 -], T9.560 [ZCF200001 -], T9.560 [ZDF200001 -], T9.615 [ZBF200001 -], T9.615 [ZCF200001 -], T9.615 [ZDF200001 -], T9.670 [ZBF200001 -], T9.670 [ZCF200001 -], T9.670 [ZDF200001 -]

Link Product / Engine

Product	Market Product	Engine
null [ZBF200001 -]	North America	F2CFE613A*A
null [ZCF200001 -]	North America	F2CFE613A*A
null [ZDF200001 -]	North America	F2CFE613A*A
null [ZBF200001 -]	North America	F3BFE613A*A001
null [ZCF200001 -]	North America	F3BFE613A*A001
null [ZDF200001 -]	North America	F3BFE613A*A001
null [ZBF200001 -]	North America	F3BFE613A*A001
null [ZCF200001 -]	North America	F3BFE613A*A001
null [ZDF200001 -]	North America	F3BFE613A*A001
null [ZBF200001 -]	North America	F3BFE613A*A001
null [ZCF200001 -]	North America	F3BFE613A*A001
null [ZDF200001 -]	North America	F3BFE613A*A001
null [ZBF200001 -]	North America	F3DFE613A*A001
null [ZCF200001 -]	North America	F3DFE613A*A001
null [ZDF200001 -]	North America	F3DFE613A*A001
null [ZBF200001 -]	North America	F3DFE613A*A001
null [ZCF200001 -]	North America	F3DFE613A*A001
null [ZDF200001 -]	North America	F3DFE613A*A001

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.400] Engine cooling system	10.3
[10.414] Fan and drive	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
Transmission	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.220] Gearbox.....	31.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1

[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.105] Charge pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.204] Remote control valves	35.5
[35.220] Auxiliary hydraulic pump and lines	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units	35.8
[35.600] High flow hydraulics.....	35.9
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
Frames and ballasting	39
[39.100] Frame	39.1
[39.110] Drawbar and hitch assembly	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump.....	41.3
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Tracks and track suspension	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4

Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system	50.3
Electrical systems	55
[55.010] Fuel injection system.....	55.1
[55.014] Engine intake and exhaust system.....	55.2
[55.024] Transmission control system	55.3
[55.035] Remote control valve electric control	55.4
[55.045] Front axle control system	55.5
[55.046] Rear axle control system.....	55.6
[55.048] Rear Power Take-Off (PTO) control system	55.7
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.8
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.9
[55.100] Harnesses and connectors.....	55.10
[55.130] Rear three-point hitch electronic control system	55.11
[55.301] Alternator.....	55.12
[55.302] Battery.....	55.13
[55.404] External lighting	55.14
[55.522] Cab Power Take-Off (PTO) controls	55.15
[55.640] Electronic modules	55.16
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.17
[55.DTC] FAULT CODES.....	55.18
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com