

DV207
DV207HF
Vibratory Roller

SERVICE MANUAL

Part number 47508259

1st edition English

February 2013



QUICK REFERENCE – CHAPTER GUIDE

SECTION 00 – MAINTENANCE

GENERAL INSTRUCTIONS

1. Introduction
2. Safety precautions
3. Repair safety precautions
4. Product identification
5. Check the tightening of bolted joints

SECTION 00 – MAINTENANCE

GENERAL SPECIFICATIONS

6. Description of the machine
7. Tooling

SECTION 10 – ENGINE

8. Removing the engine
9. Removing the cooler

SECTION 35 – HYDRAULIC SYSTEM

10. Hydraulic system
11. Hydraulics

SECTION 39 – FRAMES

12. Articulated joint
13. Removing the hood

SECTION 41 - STEERING

14. Steering cylinder

SECTION 44 – AXLES AND WHEELS

15. Removing the drum

SECTION 50 – CAB CLIMATE CONTROL

16. Removing the heater/cooling air fans

SECTION 55 - ELECTRICAL SYSTEM

17. Electrical installation
18. Electrical system

SECTION 90 – CAB

19. Cab

INDEX

Contents

SECTION 00 – MAINTENANCE

GENERAL INSTRUCTIONS

1.	Introduction	1-1
2.	Safety precautions	2-1
2.1.	Safety section	2-2
2.1.1.	Precautionary statements – personal safety signal words.....	2-2
2.1.2.	Machine safety and information signal words.....	2-2
2.1.3.	General safety rules.....	2-3
2.1.4.	General operating safety	2-4
2.2.	Safety sign location overview	2-5
2.2.1.	Safety signs	2-6
2.3.	General maintenance safety	2-10
2.3.1.	Fire and explosion prevention.....	2-10
2.3.2.	Hazardous chemicals	2-11
2.3.3.	Battery safety	2-11
2.3.4.	Air conditioning system	2-12
2.3.5.	Transportation safety	2-12
2.3.6.	Proper entry and exit	2-12
2.3.7.	Operator presence system	2-12
2.3.8.	Operator protective structure	2-13
2.3.9.	Utility safety	2-13
2.4.	Hand signals	2-14
3.	Repair safety precautions	3-1
3.1.	Safety regulations	3-2
3.2.	Ecological measures & hygiene principles	3-6
3.3.	Fire measures	3-7
4.	Product identification	4-1
4.1.	Summary of applications	4-2
5.	Check the tightening of bolted joints.....	5-1
5.1.	Check the tightening of bolted joints.....	5-2

SECTION 00 – MAINTENANCE

GENERAL SPECIFICATIONS

6.	Description of the machine	6-1
6.1.	Machine construction.....	6-2
6.2.	Fluid/lubricant specifications.....	6-3
6.2.1.	Engine oil	6-3
6.2.2.	Fuel.....	6-4
6.2.3.	Coolant	6-5
6.2.4.	Hydraulic oil	6-5
6.2.5.	Lube grease	6-5
6.2.6.	Washer fluid	6-5
6.2.7.	Gear oil	6-5
6.2.8.	Drum cooling liquid DV207HF	6-6
6.3.	Technical data DV207 / DV207HF	6-7
6.4.	Dimensional diagram DV207 / DV207HF	6-9

TABLE OF CONTENTS

7. Tooling	7-1
7.1. Tooling and equipment.....	7-2

SECTION 10 – ENGINE

8. Removing the engine	8-1
9. Removing the cooler	9-1

SECTION 35 – HYDRAULIC SYSTEM

10. Hydraulic system	10-1
10.1. Hydraulic diagram	10-3
11. Hydraulics	11-1
11.1. Removing the cooling hydromotor	11-4
11.2. Removing the gear pump for steering	11-8
11.3. Removing the tandem pumps for vibration and travel	11-14
11.3.1. Vibration pump	11-14
11.3.2. Travel pump	11-16
11.4. Adjusting vibration frequency	11-18
11.5. Adjusting pulse sensors	11-19
11.6. Measuring hydraulic circuit safety pressures	11-20

SECTION 39 – FRAMES

12. Articulated joint	12-1
12.1. Preparation work	12-4
12.2. Removing the steering joint	12-10
12.3. Removing the slewing ring bearing	12-15
12.4. Removing the steering joint bearing	12-16
12.5. Installing the steering joint bearing	12-19
12.6. Adjusting the zero position of the steering joint	12-22
13. Removing the hood	13-1

SECTION 41 - STEERING

14. Steering cylinder	14-1
14.1. Removing hydraulic cylinders for steering and CRAB	14-4
14.2. Replacing packing material for steering or Crab hydraulic cylinders	14-5

SECTION 44 – AXLES AND WHEELS

15. Removing the drum	15-1
15.1. Removing the vibration hydromotor	15-12
15.2. Removing the travel hydromotor	15-14
15.3. Removing the auxiliary transmission	15-16
15.4. Removing the front drum	15-18
15.5. Replacing the rubber mounting of the drum	15-30

SECTION 50 – CAB CLIMATE CONTROL

16. Removing the heater/cooling air fans	16-1
16.1. Removing the heater	16-4
16.2. Removing cooling air fans	16-8

SECTION 55 - ELECTRICAL SYSTEM

17. Electrical installation	17-1
17.1. Fuses	17-2
17.2. Storage battery	17-4
17.3. Alternator	17-5
17.4. Starter Motor.....	17-7
17.5. Layout of wiring elements in the machine.....	17-10
18. Electrical system.....	18-1
18.1. Wiring diagram DV207 / DV207HF.....	18-3

SECTION 90 – CAB

19. Cab	19-1
19.1. Idle and parking brake position sensor	19-4
19.2. Left-hand control panel, reversing horn sensor	19-4
19.3. Seat platform	19-8
19.4. Power steering servo	19-12
19.5. Seat switch	19-16

INDEX

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com