

FARMALL 80 FARMALL 95 POWER SHUTTLE - Tractor

SERVICE MANUAL

Part number 47650956

English

February 2017

© 2017 CNH industrial Latin America LTDA. All Rights Reserved.





SERVICE MANUAL

Farmall® 80 Power shuttle 12x12, without cab [HCCZFA95AECY28614 -]

Farmall® 80 Power shuttle 12x12, with cab [HCCZFA95AECY28614 -]

Farmall® 95 Power shuttle 12x12, without cab [HCCZFA80VDCL03233 -]

Farmall® 95 Power shuttle 12x12, with cab [HCCZFA80VDCL03233 -]

Link Product / Engine

Product	Market Product	Engine
Farmall® 80 Power shuttle 12x12, sem cabine [HC- CZFA95AECY28614 -]	Latin America	8045.05R.939T
Farmall® 80 Power shuttle 12x12, com cabine [HC- CZFA95AECY28614 -]	Latin America	8045.05R.939T
Farmall® 95 Power shuttle 12x12, sem cabine [HC- CZFA80VDCL03233 -]	Latin America	8045.25L.939T
Farmall® 95 Power shuttle 12x12, com cabine [HC- CZFA80VDCL03233 -]	Latin America	8045.25L.939T

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.106] Valve drive and gears	10.2
[10.101] Cylinder heads	10.3
[10.105] Connecting rods and pistons.....	10.4
[10.103] Crankshaft and flywheel.....	10.5
[10.216] Fuel tanks	10.6
[10.218] Fuel injection system.....	10.7
[10.254] Intake and exhaust manifolds and muffler	10.8
[10.400] Engine cooling system	10.9
Clutch	18
[18.110] Clutch and components	18.1
[18.112] Slip clutch or flywheel damper	18.2
Transmission.....	21
[21.112] Power shuttle transmission.....	21.1
[21.134] Power shuttle transmission external controls	21.2
[21.104] Power shuttle transmission lubrication system.....	21.3
[21.154] Power shuttle transmission internal components	21.4
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2

[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.116] Three-speed rear Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.104] Fixed displacement pump	35.2
[35.204] Remote control valves	35.3
[35.114] Three-point hitch control valve	35.4
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering	41
[41.200] Hydraulic control components	41.1
[41.206] Pump	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels	44.1
[44.520] Rear wheels	44.2

Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.100] Harnesses and connectors	55.1
[55.201] Engine starting system	55.2
[55.301] Alternator	55.3
[55.302] Battery	55.4
[55.011] Fuel tank system	55.5
[55.014] Engine intake and exhaust system	55.6
[55.012] Engine cooling system	55.7
[55.013] Engine oil system	55.8
[55.640] Electronic modules	55.9
[55.513] Cab transmission controls	55.10
[55.030] Service brake electrical system	55.11
[55.031] Parking brake electrical system	55.12
[55.408] Warning indicators, alarms, and instruments	55.13
[55.DTC] FAULT CODES	55.14
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.110] Operator platform less cab	90.2
[90.114] Operator protections	90.3
[90.124] Pneumatically-adjusted operator seat	90.4
[90.100] Engine hood and panels	90.5
[90.102] Engine shields, hood latches, and trims	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com