

SERVICE MANUAL

CR9090

EU built combine for NA - Series [1940 -] /

CX8080 Elevation / CX8090 Elevation

Tier 4A

Combine

Part number 47695751

1st edition English
March 2014



Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.254] Intake and exhaust manifolds and muffler	10.2
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.3
[10.400] Engine cooling system	10.4
[10.418] Rotary screen	10.5
[10.450] Engine air compressor	10.6
Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.182] Differential.....	21.4
Front axle system	25
[25.108] Final drive hub, steering knuckles, and shafts	25.1
[25.310] Final drives	25.2
Rear axle system.....	27
[27.124] Final drive hub, steering knuckles, and shafts	27.1
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.204] Reservoir, cooler, and lines	29.2
[29.218] Pump and motor components.....	29.3
[29.202] Hydrostatic transmission	29.4
[29.300] Rear hydrostatic transmission.....	29.5

Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves.....	35.4
[35.359] Main control valve	35.5
[35.322] Regulated/Low pressure system.....	35.6
[35.220] Auxiliary hydraulic pump and lines	35.7
[35.410] Header or attachment height system	35.8
[35.602] Header or attachment leveling system.....	35.9
[35.760] Header reverser drive	35.10
[35.992] Stone trapping system	35.11
[35.994] Positive Straw Discharge (PSD)	35.12
[35.796] Chaff spreader control	35.13
[35.440] Grain tank unload system.....	35.14
[35.450] Traction variator system.....	35.15
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.432] Autoguidance steering	41.3
Tracks and track suspension.....	48
[48.130] Track frame and driving wheels.....	48.1
[48.134] Track tension units	48.2
[48.100] Tracks	48.3
Cab climate control	50

[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator	55.4
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.5
[55.640] Electronic modules	55.6
[55.029] Gearbox electric system	55.7
[55.019] Hydrostatic drive control system	55.8
[55.512] Cab controls	55.9
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.11
[55.662] Header height control	55.12
[55.628] Threshing electrical control	55.13
[55.427] Straw walker variator	55.14
[55.426] Harvest material flow control system	55.15
[55.624] Residue handling control	55.16
[55.785] Precision farming system	55.17
[55.911] Global Positioning System (GPS)	55.18
[55.680] Autopilot/Autoguidance	55.19
[55.518] Wiper and washer system	55.20
[55.404] External lighting	55.21
[55.405] External lighting switches and relays	55.22
[55.514] Cab lighting	55.23
[55.408] Warning indicators, alarms, and instruments	55.24

[55.DTC] FAULT CODES	55.25
Attachments/Headers	58
[58.900] Belt feeding	58.1
Product feeding	60
[60.105] Floating roll, feed chain, and drive	60.1
[60.110] Feeder housing.....	60.2
[60.150] Feeder drive system	60.3
[60.165] Feeder reverse system.....	60.4
[60.112] Stone trapping system	60.5
[60.260] Rotor	60.6
Threshing	66
[66.000] Threshing	66.1
[66.260] Threshing mechanism drive system	66.2
[66.331] Rotor	66.3
[66.330] Drum	66.4
[66.360] Drum/Rotor housing.....	66.5
[66.321] Drum/Rotor variator with electrical control	66.6
[66.105] Concave.....	66.7
[66.101] Concave conveyor plate	66.8
[66.110] Concave control system.....	66.9
Separation	72
[72.350] Beater	72.1
[72.220] Discharge beater	72.2
[72.420] Rotary separator	72.3
[72.440] Straw-flow beater	72.4
[72.110] Straw walker drive system	72.5
[72.101] Straw walkers and shafts	72.6
Residue handling	73

[73.300] Positive Straw Discharge (PSD)	73.1
[73.230] Straw chopper	73.2
[73.210] Straw chopper drive system	73.3
[73.220] Straw chopper frame	73.4
[73.335] Chaff spreader	73.5
[73.410] Opti-Spread™ system	73.6
Cleaning	74
[74.000] Cleaning	74.1
[74.101] Cleaning drive systems	74.2
[74.110] Grain pan	74.3
[74.114] Upper shaker shoe	74.4
[74.118] Lower shaker shoe	74.5
[74.125] Clean grain and return cross auger housing	74.6
[74.130] Fan housing	74.7
[74.136] Fan drive system	74.8
[74.140] Tailings return system	74.9
Crop storage / Unloading	80
[80.101] Clean grain elevator	80.1
[80.150] Grain tank	80.2
[80.175] Grain tank unload drive system	80.3
[80.180] Grain tank unload	80.4
Accessories	88
[88.100] Accessories	88.1
Platform, cab, bodywork, and decals	90
[90.154] Cab doors and hatches	90.1
[90.110] Operator platform less cab	90.2
[90.118] Protections and footboards	90.3
[90.124] Pneumatically-adjusted operator seat	90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com