

# SERVICE MANUAL

## Speedrower® I30 Self-Propelled Windrower

**Part number 47698328**

1<sup>st</sup> edition English  
April 2014



## Link Product / Engine

---

Product	Market Product	Engine
Speedrower® 130	North America	F4GE9484
Speedrower® 130	International Region	F4GE9484

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.218] Fuel injection system.....	10.3
[10.202] Air cleaners and lines .....	10.4
[10.254] Intake and exhaust manifolds and muffler .....	10.5
[10.400] Engine cooling system .....	10.6
Front axle system .....	25
[25.310] Final drives .....	25.1
Rear axle system.....	27
[27.550] Non-powered rear axle.....	27.1
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control .....	29.1
[29.218] Pump and motor components.....	29.2
[29.202] Hydrostatic transmission .....	29.3
Power Take-Off (PTO) .....	31
[31.226] Hydraulic pump drive.....	31.1
Brakes and controls .....	33
[33.110] Parking brake or parking lock .....	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.100] Main lift system.....	35.2
[35.102] Pump control valves.....	35.3
[35.104] Fixed displacement pump.....	35.4
[35.105] Charge pump.....	35.5

[35.300] Reservoir, cooler, and filters.....	35.6
[35.565] Cutter control circuit.....	35.7
[35.910] Head and header hydraulic drive .....	35.8
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.019] Hydrostatic drive control system .....	55.2
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.3
[55.100] Harnesses and connectors.....	55.4
[55.408] Warning indicators, alarms, and instruments .....	55.5
[55.512] Cab controls.....	55.6
[55.DTC] FAULT CODES.....	55.7
<b>Attachments/Headers.....</b>	<b>58</b>
[58.110] Attachment/Header cutting mechanism .....	58.1
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.124] Pneumatically-adjusted operator seat.....	90.1
[90.150] Cab.....	90.2
[90.151] Cab interior.....	90.3
[90.154] Cab doors and hatches .....	90.4

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)