

Farmall 95U Pro EP
Farmall 105U Pro EP
Farmall 115U Pro EP
Tractor

SERVICE MANUAL

Part number 47735452

English
July 2014





SERVICE MANUAL

**Farmall 105U Pro EP
Farmall 115U Pro EP
Farmall 95U Pro EP**

Link Product / Engine

Product	Market Product	Engine
Farmall 105U Pro EP	Europe	F5DFL413J*A003
Farmall 115U Pro EP	Europe	F5DFL413H*A006
Farmall 95U Pro EP	Europe	F5DFL413K*A003

Contents

INTRODUCTION

Engine.....	10
[10.216] Fuel tanks	10.1
[10.254] Intake and exhaust manifolds and muffler	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment	10.3
[10.414] Fan and drive	10.4
Clutch	18
[18.112] Slip clutch or flywheel damper	18.1
Transmission.....	21
[21.111] Semi-Powershift transmission	21.1
[21.133] Semi-Powershift transmission external controls	21.2
[21.103] Semi-Powershift transmission lubrication system.....	21.3
[21.152] Semi-Powershift transmission internal components	21.4
[21.902] Field-road group.....	21.5
[21.900] Hydraulic pump drive.....	21.6
[21.109] Transmission cooler and lines.....	21.7
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3

Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control	31.1
[31.119] Four-speed rear Power Take-Off (PTO)	31.2
[31.142] Front Power Take-Off (PTO) control	31.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control	33.3
[33.204] Front axle brake	33.4
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.300] Reservoir, cooler, and filters	35.2
[35.104] Fixed displacement pump	35.3
[35.106] Variable displacement pump	35.4
[35.204] Remote control valves	35.5
[35.114] Three-point hitch control valve	35.6
[35.160] Front hitch controls and lines	35.7
Steering	41
[41.200] Hydraulic control components	41.1
Wheels	44
[44.520] Rear wheels	44.1
Cab climate control	50
[50.200] Air conditioning	50.1
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.015] Engine control system	55.3

[55.301] Alternator	55.4
[55.302] Battery	55.5
[55.202] Cold start aid	55.6
[55.011] Fuel tank system	55.7
[55.014] Engine intake and exhaust system	55.8
[55.012] Engine cooling system	55.9
[55.013] Engine oil system	55.10
[55.640] Electronic modules	55.11
[55.024] Transmission control system	55.12
[55.020] Transmission speed sensors	55.13
[55.021] Transmission pressure sensors	55.14
[55.022] Transmission temperature sensors	55.15
[55.522] Cab Power Take-Off (PTO) controls	55.16
[55.048] Rear Power Take-Off (PTO) control system	55.17
[55.032] Trailer brake electrical system	55.18
[55.035] Remote control valve electric control	55.19
[55.036] Hydraulic system control	55.20
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.21
[55.130] Rear three-point hitch electronic control system	55.22
[55.160] Front hitch electronic control system	55.23
[55.408] Warning indicators, alarms, and instruments	55.24
[55.680] Autopilot/Autoguidance	55.25
[55.DTC] FAULT CODES	55.26
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com