

# SERVICE MANUAL

**Boomer™ 46D CVT**

**Boomer™ 54D CVT**

**Tier 4B (final)**

**Compact Tractor**

**Part number 47851943**

1<sup>st</sup> edition English

February 2016





# **SERVICE MANUAL**

**Boomer™ 46D CVT**  
**Boomer™ 54D CVT**

## Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Boomer™ 46D CVT Boomer 46D, CVT, TIER 4B (FINAL), ROPS	North America	R 753 IE4
Boomer™ 46D CVT Boomer 46D, CVT, TIER 4B (FINAL), Cab	North America	R 753 IE4
Boomer™ 54D CVT Boomer 54D, CVT, TIER 4B (FINAL), ROPS	North America	R 753 IE4
Boomer™ 54D CVT Boomer 54D, CVT, TIER 4B (FINAL), Cab	North America	R 753 IE4

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.110] Balancer and damper .....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.400] Engine cooling system .....	10.4
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.5
<b>Transmission</b> .....	<b>21</b>
[21.504] Continuously Variable Transmission (CVT) .....	21.1
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.101] Mechanical control .....	23.1
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.310] Final drives .....	25.3
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO) .....	31.2
[31.120] Central Power Take-Off (PTO) .....	31.3
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.120] Mechanical service brakes.....	33.2
<b>Hydraulic systems</b> .....	<b>35</b>

[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves .....	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
<b>Steering.....</b>	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.206] Pump .....	41.2
[41.216] Cylinders .....	41.3
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning .....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.024] Transmission control system.....	55.2
[55.100] Harnesses and connectors.....	55.3
[55.201] Engine starting system.....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.404] External lighting .....	55.7
[55.408] Warning indicators, alarms, and instruments .....	55.8
[55.518] Wiper and washer system.....	55.9
[55.640] Electronic modules .....	55.10
[55.DTC] FAULT CODES.....	55.11
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.100] Engine hood and panels .....	90.1
[90.116] Fenders and guards.....	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3

[90.150] Cab.....	90.4
[90.151] Cab interior.....	90.5
[90.154] Cab doors and hatches .....	90.6

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)