

4130 Combine

SERVICE MANUAL

Part number 47871380

English

February 2016

© 2016 CNH industrial Latin America LTDA. All Rights Reserved.





SERVICE MANUAL

AXIAL-FLOW® 4130 Machine Standard [JHFY4130TEJG05469 -]
AXIAL-FLOW® 4130 Machine Standard with Self Leveling
[JHFY4130TEJG05469 -]

Link Product / Engine

Product	Market Product	Engine
AXIAL-FLOW® 4130 Máquina padrão [JH FY4130TEJG05469 -]	Latin America	F4HFP613A*H001
AXIAL-FLOW® 4130 Máquina padrão com autonivelamento [JH FY4130TEJG05469 -]	Latin America	F4HFP613A*H001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.216] Fuel tanks	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.310] Aftercooler.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
[10.418] Rotary screen	10.8
Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.145] Gearbox internal components.....	21.2
[21.182] Differential.....	21.3
Front axle system	25
[25.310] Final drives	25.1
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.124] Final drive hub, steering knuckles, and shafts	27.2
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.134] Two-speed assembly.....	29.2
[29.202] Hydrostatic transmission	29.3
[29.204] Reservoir, cooler, and lines	29.4

[29.218] Pump and motor components.....	29.5
[29.300] Rear hydrostatic transmission.....	29.6
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.322] Regulated/Low pressure system	35.1
[35.359] Main control valve	35.2
[35.410] Header or attachment height system	35.3
[35.415] Header or attachment tilting system	35.4
[35.420] Reel vertical positioning system.....	35.5
[35.430] Reel fore-and-aft positioning system.....	35.6
[35.440] Grain tank unload system	35.7
[35.536] Crop processor system	35.8
[35.760] Header reverser drive	35.9
[35.796] Chaff spreader control	35.10
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.11
[35.102] Pump control valves.....	35.12
[35.106] Variable displacement pump	35.13
[35.220] Auxiliary hydraulic pump	35.14
[35.300] Reservoir, cooler, and filters.....	35.15
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump	41.4
Wheels	44

[44.511] Front wheels.....	44.1
Cab climate control	50
[50.300] Cab pressurizing system	50.1
[50.200] Air conditioning.....	50.2
[50.100] Heating	50.3
[50.104] Ventilation	50.4
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system.....	55.2
[55.012] Engine cooling system	55.3
[55.013] Engine oil system	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.015] Engine control system.....	55.6
[55.031] Parking brake electrical system	55.7
[55.036] Hydraulic system control	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.9
[55.100] Harnesses and connectors.....	55.10
[55.201] Engine starting system	55.11
[55.202] Cold start aid	55.12
[55.301] Alternator.....	55.13
[55.302] Battery.....	55.14
[55.405] External lighting switches and relays	55.15
[55.408] Warning indicators, alarms, and instruments	55.16
[55.421] Feeding control system	55.17
[55.423] Cleaning control system.....	55.18
[55.426] Harvest material flow control system.....	55.19
[55.512] Cab controls.....	55.20
[55.518] Wiper and washer system.....	55.21

[55.520] Cab harvesting controls	55.22
[55.610] Ground speed control	55.23
[55.628] Threshing electrical control	55.24
[55.640] Electronic modules	55.25
[55.DTC] FAULT CODES	55.26
Attachments/Headers	58
[58.105] Attachment/Header reel control system	58.1
Product feeding	60
[60.105] Floating roll, feed chain, and drive	60.1
[60.110] Feeder housing	60.2
[60.122] Length-of-cut gearbox	60.3
[60.150] Feeder drive system	60.4
Threshing	66
[66.105] Concave	66.1
[66.110] Concave control system	66.2
[66.260] Threshing mechanism drive system	66.3
[66.331] Rotor	66.4
Separation	72
[72.410] Rotary separator drive system	72.1
[72.420] Rotary separator	72.2
[72.430] Separator grates	72.3
Residue handling	73
[73.210] Straw chopper drive system	73.1
[73.230] Straw chopper	73.2
[73.335] Chaff spreader	73.3
Cleaning	74
[74.000] Cleaning	74.1
[74.101] Cleaning drive systems	74.2

[74.114] Upper shaker shoe	74.3
[74.118] Lower shaker shoe	74.4
[74.130] Fan housing	74.5
[74.140] Tailings return system	74.6
Crop storage / Unloading	80
[80.101] Clean grain elevator.....	80.1
[80.150] Grain tank	80.2
[80.175] Grain tank unload drive system	80.3
[80.180] Grain tank unload	80.4
Platform, cab, bodywork, and decals	90
[90.105] Machine shields and guards	90.1
[90.124] Pneumatically-adjusted operator seat.....	90.2
[90.150] Cab.....	90.3
[90.151] Cab interior.....	90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com