

# SERVICE MANUAL

**T4.90 / T4.100 / T4.110 / T4.120**

**Tier 4B (final)**

Tractor

**Part number 47878245**

1<sup>st</sup> edition English  
June 2015





## **SERVICE MANUAL**

**T4.100 with cab, with Dual Command™ transmission , T4.100 with cab, with mechanical or Power shuttle transmission , T4.100 without cab, with Dual Command™ transmission , T4.100 without cab, with mechanical or Power shuttle transmission , T4.110 with cab, with Dual Command™ transmission , T4.110 with cab, with mechanical or Power shuttle transmission , T4.110 without cab, with Dual Command™ transmission , T4.110 without cab, with mechanical or Power shuttle transmission , T4.120 with cab, with Dual Command™ transmission , T4.120 with cab, with mechanical or Power shuttle transmission , T4.120 without cab, with Dual Command™ transmission , T4.120 without cab, with mechanical or Power shuttle transmission , T4.90 with cab, with Dual Command™ transmission , T4.90 with cab, with mechanical or Power shuttle transmission , T4.90 without cab, with Dual Command™ transmission , T4.90 without cab, with mechanical or Power shuttle transmission**

## Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.100 without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
T4.100 with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
T4.100 without cab, with Dual Command™ transmission	North America	F5GFL413A*B006
T4.100 with cab, with Dual Command™ transmission	North America	F5GFL413A*B006
T4.110 without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
T4.110 with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
T4.110 without cab, with Dual Command™ transmission	North America	F5GFL413A*B006
T4.110 with cab, with Dual Command™ transmission	North America	F5GFL413A*B006
T4.120 without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
T4.120 with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
T4.120 without cab, with Dual Command™ transmission	North America	F5GFL413A*B006
T4.120 with cab, with Dual Command™ transmission	North America	F5GFL413A*B006
T4.90 without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
T4.90 with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
T4.90 without cab, with Dual Command™ transmission	North America	F5GFL413A*B006
T4.90 with cab, with Dual Command™ transmission	North America	F5GFL413A*B006

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.254] Intake and exhaust manifolds and muffler .....	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system .....	10.6
[10.414] Fan and drive .....	10.7
[10.310] Aftercooler.....	10.8
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components .....	18.3
<b>Transmission</b> .....	<b>21</b>
[21.130] Mechanical transmission external controls.....	21.1
[21.112] Power shuttle transmission.....	21.2
[21.110] Master clutch housing .....	21.3
[21.134] Power shuttle transmission external controls .....	21.4
[21.154] Power shuttle transmission internal components .....	21.5
[21.160] Creeper .....	21.6
[21.162] Reverser .....	21.7
[21.168] Hi-Lo unit.....	21.8
[21.109] Transmission cooler and lines.....	21.9
[21.118] Transmission/Rear drive .....	21.10
[21.148] Transmission/Rear drive internal components .....	21.11
[21.AAA] Transmission generic sub-group .....	21.12

<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.101] Mechanical control .....	23.1
[23.202] Electro-hydraulic control .....	23.2
[23.314] Drive shaft .....	23.3
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.400] Non-powered front axle .....	25.4
<b>Rear axle system</b> .....	<b>27</b>
[27.106] Rear bevel gear set and differential .....	27.1
[27.120] Planetary and final drives .....	27.2
[27.100] Powered rear axle .....	27.3
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control .....	31.2
[31.110] One-speed rear Power Take-Off (PTO) .....	31.3
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.4
<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control .....	33.3
<b>Hydraulic systems</b> .....	<b>35</b>
[35.104] Fixed displacement pump .....	35.1
[35.204] Remote control valves .....	35.2
[35.114] Three-point hitch control valve .....	35.3
[35.116] Three-point hitch cylinder .....	35.4

[35.160] Front hitch controls and lines .....	35.5
[35.701] Front loader arm hydraulic system .....	35.6
[35.723] Front loader bucket hydraulic system .....	35.7
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.100] Drawbars and towing hitches .....	37.1
[37.108] Rear three-point hitch external controls.....	37.2
[37.110] Rear three-point hitch .....	37.3
[37.120] Rear three-point hitch linkage.....	37.4
[37.162] Front hitch.....	37.5
[37.166] Front hitch linkage.....	37.6
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump .....	41.4
[41.216] Cylinders .....	41.5
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels .....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.100] Harnesses and connectors.....	55.1
[55.301] Alternator.....	55.2
[55.302] Battery.....	55.3
[55.014] Engine intake and exhaust system.....	55.4

[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.5
[55.640] Electronic modules .....	55.6
[55.518] Wiper and washer system.....	55.7
[55.404] External lighting .....	55.8
[55.408] Warning indicators, alarms, and instruments .....	55.9
[55.DTC] FAULT CODES.....	55.10
<b>Front loader and bucket.....</b>	<b>82</b>
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2
[82.AAA] Front loader and bucket generic sub-group .....	82.3
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.160] Cab interior trim and panels.....	90.3
[90.154] Cab doors and hatches .....	90.4
[90.156] Cab glazing .....	90.5
[90.110] Operator platform less cab .....	90.6
[90.100] Engine hood and panels .....	90.7
[90.102] Engine shields, hood latches, and trims .....	90.8
[90.116] Fenders and guards .....	90.9

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)