

SERVICE MANUAL

Workmaster™ 33

Workmaster™ 37

Tier 4B (final)

Compact Tractor

Part number 47881877

1st edition English

January 2016





SERVICE MANUAL

Workmaster™ 33 33 HP compact tractor, TIER 4B (final).

Workmaster™ 37 37 HP compact tractor, TIER 4B (final).

Link Product / Engine

Product	Market Product	Engine
Workmaster™ 33 33 HP compact tractor, TIER 4B (final).	North America	N843T-F-24
Workmaster™ 37 37 HP compact tractor, TIER 4B (final).	North America	N843LT-F-27

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.250] Turbocharger and lines.....	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.304] Engine lubrication system.....	10.5
[10.400] Engine cooling system	10.6
[10.408] Oil cooler and lines.....	10.7
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.8
Clutch	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components	18.2
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.182] Differential.....	21.4
Four-Wheel Drive (4WD) system	23
[23.304] Four-Wheel Drive (4WD) gearbox	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.108] Final drive hub, steering knuckles, and shafts	25.2
[25.310] Final drives	25.3
Rear axle system	27
[27.106] Rear bevel gear set and differential	27.1

[27.120] Planetary and final drives	27.2
Hydrostatic drive	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.202] Hydrostatic transmission	29.2
[29.218] Pump and motor components	29.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.120] Central Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.120] Mechanical service brakes	33.2
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.104] Fixed displacement pump	35.2
[35.114] Three-point hitch control valve	35.3
[35.116] Three-point hitch cylinder	35.4
[35.204] Remote control valves	35.5
[35.300] Reservoir, cooler, and filters	35.6
[35.350] Safety and main relief valves	35.7
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
Steering	41
[41.106] Tie rods	41.1
[41.200] Hydraulic control components	41.2
[41.216] Cylinders	41.3
Electrical systems	55

[55.010] Fuel injection system.....	55.1
[55.011] Fuel tank system	55.2
[55.012] Engine cooling system	55.3
[55.013] Engine oil system	55.4
[55.031] Parking brake electrical system.....	55.5
[55.100] Harnesses and connectors.....	55.6
[55.201] Engine starting system	55.7
[55.202] Cold start aid	55.8
[55.301] Alternator.....	55.9
[55.302] Battery.....	55.10
[55.404] External lighting	55.11
[55.405] External lighting switches and relays	55.12
[55.408] Warning indicators, alarms, and instruments	55.13
[55.513] Cab transmission controls.....	55.14
[55.610] Ground speed control	55.15
[55.DTC] FAULT CODES.....	55.16

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com