

SERVICE MANUAL

T4030F / T4040F / T4050F / T4060F

Tier 3

Tractor

*T4030F with cab PIN ZCJD09263 - ZDJD10118; T4030F with cab PIN Z8JD05996 - ZCJD10540;
T4030F without cab PIN ZCJD10424 - ZDJD10174; T4030F without cab PIN Z8JD07917 - ZCJD10183;
T4040F with cab PIN ZCJD10607 - ZDJD10900; T4040F with cab PIN Z8JD07561 - ZCJD10129;
T4040F without cab PIN ZCJD09629 - ZDJD10408; T4040F without cab PIN Z8JD05909 - ZCJD10250;
T4050F with cab PIN ZCJD07769 - ZDJD10461; T4050F with cab PIN Z7JD01006 - ZCJD10886;
T4050F without cab PIN ZCJD11040 - ZDJD09876; T4050F without cab PIN Z8JD06807 - ZCJD10135;
T4060F with cab PIN ZBJD14608 - ZDJD11085; T4060F without cab PIN ZCJD06222 - ZDJD11528*

Part number 47888341

2nd edition English

July 2016

Replaces part number 84159511





SERVICE MANUAL

**T4030F With cab - Model Year 2012 [ZCJD09263 - ZDJD10118], T4030F
With cab [Z8JD05996 - ZCJD10540], T4030F Without cab - Model Year 2012
[ZCJD10424 - ZDJD10174], T4030F Without cab [Z8JD07917 - ZCJD10183],
T4040F With cab - Model Year 2012 [ZCJD10607 - ZDJD10900], T4040F
With cab [Z8JD07561 - ZCJD10129], T4040F Without cab - Model Year 2012
[ZCJD09629 - ZDJD10408], T4040F Without cab [Z8JD05909 - ZCJD10250],
T4050F With cab - Model Year 2012 [ZCJD07769 - ZDJD10461], T4050F
With cab [Z7JD01006 - ZCJD10886], T4050F Without cab - Model Year 2012
[ZCJD11040 - ZDJD09876], T4050F Without cab [Z8JD06807 - ZCJD10135],
T4060F With cab [ZBJD14608 - ZDJD11085], T4060F Without cab [ZCJD06222
- ZDJD11528]**

Link Product / Engine

Product	Market Product	Engine
T4030F With cab [Z8JD05996 - ZCJD10540]	North America	F5AE9484B
T4030F Without cab [Z8JD07917 - ZCJD10183]	North America	F5AE9484B
T4030F With cab - Model Year 2012 [ZCJD09263 - ZDJD10118]	North America	F5AE9484B
T4030F Without cab - Model Year 2012 [ZCJD10424 - ZDJD10174]	North America	F5AE9484B
T4040F With cab [Z8JD07561 - ZCJD10129]	North America	F5AE9484G
T4040F Without cab [Z8JD05909 - ZCJD10250]	North America	F5AE9484G
T4040F With cab - Model Year 2012 [ZCJD10607 - ZDJD10900]	North America	F5AE9484G
T4040F Without cab - Model Year 2012 [ZCJD09629 - ZDJD10408]	North America	F5AE9484G
T4050F With cab [Z7JD01006 - ZCJD10886]	North America	F4CE9484
T4050F Without cab [Z8JD06807 - ZCJD10135]	North America	F4CE9484
T4050F With cab - Model Year 2012 [ZCJD07769 - ZDJD10461]	North America	F4CE9484
T4050F Without cab - Model Year 2012 [ZCJD11040 - ZDJD09876]	North America	F4CE9484
T4060F With cab [ZBJD14608 - ZDJD11085]	North America	F4CE9484
T4060F Without cab [ZCJD06222 - ZDJD11528]	North America	F4CE9484

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
Clutch	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components	18.2
[18.100] Clutch mechanical release control	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.118] Transmission/Rear drive	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls	21.5
[21.154] Power shuttle transmission internal components	21.6
[21.160] Creeper	21.7
[21.162] Reverser	21.8
[21.168] Hi-Lo unit.....	21.9
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.400] Non-powered front axle	25.2
[25.102] Front bevel gear set and differential	25.3
[25.108] Final drive hub, steering knuckles, and shafts	25.4

[25.310] Final drives	25.5
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives	27.4
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.146] Front Power Take-Off (PTO)	31.2
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control	33.3
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.300] Reservoir, cooler, and filters	35.2
[35.104] Fixed displacement pump	35.3
[35.204] Remote control valves	35.4
[35.600] High flow hydraulics	35.5
[35.100] Main lift system	35.6
[35.114] Three-point hitch control valve	35.7
[35.116] Three-point hitch cylinder	35.8
[35.160] Front hitch controls and lines	35.9
[35.410] Header or attachment height system	35.10
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
[37.162] Front hitch	37.2
Steering	41

[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
Wheels	44
[44.511] Front wheels.....	44.1
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.202] Cold start aid	55.6
[55.640] Electronic modules	55.7
[55.048] Rear Power Take-Off (PTO) control system	55.8
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.9
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.10
[55.523] Cab hitch controls	55.11
[55.130] Rear three-point hitch electronic control system	55.12
[55.518] Wiper and washer system.....	55.13
[55.404] External lighting	55.14
[55.514] Cab lighting	55.15
[55.511] Light harnesses	55.16
[55.408] Warning indicators, alarms, and instruments	55.17
[55.DTC] FAULT CODES.....	55.18
Platform, cab, bodywork, and decals	90

[90.150] Cab 90.1
[90.151] Cab interior 90.2
[90.154] Cab doors and hatches 90.3

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com