

# SERVICE MANUAL

**T4030V / T4040V / T4050V / T4060V**

**Tier 3**

**Tractor**

*T4030V with cab PIN ZCJE01906 - ZDJE09775; T4030V with cab PIN Z8JE04295 - ZCJE10898;  
T4030V without cab PIN ZCJE04397 - ZDJE11084; T4030V without cab PIN Z8JE13092 - ZCJE07076;  
T4040V with cab PIN ZCJE05523 - ZDJE09978; T4040V with cab PIN Z8JE04453 - ZCJE08151;  
T4040V without cab PIN ZCJE12068 - ZDJE09487; T4040V without cab PIN Z8JE04825 - ZCJE06813;  
T4050V with cab PIN ZCJE02892 - ZDJE10111; T4050V with cab PIN Z8JE04822 - ZCJE10163;  
T4050V without cab PIN ZCJE13869 - ZDJE11531; T4050V without cab PIN Z8JE14721 - ZCJE04768;  
T4060V with cab PIN ZCJE12826 - ZDJE06199; T4060V without cab PIN ZCJE09734 - ZDJE10451*

**Part number 47888353**

2<sup>nd</sup> edition English

July 2016

Replaces part number 84221695





## **SERVICE MANUAL**

**T4030V With cab - Model Year 2012 [ZCJE01906 - ZDJE09775], T4030V  
With cab [Z8JE04295 - ZCJE10898], T4030V Without cab - Model Year 2012  
[ZCJE04397 - ZDJE11084], T4030V Without cab [Z8JE13092 - ZCJE07076],  
T4040V With cab - Model Year 2012 [ZCJE05523 - ZDJE09978], T4040V  
With cab [Z8JE04453 - ZCJE08151], T4040V Without cab - Model Year 2012  
[ZCJE12068 - ZDJE09487], T4040V Without cab [Z8JE04825 - ZCJE06813],  
T4050V With cab - Model Year 2012 [ZCJE02892 - ZDJE10111], T4050V  
With cab [Z8JE04822 - ZCJE10163], T4050V Without cab - Model Year 2012  
[ZCJE13869 - ZDJE11531], T4050V Without cab [Z8JE14721 - ZCJE04768],  
T4060V With cab [ZCJE12826 - ZDJE06199], T4060V Without cab [ZCJE09734  
- ZDJE10451]**

## Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4030V With cab [Z8JE04295 - ZCJE10898]	North America	F5AE9484B
T4030V Without cab [Z8JE13092 - ZCJE07076]	North America	F5AE9484B
T4030V With cab - Model Year 2012 [ZCJE01906 - ZDJE09775]	North America	F5AE9484B
T4030V Without cab - Model Year 2012 [ZCJE04397 - ZDJE11084]	North America	F5AE9484B
T4040V With cab [Z8JE04453 - ZCJE08151]	North America	F5AE9484G
T4040V Without cab [Z8JE04825 - ZCJE06813]	North America	F5AE9484G
T4040V With cab - Model Year 2012 [ZCJE05523 - ZDJE09978]	North America	F5AE9484G
T4040V Without cab - Model Year 2012 [ZCJE12068 - ZDJE09487]	North America	F5AE9484G
T4050V With cab [Z8JE04822 - ZCJE10163]	North America	F4CE9484
T4050V Without cab [Z8JE14721 - ZCJE04768]	North America	F4CE9484
T4050V With cab - Model Year 2012 [ZCJE02892 - ZDJE10111]	North America	F4CE9484
T4050V Without cab - Model Year 2012 [ZCJE13869 - ZDJE11531]	North America	F4CE9484
T4060V With cab [ZCJE12826 - ZDJE06199]	North America	F4CE9484
T4060V Without cab [ZCJE09734 - ZDJE10451]	North America	F4CE9484

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components .....	18.3
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls .....	21.5
[21.154] Power shuttle transmission internal components .....	21.6
[21.145] Gearbox internal components.....	21.7
[21.160] Creeper .....	21.8
[21.162] Reverser .....	21.9
[21.168] Hi-Lo unit.....	21.10
[21.182] Differential.....	21.11
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.2
[23.314] Drive shaft.....	23.3
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2

[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control .....	25.4
[25.310] Final drives .....	25.5
[25.400] Non-powered front axle .....	25.6
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
[27.126] Spur gear and final drives.....	27.4
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump .....	35.3
[35.204] Remote control valves .....	35.4
[35.600] High flow hydraulics .....	35.5
[35.100] Main lift system.....	35.6
[35.114] Three-point hitch control valve .....	35.7
[35.116] Three-point hitch cylinder .....	35.8
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
[37.108] Rear three-point hitch external controls.....	37.2
<b>Steering.....</b>	<b>41</b>

[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system .....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.202] Cold start aid .....	55.6
[55.640] Electronic modules .....	55.7
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.9
[55.047] Steering control system .....	55.10
[55.523] Cab hitch controls .....	55.11
[55.130] Rear three-point hitch electronic control system .....	55.12
[55.404] External lighting .....	55.13
[55.514] Cab lighting .....	55.14
[55.511] Light harnesses .....	55.15
[55.408] Warning indicators, alarms, and instruments .....	55.16
[55.DTC] FAULT CODES.....	55.17
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.110] Operator platform less cab .....	90.1

[90.114] Operator protections ..... 90.2

[90.150] Cab ..... 90.3

[90.151] Cab interior ..... 90.4

[90.154] Cab doors and hatches ..... 90.5

[90.100] Engine hood and panels ..... 90.6

[90.102] Engine shields, hood latches, and trims ..... 90.7

[90.160] Cab interior trim and panels ..... 90.8

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)