

# SERVICE MANUAL

**T4.75V / T4.85V / T4.95V / T4.105V**

**Tier 3**

**Tractor**

*T4.75V with cab PIN ZDJE10095 and above; T4.75V without cab PIN ZDJE11310 and above;  
T4.85V with cab PIN ZDJE11669 and above; T4.85V without cab PIN ZDJE10317 and above;  
T4.95V with cab PIN ZDJE11682 and above; T4.95V without cab PIN ZDJE11554 and above;  
T4.105V with cab PIN ZDJE17896 and above; T4.105V without cab PIN ZDJE13827 and above*

**Part number 47888375**

1<sup>st</sup> edition English  
July 2016





## **SERVICE MANUAL**

**T4.105V With cab [ZDJE17896 - ], T4.105V Without cab [ZDJE13827 - ], T4.75V With cab [ZDJE10095 - ], T4.75V Without cab [ZDJE11310 - ], T4.85V With cab [ZDJE11669 - ], T4.85V Without cab [ZDJE10317 - ], T4.95V With cab [ZDJE11682 - ], T4.95V Without cab [ZDJE11554 - ]**

# Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.105V With cab [ZDJE17896 - ]	North America	F4CE9484
T4.105V Without cab [ZDJE13827 - ]	North America	F4CE9484
T4.75V With cab [ZDJE10095 - ]	North America	F5AE9484B
T4.75V Without cab [ZDJE11310 - ]	North America	F5AE9484B
T4.85V With cab [ZDJE11669 - ]	North America	F5AE9484G
T4.85V Without cab [ZDJE10317 - ]	North America	F5AE9484G
T4.95V With cab [ZDJE11682 - ]	North America	F4CE9484
T4.95V Without cab [ZDJE11554 - ]	North America	F4CE9484

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
Clutch .....	18
[18.100] Clutch mechanical release control .....	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components .....	18.3
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls .....	21.5
[21.154] Power shuttle transmission internal components .....	21.6
[21.145] Gearbox internal components.....	21.7
[21.160] Creeper .....	21.8
[21.162] Reverser .....	21.9
[21.168] Hi-Lo unit.....	21.10
[21.182] Differential.....	21.11
Four-Wheel Drive (4WD) system .....	23
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.1
[23.314] Drive shaft.....	23.2
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3

[25.122] Axle suspension control .....	25.4
[25.310] Final drives .....	25.5
[25.400] Non-powered front axle .....	25.6
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
[27.126] Spur gear and final drives.....	27.4
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.204] Remote control valves .....	35.4
[35.600] High flow hydraulics .....	35.5
[35.100] Main lift system.....	35.6
[35.114] Three-point hitch control valve .....	35.7
[35.116] Three-point hitch cylinder .....	35.8
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
[37.108] Rear three-point hitch external controls.....	37.2
[37.162] Front hitch .....	37.3
<b>Steering.....</b>	<b>41</b>

[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system .....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.202] Cold start aid .....	55.6
[55.640] Electronic modules .....	55.7
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.9
[55.047] Steering control system .....	55.10
[55.523] Cab hitch controls .....	55.11
[55.130] Rear three-point hitch electronic control system .....	55.12
[55.404] External lighting .....	55.13
[55.514] Cab lighting .....	55.14
[55.511] Light harnesses .....	55.15
[55.408] Warning indicators, alarms, and instruments .....	55.16
[55.DTC] FAULT CODES.....	55.17
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.110] Operator platform less cab .....	90.1

[90.114] Operator protections ..... 90.2

[90.150] Cab ..... 90.3

[90.151] Cab interior ..... 90.4

[90.154] Cab doors and hatches ..... 90.5

[90.100] Engine hood and panels ..... 90.6

[90.102] Engine shields, hood latches, and trims ..... 90.7

[90.160] Cab interior trim and panels ..... 90.8

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)