

**JX55T**  
**JX75T**  
Tractor

**SERVICE MANUAL**

Part number 47899737

1<sup>st</sup> edition English

June 2015

© 2016 CNH Industrial (India) Pvt.Ltd. All Rights Reserved.





## **SERVICE MANUAL**

**JX55T TIER 3 engine, 2WD tractor  
JX55T TIER 3 engine, 4WD tractor  
JX75T TIER 3 engine, 2WD tractor  
JX75T TIER 3 engine, 4 WD tractor**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.102] Pan and covers .....	10.2
[10.106] Valve drive and gears .....	10.3
[10.101] Cylinder heads .....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.110] Balancer and damper .....	10.7
[10.218] Fuel injection system.....	10.8
[10.250] Turbocharger and lines.....	10.9
[10.400] Engine cooling system .....	10.10
[10.414] Fan and drive .....	10.11
[10.304] Engine lubrication system.....	10.12
Clutch .....	18
[18.110] Clutch and components .....	18.1
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.126] Gearbox external controls.....	21.3
[21.145] Gearbox internal components.....	21.4
Four-Wheel Drive (4WD) system .....	23
[23.314] Drive shaft.....	23.1
Front axle system .....	25
[25.400] Non-powered front axle .....	25.1
[25.100] Powered front axle .....	25.2

[25.102] Front bevel gear set and differential .....	25.3
[25.108] Final drive hub, steering knuckles, and shafts .....	25.4
<b>Rear axle system .....</b>	<b>27</b>
[27.100] Powered rear axle .....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO) .....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.201] Power Take-Off (PTO) drive shaft .....	31.2
<b>Brakes and controls .....</b>	<b>33</b>
[33.120] Mechanical service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
<b>Hydraulic systems .....</b>	<b>35</b>
[35.000] Hydraulic systems .....	35.1
[35.104] Fixed displacement pump .....	35.2
[35.359] Main control valve .....	35.3
[35.204] Remote control valves .....	35.4
[35.100] Main lift system .....	35.5
<b>Steering .....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components .....	41.2
[41.216] Cylinders .....	41.3
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels .....	44.1
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors .....	55.2
[55.201] Engine starting system .....	55.3

[55.301] Alternator ..... 55.4  
[55.302] Battery..... 55.5  
[55.404] External lighting ..... 55.6  
[55.408] Warning indicators, alarms, and instruments ..... 55.7

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)