

JX35T
JX40T
JX45T
Tractor

SERVICE MANUAL

Part number 47899739

English

September 2015

© 2015 New Holland Fiat (India) Pvt.Ltd. All Rights Reserved.





SERVICE MANUAL

**JX35T 2WD TREM-3A , JX35T 4WD TREM-3A , JX40T 2WD TREM-3A , JX40T
2WD Tractor , JX40T 4WD TREM-3A , JX45T 2 WD tractor , JX45T 2WD
TREM-3A , JX45T 4WD TREM-3A**

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.102] Pan and covers	10.2
[10.106] Valve drive and gears	10.3
[10.101] Cylinder heads	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.206] Fuel filters	10.7
[10.218] Fuel injection system.....	10.8
[10.202] Air cleaners and lines	10.9
[10.400] Engine cooling system	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.110] Clutch and components	18.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.112] Power shuttle transmission.....	21.2
[21.154] Power shuttle transmission internal components	21.3
[21.126] Gearbox external controls.....	21.4
[21.145] Gearbox internal components.....	21.5
Front axle system	25
[25.100] Powered front axle	25.1
[25.400] Non-powered front axle	25.2
[25.102] Front bevel gear set and differential	25.3
[25.108] Final drive hub, steering knuckles, and shafts	25.4

Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.120] Mechanical service brakes.....	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.100] Main lift system.....	35.3
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels.....	44.1
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system.....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.024] Transmission control system.....	55.6
[55.404] External lighting	55.7

[55.408] Warning indicators, alarms, and instruments 55.8

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com