

# SERVICE MANUAL

**Speedrower<sup>®</sup> 200 / Speedrower<sup>®</sup> 240**

**Tier 3**

**Self-Propelled Windrower**

*PIN YEG675001 and above*

**Part number 47904526**

1<sup>st</sup> edition English  
August 2015



# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Speedrower® 200 [YEG675001 - ]	Middle East Africa	F4HE9687
Speedrower® 200 [YEG675001 - ]	Latin America	F4HE9687
Speedrower® 200 [YEG675001 - ]	Asia Pacific	F4HE9687
Speedrower® 200 [YEG675001 - ]	Australia New Zealand	F4HE9687
Speedrower® 240 [YEG675001 - ]	Asia Pacific	F4HE9687
Speedrower® 240 [YEG675001 - ]	Latin America	F4HE9687
Speedrower® 240 [YEG675001 - ]	Middle East Africa	F4HE9687
Speedrower® 240 [YEG675001 - ]	Australia New Zealand	F4HE9687

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.206] Fuel filters .....	10.3
[10.216] Fuel tanks .....	10.4
[10.218] Fuel injection system.....	10.5
[10.250] Turbocharger and lines.....	10.6
[10.254] Intake and exhaust manifolds and muffler .....	10.7
[10.400] Engine cooling system .....	10.8
[10.414] Fan and drive .....	10.9
<b>Front axle system</b> .....	<b>25</b>
[25.310] Final drives .....	25.1
<b>Rear axle system</b> .....	<b>27</b>
[27.550] Non-powered rear axle.....	27.1
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.100] Transmission and steering hydrostatic control .....	29.1
[29.202] Hydrostatic transmission .....	29.2
[29.218] Pump and motor components.....	29.3
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.100] Main lift system.....	35.2
[35.105] Charge pump.....	35.3
[35.220] Auxiliary hydraulic pump and lines .....	35.4

[35.300] Reservoir, cooler, and filters.....	35.5
[35.304] Combination pump units .....	35.6
[35.410] Header or attachment height system .....	35.7
[35.415] Header or attachment tilting system .....	35.8
[35.760] Header reverser drive .....	35.9
[35.910] Head and header hydraulic drive .....	35.10
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
<b>Cab climate control .....</b>	<b>50</b>
[50.200] Air conditioning .....	50.1
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.019] Hydrostatic drive control system .....	55.2
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.3
[55.100] Harnesses and connectors.....	55.4
[55.640] Electronic modules.....	55.5
[55.DTC] FAULT CODES.....	55.6
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.124] Pneumatically-adjusted operator seat.....	90.1
[90.150] Cab.....	90.2
[90.151] Cab interior.....	90.3
[90.154] Cab doors and hatches .....	90.4

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)