

SERVICE MANUAL

**T8.320 / T8.350 / T8.380 / T8.410 / T8.435 /
T8.380 SmartTrax™ / T8.410 SmartTrax™ /
T8.435 SmartTrax™
Continuously Variable Transmission (CVT)**

Tractor

PIN ZFRE05001 and above

Part number 47918010

1st edition English

October 2015





SERVICE MANUAL

T8.320 CVT TIER 2 [ZFRE05001 -], T8.350 CVT TIER 2 [ZFRE05001 -], T8.380 CVT TIER 2 [ZFRE05001 -], T8.380 SmartTrax™ CVT TIER 2 [ZFRE05001 -], T8.410 CVT TIER 2 [ZFRE05001 -], T8.410 SmartTrax™ CVT TIER 2 [ZFRE05001 -], T8.435 CVT TIER 2 [ZFRE05001 -], T8.435 SmartTrax™ CVT TIER 2 [ZFRE05001 -]

Link Product / Engine

Product	Market Product	Engine
T8.320 CVT TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA613G*E024
T8.320 CVT TIER 2 [ZFRE05001 -]	North America	F2CFA613G*E024
T8.320 CVT TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA613G*E024
T8.320 CVT TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA613G*E024
T8.320 CVT TIER 2 [ZFRE05001 -]	Latin America	F2CFA613G*E024
T8.350 CVT TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA613D*E024
T8.350 CVT TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA613D*E024
T8.350 CVT TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA613D*E024
T8.350 CVT TIER 2 [ZFRE05001 -]	North America	F2CFA613D*E024
T8.350 CVT TIER 2 [ZFRE05001 -]	Latin America	F2CFA613D*E024
T8.380 CVT TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA613B*E024
T8.380 CVT TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA613B*E024
T8.380 CVT TIER 2 [ZFRE05001 -]	Latin America	F2CFA613B*E024
T8.380 CVT TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA613B*E024
T8.380 CVT TIER 2 [ZFRE05001 -]	North America	F2CFA613B*E024
T8.410 CVT TIER 2 [ZFRE05001 -]	North America	F2CFA614D*E022
T8.410 CVT TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA614D*E022
T8.410 CVT TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA614D*E022
T8.410 CVT TIER 2 [ZFRE05001 -]	Latin America	F2CFA614D*E022
T8.410 CVT TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA614D*E022
T8.435 CVT TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA614A*E022
T8.435 CVT TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA614A*E022
T8.435 CVT TIER 2 [ZFRE05001 -]	North America	F2CFA614A*E022
T8.435 CVT TIER 2 [ZFRE05001 -]	Latin America	F2CFA614A*E022

Product	Market Product	Engine
T8.435 CVT TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA614A*E022
T8.380 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA613B*E024
T8.380 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA613B*E024
T8.380 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Latin America	F2CFA613B*E024
T8.380 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA613B*E024
T8.380 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	North America	F2CFA613B*E024
T8.410 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA614D*E022
T8.410 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Latin America	F2CFA614D*E022
T8.410 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	North America	F2CFA614D*E022
T8.410 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA614D*E022
T8.410 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA614D*E022
T8.435 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Latin America	F2CFA614A*E022
T8.435 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA614A*E022
T8.435 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA614A*E022
T8.435 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	North America	F2CFA614A*E022
T8.435 SmartTrax™ CVT TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA614A*E022

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.202] Air cleaners and lines	10.3
[10.216] Fuel tanks	10.4
[10.218] Fuel injection system.....	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.304] Engine lubrication system.....	10.7
[10.310] Aftercooler.....	10.8
[10.400] Engine cooling system	10.9
[10.414] Fan and drive	10.10
Power coupling.....	19
[19.100] Drive shaft.....	19.1
[19.110] Flywheel damper	19.2
[19.120] Drive shaft shield assembly	19.3
Transmission.....	21
[21.504] Continuously Variable Transmission (CVT)	21.1
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.2
[21.506] Continuously Variable Transmission (CVT) lubrication system	21.3
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.4
[21.900] Hydraulic pump drive.....	21.5
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25

[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control	25.4
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.610] Rear axle track yoke assembly	27.4
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
[33.220] Trailer brake hydraulic control	33.3
[33.224] Trailer brake pneumatic control	33.4
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.102] Pump control valves	35.2
[35.106] Variable displacement pump	35.3
[35.114] Three-point hitch control valve	35.4
[35.124] Three-point hitch hydraulic adjustment	35.5
[35.204] Remote control valves	35.6
[35.300] Reservoir, cooler, and filters	35.7
[35.304] Combination pump units	35.8

Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
[37.162] Front hitch	37.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
[41.432] Autoguidance steering	41.4
[41.910] Auxiliary steering	41.5
Wheels	44
[44.520] Rear wheels.....	44.1
Tracks and track suspension	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.100] Heating.....	50.1
[50.200] Air conditioning	50.2
[50.300] Cab pressurizing system.....	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system.....	55.2
[55.012] Engine cooling system	55.3
[55.013] Engine oil system	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.015] Engine control system.....	55.6
[55.024] Transmission control system.....	55.7

[55.045] Front axle control system	55.8
[55.046] Rear axle control system.....	55.9
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.10
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.11
[55.100] Harnesses and connectors.....	55.12
[55.130] Rear three-point hitch electronic control system	55.13
[55.201] Engine starting system	55.14
[55.301] Alternator.....	55.15
[55.302] Battery.....	55.16
[55.408] Warning indicators, alarms, and instruments	55.17
[55.512] Cab controls.....	55.18
[55.513] Cab transmission controls.....	55.19
[55.518] Wiper and washer system.....	55.20
[55.640] Electronic modules	55.21
[55.DTC] FAULT CODES.....	55.22
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4
[90.151] Cab interior.....	90.5
[90.160] Cab interior trim and panels.....	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com