

SERVICE MANUAL

**T8.320 / T8.350 / T8.380 / T8.410 /
T8.380 SmartTrax™ / T8.410 SmartTrax™
Powershift Transmission (PST)**

Tractor

PIN ZFRE05001 and above

Part number 47918011

1st edition English
October 2015





SERVICE MANUAL

T8.320 PST TIER 2 [ZFRE05001 -], T8.350 PST TIER 2 CHELNY [ZFRE05001 -], T8.350 PST TIER 2 [ZFRE05001 -], T8.380 PST TIER 2 CHELNY [ZFRE05001 -], T8.380 PST TIER 2 [ZFRE05001 -], T8.380 SmartTrax™ PST TIER 2 [ZFRE05001 -], T8.410 PST TIER 2 CHELNY [ZFRE05001 -], T8.410 PST TIER 2 [ZFRE05001 -], T8.410 SmartTrax™ PST TIER 2 [ZFRE05001 -]

Link Product / Engine

Product	Market Product	Engine
T8.320 PST TIER 2 [ZFRE05001 -]	Latin America	F2CFA613G*E024
T8.320 PST TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA613G*E024
T8.320 PST TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA613G*E024
T8.320 PST TIER 2 [ZFRE05001 -]	North America	F2CFA613G*E024
T8.320 PST TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA613G*E024
T8.350 PST TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA613D*E024
T8.350 PST TIER 2 [ZFRE05001 -]	Latin America	F2CFA613D*E024
T8.350 PST TIER 2 [ZFRE05001 -]	North America	F2CFA613D*E024
T8.350 PST TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA613D*E024
T8.350 PST TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA613D*E024
T8.380 PST TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA613B*E024
T8.380 PST TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA613B*E024
T8.380 PST TIER 2 [ZFRE05001 -]	North America	F2CFA613B*E024
T8.380 PST TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA613B*E024
T8.380 PST TIER 2 [ZFRE05001 -]	Latin America	F2CFA613B*E024
T8.410 PST TIER 2 [ZFRE05001 -]	North America	F2CFA614D*E022
T8.410 PST TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA614D*E022
T8.410 PST TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA614D*E022
T8.410 PST TIER 2 [ZFRE05001 -]	Latin America	F2CFA614D*E022
T8.410 PST TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA614D*E022
T8.380 SmartTrax™ PST TIER 2 [ZFRE05001 -]	Latin America	F2CFA613B*E024
T8.380 SmartTrax™ PST TIER 2 [ZFRE05001 -]	North America	F2CFA613B*E024
T8.380 SmartTrax™ PST TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA613B*E024
T8.380 SmartTrax™ PST TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA613B*E024

Product	Market Product	Engine
T8.380 SmartTrax™ PST TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA613B*E024
T8.410 SmartTrax™ PST TIER 2 [ZFRE05001 -]	Middle East Africa	F2CFA614D*E022
T8.410 SmartTrax™ PST TIER 2 [ZFRE05001 -]	Latin America	F2CFA614D*E022
T8.410 SmartTrax™ PST TIER 2 [ZFRE05001 -]	Australia New Zealand	F2CFA614D*E022
T8.410 SmartTrax™ PST TIER 2 [ZFRE05001 -]	North America	F2CFA614D*E022
T8.410 SmartTrax™ PST TIER 2 [ZFRE05001 -]	Asia Pacific	F2CFA614D*E022

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.202] Air cleaners and lines	10.3
[10.216] Fuel tanks	10.4
[10.218] Fuel injection system.....	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.304] Engine lubrication system.....	10.7
[10.310] Aftercooler.....	10.8
[10.400] Engine cooling system	10.9
[10.414] Fan and drive	10.10
Power coupling	19
[19.100] Drive shaft.....	19.1
[19.110] Flywheel damper	19.2
[19.120] Drive shaft shield assembly	19.3
Transmission	21
[21.105] Powershift transmission lubrication system	21.1
[21.113] Powershift transmission	21.2
[21.135] Powershift transmission external controls.....	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.200] Dropbox	21.5
[21.900] Hydraulic pump drive.....	21.6
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2

Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control	25.4
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.610] Rear axle track yoke assembly	27.4
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
[33.220] Trailer brake hydraulic control	33.3
[33.224] Trailer brake pneumatic control	33.4
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.102] Pump control valves	35.2
[35.106] Variable displacement pump	35.3
[35.114] Three-point hitch control valve	35.4
[35.124] Three-point hitch hydraulic adjustment	35.5
[35.204] Remote control valves	35.6
[35.300] Reservoir, cooler, and filters	35.7

[35.304] Combination pump units	35.8
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
[37.162] Front hitch	37.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
[41.432] Autoguidance steering	41.4
[41.910] Auxiliary steering	41.5
Wheels	44
[44.520] Rear wheels	44.1
Tracks and track suspension	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning	50.2
[50.300] Cab pressurizing system	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system.....	55.2
[55.012] Engine cooling system	55.3
[55.013] Engine oil system	55.4
[55.014] Engine intake and exhaust system.....	55.5

[55.015] Engine control system.....	55.6
[55.024] Transmission control system.....	55.7
[55.045] Front axle control system.....	55.8
[55.046] Rear axle control system.....	55.9
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.10
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.11
[55.100] Harnesses and connectors.....	55.12
[55.130] Rear three-point hitch electronic control system.....	55.13
[55.201] Engine starting system.....	55.14
[55.301] Alternator.....	55.15
[55.302] Battery.....	55.16
[55.408] Warning indicators, alarms, and instruments.....	55.17
[55.512] Cab controls.....	55.18
[55.513] Cab transmission controls.....	55.19
[55.518] Wiper and washer system.....	55.20
[55.640] Electronic modules.....	55.21
[55.DTC] FAULT CODES.....	55.22
Platform, cab, bodywork, and decals.....	90
[90.100] Engine hood and panels.....	90.1
[90.102] Engine shields, hood latches, and trims.....	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4
[90.151] Cab interior.....	90.5
[90.160] Cab interior trim and panels.....	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com