

# SERVICE MANUAL

**TS6.110 / TS6.110 HC / TS6.120 /  
TS6.120 HC / TS6.130 / TS6.140  
Tier 4B (final)  
Tractor**

*PIN NT00001M and above*

**Part number 47924635**

1<sup>st</sup> edition English  
December 2015





## SERVICE MANUAL

**TS6.110 110 HP TIER 4B (final) engine, 2WD, and ROPS. , TS6.110 110 HP TIER 4B (final) engine, 2WD, and cab. , TS6.110 110 HP TIER 4B (final) engine, 4WD, and ROPS. , TS6.110 110 HP TIER 4B (final) engine, 4WD, and cab. , TS6.110 HC 110 HP TIER 4B (final) engine, High Clearance (HC), 4WD, and ROPS. , TS6.110 HC 110 HP TIER 4B (final) engine, High Clearance (HC), 4WD, and cab. , TS6.120 119 HP TIER 4B (final) engine, 2WD, and ROPS. , TS6.120 119 HP TIER 4B (final) engine, 2WD, and cab. , TS6.120 119 HP TIER 4B (final) engine, 4WD, and ROPS. , TS6.120 119 HP TIER 4B (final) engine, 4WD, and cab. , TS6.120 HC 119 HP TIER 4B (final) engine, High Clearance (HC), 4WD, and ROPS. , TS6.120 HC 119 HP TIER 4B (final) engine, High Clearance (HC), 4WD, and cab. , TS6.130 130 HP Tier 4B (final) engine, 2WD, and ROPS. , TS6.130 130 HP Tier 4B (final) engine, 2WD, and cab. , TS6.130 130 HP Tier 4B (final) engine, 4WD, and ROPS. , TS6.130 130 HP Tier 4B (final) engine, 4WD, and cab. , TS6.140 139 HP TIER 4B (final) engine, 2WD, and ROPS. , TS6.140 139 HP TIER 4B (final) engine, 2WD, and cab. , TS6.140 139 HP TIER 4B (final) engine, 4WD, and ROPS. , TS6.140 139 HP TIER 4B (final) engine, 4WD, and cab.**

# Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
TS6.110 110 HP TIER 4B (final) engine, 2WD, and ROPS.	North America	F4DFE413U*B001
TS6.110 110 HP TIER 4B (final) engine, 4WD, and ROPS.	North America	F4DFE413U*B001
TS6.110 110 HP TIER 4B (final) engine, 2WD, and cab.	North America	F4DFE413U*B001
TS6.110 110 HP TIER 4B (final) engine, 4WD, and cab.	North America	F4DFE413U*B001
TS6.110 HC 110 HP TIER 4B (final) engine, High Clearance (HC), 4WD, and ROPS.	North America	F4DFE413U*B001
TS6.110 HC 110 HP TIER 4B (final) engine, High Clearance (HC), 4WD, and cab.	North America	F4DFE413U*B001
TS6.120 119 HP TIER 4B (final) engine, 2WD, and ROPS.	North America	F4DFE413T*B001
TS6.120 119 HP TIER 4B (final) engine, 4WD, and ROPS.	North America	F4DFE413T*B001
TS6.120 119 HP TIER 4B (final) engine, 2WD, and cab.	North America	F4DFE413T*B001
TS6.120 119 HP TIER 4B (final) engine, 4WD, and cab.	North America	F4DFE413T*B001
TS6.120 HC 119 HP TIER 4B (final) engine, High Clearance (HC), 4WD, and ROPS.	North America	F4DFE413T*B001
TS6.120 HC 119 HP TIER 4B (final) engine, High Clearance (HC), 4WD, and cab.	North America	F4DFE413T*B001
TS6.130 130 HP Tier 4B (final) engine, 2WD, and ROPS.	North America	F4DFE413S*B001
TS6.130 130 HP Tier 4B (final) engine, 4WD, and ROPS.	North America	F4DFE413S*B001
TS6.130 130 HP Tier 4B (final) engine, 2WD, and cab.	North America	F4DFE413S*B001
TS6.130 130 HP Tier 4B (final) engine, 4WD, and cab.	North America	F4DFE413S*B001
TS6.140 139 HP TIER 4B (final) engine, 2WD, and ROPS.	North America	F4DFE413R*B001
TS6.140 139 HP TIER 4B (final) engine, 4WD, and ROPS.	North America	F4DFE413R*B001
TS6.140 139 HP TIER 4B (final) engine, 2WD, and cab.	North America	F4DFE413R*B001
TS6.140 139 HP TIER 4B (final) engine, 4WD, and cab.	North America	F4DFE413R*B001

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.206] Fuel filters .....	10.3
[10.216] Fuel tanks .....	10.4
[10.254] Intake and exhaust manifolds and muffler .....	10.5
[10.310] Aftercooler.....	10.6
[10.400] Engine cooling system .....	10.7
[10.414] Fan and drive .....	10.8
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.9
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.110] Clutch and components .....	18.2
[18.112] Slip clutch or flywheel damper .....	18.3
<b>Transmission</b> .....	<b>21</b>
[21.109] Transmission cooler and lines.....	21.1
[21.112] Power shuttle transmission.....	21.2
[21.114] Mechanical transmission .....	21.3
[21.134] Power shuttle transmission external controls .....	21.4
[21.154] Power shuttle transmission internal components .....	21.5
[21.160] Creeper .....	21.6
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.2
[23.314] Drive shaft.....	23.3

<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.400] Non-powered front axle .....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.1
<b>Brakes and controls .....</b>	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.116] Three-point hitch cylinder .....	35.4
[35.204] Remote control valves .....	35.5
[35.304] Combination pump units .....	35.6
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.206] Pump.....	41.3
[41.216] Cylinders .....	41.4

<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.200] Air conditioning .....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.011] Fuel tank system .....	55.2
[55.014] Engine intake and exhaust system .....	55.3
[55.015] Engine control system .....	55.4
[55.024] Transmission control system .....	55.5
[55.031] Parking brake electrical system .....	55.6
[55.040] Four-Wheel Drive (4WD) control system .....	55.7
[55.046] Rear axle control system .....	55.8
[55.048] Rear Power Take-Off (PTO) control system .....	55.9
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system .....	55.10
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls .....	55.11
[55.100] Harnesses and connectors .....	55.12
[55.201] Engine starting system .....	55.13
[55.202] Cold start aid .....	55.14
[55.301] Alternator .....	55.15
[55.302] Battery .....	55.16
[55.404] External lighting .....	55.17
[55.405] External lighting switches and relays .....	55.18
[55.408] Warning indicators, alarms, and instruments .....	55.19
[55.510] Cab or platform harnesses and connectors .....	55.20
[55.512] Cab controls .....	55.21
[55.513] Cab transmission controls .....	55.22
[55.514] Cab lighting .....	55.23
[55.518] Wiper and washer system .....	55.24

[55.525] Cab engine controls .....	55.25
[55.640] Electronic modules .....	55.26
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.27
[55.DTC] FAULT CODES .....	55.28
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.100] Engine hood and panels .....	90.1
[90.110] Operator platform less cab .....	90.2
[90.114] Operator protections .....	90.3
[90.124] Pneumatically-adjusted operator seat .....	90.4
[90.150] Cab .....	90.5
[90.151] Cab interior .....	90.6
[90.154] Cab doors and hatches .....	90.7
[90.156] Cab glazing .....	90.8
[90.160] Cab interior trim and panels .....	90.9

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)