

# SERVICE MANUAL

**T6.125 / T6.145 / T6.155 / T6.165 / T6.175 / T6.180**  
**T6.145 AutoCommand™ / T6.155 AutoCommand™**  
**T6.165 AutoCommand™ / T6.175 AutoCommand™**  
**Tier 4B (final)**  
Tractor

**Part number 47938738**  
1<sup>st</sup> edition English  
October 2015





## **SERVICE MANUAL**

**T6.125 , T6.145 AutoCommand™ , T6.145 , T6.155 AutoCommand™ , T6.155 ,  
T6.165 AutoCommand™ , T6.165 , T6.175 AutoCommand™ , T6.175 , T6.180**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T6.145 AutoCommand™	North America	F4DFE4134*B005
T6.155 AutoCommand™	North America	F4DFE4133*B007
T6.165 AutoCommand™	North America	F4DFE4132*B005
T6.175 AutoCommand™	North America	F4DFE4131*B007
T6.125	North America	F4DFE414D*B001
T6.145	North America	F4DFE4134*B006
T6.155	North America	F4DFE4133*B008
T6.165	North America	F4DFE4132*B006
T6.175	North America	F4DFE4131*B008
T6.180	North America	F4DFE6132*B007

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.254] Intake and exhaust manifolds and muffler .....	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system .....	10.6
[10.414] Fan and drive .....	10.7
[10.310] Aftercooler.....	10.8
[10.304] Engine lubrication system.....	10.9
<b>Clutch</b> .....	<b>18</b>
[18.112] Slip clutch or flywheel damper .....	18.1
<b>Transmission</b> .....	<b>21</b>
[21.111] Semi-Powershift transmission .....	21.1
[21.133] Semi-Powershift transmission external controls .....	21.2
[21.103] Semi-Powershift transmission lubrication system.....	21.3
[21.152] Semi-Powershift transmission internal components .....	21.4
[21.504] Continuously Variable Transmission (CVT) .....	21.5
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.6
[21.506] Continuously Variable Transmission (CVT) lubrication system .....	21.7
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.8
[21.160] Creeper .....	21.9
[21.166] Overdrive.....	21.10
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1

[23.314] Drive shaft.....	23.2
<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control.....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.2
[31.142] Front Power Take-Off (PTO) control .....	31.3
[31.146] Front Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control .....	33.4
[33.204] Front axle brake .....	33.5
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.106] Variable displacement pump .....	35.4
[35.105] Charge pump.....	35.5
[35.322] Regulated/Low pressure system .....	35.6

[35.204] Remote control valves .....	35.7
[35.220] Auxiliary hydraulic pump .....	35.8
[35.114] Three-point hitch control valve .....	35.9
[35.116] Three-point hitch cylinder .....	35.10
[35.160] Front hitch controls and lines .....	35.11
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.120] Rear three-point hitch linkage.....	37.1
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump .....	41.4
[41.216] Cylinders .....	41.5
[41.432] Autoguidance steering .....	41.6
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels .....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.015] Engine control system.....	55.3

[55.301] Alternator .....	55.4
[55.302] Battery.....	55.5
[55.014] Engine intake and exhaust system.....	55.6
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.7
[55.640] Electronic modules .....	55.8
[55.024] Transmission control system .....	55.9
[55.020] Transmission speed sensors.....	55.10
[55.021] Transmission pressure sensors .....	55.11
[55.022] Transmission temperature sensors .....	55.12
[55.023] Transmission position sensors .....	55.13
[55.048] Rear Power Take-Off (PTO) control system .....	55.14
[55.031] Parking brake electrical system .....	55.15
[55.512] Cab controls.....	55.16
[55.035] Remote control valve electric control .....	55.17
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.18
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.19
[55.047] Steering control system .....	55.20
[55.130] Rear three-point hitch electronic control system .....	55.21
[55.911] Global Positioning System (GPS) .....	55.22
[55.405] External lighting switches and relays .....	55.23
[55.510] Cab or platform harnesses and connectors.....	55.24
[55.408] Warning indicators, alarms, and instruments .....	55.25
[55.DTC] FAULT CODES.....	55.26
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.100] Engine hood and panels .....	90.2

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)