

SERVICE MANUAL

T5.110 Electro Command™

T5.120 Electro Command™

Tractor

Part number 48038068

2nd edition English

October 2017

Replaces part number 47985319





SERVICE MANUAL

**T5.110 Electro Command™ With 16x16 Semi-Powershift transmission
[ZFLC00554 -]**

**T5.120 Electro Command™ With 16x16 Semi-Powershift transmission
[ZFLC00657 -]**

Link Product / Engine

| Product | Market Product | Engine |
|--|-----------------------|----------------|
| T5.110 Electro Command™ With 16x16 Semi-Powershift transmission [ZFLC00554 -] | North America | F5GFL413B*B015 |
| T5.120 Electro Command™ With 16x16 Semi-Powershift transmission [ZFLC00657 -] | North America | F5GFL413A*B023 |

Contents

INTRODUCTION

| | |
|---|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.216] Fuel tanks | 10.2 |
| [10.206] Fuel filters | 10.3 |
| [10.202] Air cleaners and lines | 10.4 |
| [10.254] Intake and exhaust manifolds and muffler | 10.5 |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment..... | 10.6 |
| [10.501] Exhaust Gas Recirculation (EGR) exhaust treatment..... | 10.7 |
| [10.400] Engine cooling system | 10.8 |
| [10.414] Fan and drive | 10.9 |
| [10.310] Aftercooler..... | 10.10 |
| [10.304] Engine lubrication system..... | 10.11 |
| [10.218] Fuel injection system..... | 10.12 |
| Clutch | 18 |
| [18.100] Clutch mechanical release control | 18.1 |
| [18.112] Slip clutch or flywheel damper | 18.2 |
| Transmission | 21 |
| [21.111] Semi-Powershift transmission | 21.1 |
| [21.133] Semi-Powershift transmission external controls | 21.2 |
| [21.103] Semi-Powershift transmission hydraulic components..... | 21.3 |
| [21.152] Semi-Powershift transmission internal components | 21.4 |
| [21.160] Creeper | 21.5 |
| [21.109] Transmission cooler and lines..... | 21.6 |
| Four-Wheel Drive (4WD) system | 23 |
| [23.202] Electro-hydraulic control | 23.1 |

| | |
|---|-----------|
| [23.314] Drive shaft..... | 23.2 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| [25.122] Axle suspension control..... | 25.4 |
| Rear axle system..... | 27 |
| [27.100] Powered rear axle..... | 27.1 |
| [27.106] Rear bevel gear set and differential..... | 27.2 |
| [27.120] Planetary and final drives | 27.3 |
| Power Take-Off (PTO)..... | 31 |
| [31.104] Rear electro-hydraulic control..... | 31.1 |
| [31.114] Two-speed rear Power Take-Off (PTO) | 31.2 |
| [31.116] Three-speed rear Power Take-Off (PTO) | 31.3 |
| [31.142] Front Power Take-Off (PTO) control | 31.4 |
| [31.146] Front Power Take-Off (PTO) | 31.5 |
| Brakes and controls | 33 |
| [33.202] Hydraulic service brakes | 33.1 |
| [33.110] Parking brake or parking lock | 33.2 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.204] Remote control valves | 35.2 |
| [35.100] Main lift system..... | 35.3 |
| [35.160] Front hitch controls and lines | 35.4 |
| [35.162] Front hitch cylinders and lines | 35.5 |
| [35.116] Three-point hitch cylinder | 35.6 |
| [35.304] Combination pump units | 35.7 |
| Hitches, drawbars, and implement couplings..... | 37 |

| | |
|---|-----------|
| [37.100] Drawbars and towing hitches | 37.1 |
| [37.110] Rear three-point hitch | 37.2 |
| [37.120] Rear three-point hitch linkage | 37.3 |
| [37.162] Front hitch | 37.4 |
| [37.166] Front hitch linkage | 37.5 |
| Frames and ballasting | 39 |
| [39.140] Ballasts and supports | 39.1 |
| Steering | 41 |
| [41.101] Steering control | 41.1 |
| [41.106] Tie rods | 41.2 |
| [41.200] Hydraulic control components | 41.3 |
| [41.216] Cylinders | 41.4 |
| Wheels | 44 |
| [44.511] Front wheels | 44.1 |
| [44.520] Rear wheels | 44.2 |
| Cab climate control | 50 |
| [50.100] Heating | 50.1 |
| [50.104] Ventilation | 50.2 |
| [50.200] Air conditioning | 50.3 |
| Electrical systems | 55 |
| [55.100] Harnesses and connectors | 55.1 |
| [55.525] Cab engine controls | 55.2 |
| [55.015] Engine control system | 55.3 |
| [55.201] Engine starting system | 55.4 |
| [55.301] Alternator | 55.5 |
| [55.302] Battery | 55.6 |
| [55.011] Fuel tank system | 55.7 |
| [55.010] Fuel injection system | 55.8 |

| | |
|--|-----------|
| [55.014] Engine intake and exhaust system..... | 55.9 |
| [55.988] Selective Catalytic Reduction (SCR) electrical system | 55.10 |
| [55.989] Exhaust Gas Recirculation (EGR) electrical system | 55.11 |
| [55.640] Electronic modules | 55.12 |
| [55.513] Cab transmission controls..... | 55.13 |
| [55.024] Transmission control system | 55.14 |
| [55.020] Transmission speed sensors..... | 55.15 |
| [55.022] Transmission temperature sensors | 55.16 |
| [55.045] Front axle control system | 55.17 |
| [55.031] Parking brake electrical system | 55.18 |
| [55.512] Cab controls..... | 55.19 |
| [55.035] Remote control valve electric control | 55.20 |
| [55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls..... | 55.21 |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... | 55.22 |
| [55.523] Cab hitch controls | 55.23 |
| [55.130] Rear three-point hitch electronic control system | 55.24 |
| [55.202] Cold start aid | 55.25 |
| [55.785] Precision farming system | 55.26 |
| [55.905] ISOBUS components | 55.27 |
| [55.911] Satellite navigation systems..... | 55.28 |
| [55.680] Autopilot/Autoguidance | 55.29 |
| [55.518] Wiper and washer system..... | 55.30 |
| [55.404] External lighting | 55.31 |
| [55.405] External lighting switches and relays | 55.32 |
| [55.408] Warning indicators, alarms, and instruments | 55.33 |
| [55.988] Selective Catalytic Reduction (SCR) electrical system | 55.34 |
| [55.DTC] FAULT CODES..... | 55.35 |
| Front loader and bucket..... | 82 |

| | |
|--|-----------|
| [82.100] Arm..... | 82.1 |
| Accessories | 88 |
| [88.100] Accessories | 88.1 |
| Platform, cab, bodywork, and decals..... | 90 |
| [90.118] Protections and footboards..... | 90.1 |
| [90.150] Cab..... | 90.2 |
| [90.151] Cab interior..... | 90.3 |
| [90.160] Cab interior trim and panels..... | 90.4 |
| [90.154] Cab doors and hatches | 90.5 |
| [90.156] Cab windshield and windows | 90.6 |
| [90.120] Mechanically-adjusted operator seat..... | 90.7 |
| [90.124] Pneumatically-adjusted operator seat..... | 90.8 |
| [90.100] Engine hood and panels | 90.9 |
| [90.102] Engine shields, hood latches, and trims | 90.10 |
| [90.116] Fenders and guards..... | 90.11 |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com