

SERVICE MANUAL

**T8.320 / T8.350 / T8.380 / T8.410 / T8.435 /
T8.380 SmartTrax™ / T8.410 SmartTrax™ /
T8.435 SmartTrax™
Continuously Variable Transmission (CVT)
Tractor**

PIN ZGRE05001 and above; PIN ZHRE01013 and above

Part number 48123734

1st edition English
April 2017





SERVICE MANUAL

T8.320 CVT TIER 2 [ZGRE05001 -], T8.350 CVT TIER 2 [ZGRE05001 -], T8.380 CVT TIER 2 [ZGRE05001 -], T8.380 SmartTrax™ CVT TIER 2 [ZGRE05001 -], T8.410 CVT TIER 2 [ZGRE05001 -], T8.410 SmartTrax™ CVT TIER 2 [ZGRE05001 -], T8.435 CVT TIER 2 [ZGRE05001 -], T8.435 SmartTrax™ CVT TIER 2 [ZGRE05001 -]

Link Product / Engine

Product	Market Product	Engine
T8.320 CVT TIER 2 [ZGRE05001 -]	Asia Pacific	F2CFA613G*E024
T8.320 CVT TIER 2 [ZGRE05001 -]	Middle East Africa	F2CFA613G*E024
T8.320 CVT TIER 2 [ZGRE05001 -]	Latin America	F2CFA613G*E024
T8.350 CVT TIER 2 [ZGRE05001 -]	Latin America	F2CFA613D*E024
T8.350 CVT TIER 2 [ZGRE05001 -]	Asia Pacific	F2CFA613D*E024
T8.350 CVT TIER 2 [ZGRE05001 -]	Middle East Africa	F2CFA613D*E024
T8.380 CVT TIER 2 [ZGRE05001 -]	Asia Pacific	F2CFA613B*E024
T8.380 CVT TIER 2 [ZGRE05001 -]	Latin America	F2CFA613B*E024
T8.380 CVT TIER 2 [ZGRE05001 -]	Middle East Africa	F2CFA613B*E024
T8.410 CVT TIER 2 [ZGRE05001 -]	Latin America	F2CFA614D*E022
T8.410 CVT TIER 2 [ZGRE05001 -]	Asia Pacific	F2CFA614D*E022
T8.410 CVT TIER 2 [ZGRE05001 -]	Middle East Africa	F2CFA614D*E022
T8.435 CVT TIER 2 [ZGRE05001 -]	Latin America	F2CFA614A*E022
T8.435 CVT TIER 2 [ZGRE05001 -]	Asia Pacific	F2CFA614A*E022
T8.435 CVT TIER 2 [ZGRE05001 -]	Middle East Africa	F2CFA614A*E022
T8.380 SmartTrax™ CVT TIER 2 [ZGRE05001 -]	Latin America	F2CFA613B*E024
T8.380 SmartTrax™ CVT TIER 2 [ZGRE05001 -]	Middle East Africa	F2CFA613B*E024
T8.380 SmartTrax™ CVT TIER 2 [ZGRE05001 -]	Asia Pacific	F2CFA613B*E024
T8.410 SmartTrax™ CVT TIER 2 [ZGRE05001 -]	Asia Pacific	F2CFA614D*E022
T8.410 SmartTrax™ CVT TIER 2 [ZGRE05001 -]	Middle East Africa	F2CFA614D*E022
T8.410 SmartTrax™ CVT TIER 2 [ZGRE05001 -]	Latin America	F2CFA614D*E022
T8.435 SmartTrax™ CVT TIER 2 [ZGRE05001 -]	Asia Pacific	F2CFA614A*E022
T8.435 SmartTrax™ CVT TIER 2 [ZGRE05001 -]	Latin America	F2CFA614A*E022
T8.435 SmartTrax™ CVT TIER 2 [ZGRE05001 -]	Middle East Africa	F2CFA614A*E022

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.202] Air cleaners and lines	10.3
[10.206] Fuel filters	10.4
[10.216] Fuel tanks	10.5
[10.218] Fuel injection system.....	10.6
[10.254] Intake and exhaust manifolds and muffler	10.7
[10.304] Engine lubrication system.....	10.8
[10.310] Aftercooler.....	10.9
[10.400] Engine cooling system	10.10
[10.414] Fan and drive	10.11
Power coupling	19
[19.100] Drive shaft.....	19.1
[19.110] Flywheel damper	19.2
[19.120] Drive shaft shield assembly	19.3
Transmission	21
[21.504] Continuously Variable Transmission (CVT)	21.1
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.2
[21.506] Continuously Variable Transmission (CVT) hydraulic components	21.3
[21.507] Continuously Variable Transmission (CVT) internal components	21.4
[21.900] Hydraulic pump drive.....	21.5
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2

Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
[27.610] Rear axle track yoke assembly	27.4
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control	33.4
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump	35.3
[35.114] Three-point hitch control valve	35.4
[35.124] Three-point hitch hydraulic adjustment	35.5
[35.204] Remote control valves	35.6
[35.300] Reservoir, cooler, and filters.....	35.7

[35.304] Combination pump units	35.8
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
[37.162] Front hitch	37.2
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
[41.432] Autoguidance steering	41.4
Wheels	44
[44.520] Rear wheels	44.1
Tracks and track suspension.....	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels.....	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system.....	55.2
[55.012] Engine cooling system	55.3
[55.013] Engine oil system	55.4

[55.014] Engine intake and exhaust system.....	55.5
[55.015] Engine control system.....	55.6
[55.024] Transmission control system.....	55.7
[55.045] Front axle control system	55.8
[55.047] Steering control system	55.9
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.10
[55.100] Harnesses and connectors.....	55.11
[55.130] Rear three-point hitch electronic control system.....	55.12
[55.302] Battery.....	55.13
[55.408] Warning indicators, alarms, and instruments	55.14
[55.512] Cab controls.....	55.15
[55.640] Electronic modules.....	55.16
[55.DTC] FAULT CODES.....	55.17
Platform, cab, bodywork, and decals.....	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4
[90.151] Cab interior.....	90.5
[90.160] Cab interior trim and panels.....	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com