

SERVICE MANUAL

Workmaster™ 35

Workmaster™ 40

Tier 4B (final)

Compact Tractor

Workmaster™ 35 ROPS - From PIN LSM0W35Rxx0010001 to LSM0W35RHH0010200

Workmaster™ 40 ROPS - From PIN LSM0W40Rxx0010001 to LSM0W40RKH0010198

Part number 48144024

1st edition English
June 2017





SERVICE MANUAL

**Workmaster™ 35 Tier 4B (final), ROPS [LSM0W35Rxx0010001 -
LSM0W35RHH0010200]**

**Workmaster™ 40 Tier 4B (final), ROPS [LSM0W40Rxx0010001 -
LSM0W40RKH0010198]**

Link Product / Engine

| Product | Market Product | Engine |
|--|-----------------------|---------------|
| Workmaster™ 35 Tier 4B (final), ROPS [LSM0W35Rxx0010001 - LSM0W35RHH0010200] | North America | L3C19-T5 |
| Workmaster™ 40 Tier 4B (final), ROPS [LSM0W40Rxx0010001 - LSM0W40RKH0010198] | North America | L3C19-T4 |

Contents

INTRODUCTION

| | |
|---|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.216] Fuel tanks | 10.2 |
| [10.206] Fuel filters | 10.3 |
| [10.218] Fuel injection system..... | 10.4 |
| [10.202] Air cleaners and lines | 10.5 |
| [10.254] Intake and exhaust manifolds and muffler | 10.6 |
| [10.501] Exhaust Gas Recirculation (EGR) exhaust treatment..... | 10.7 |
| [10.400] Engine cooling system | 10.8 |
| [10.414] Fan and drive | 10.9 |
| Clutch | 18 |
| [18.100] Clutch mechanical release control | 18.1 |
| [18.110] Clutch and components | 18.2 |
| Power coupling | 19 |
| [19.110] Flywheel damper | 19.1 |
| Transmission | 21 |
| [21.114] Mechanical transmission | 21.1 |
| [21.130] Mechanical transmission external controls..... | 21.2 |
| [21.140] Mechanical transmission internal components..... | 21.3 |
| [21.110] Master clutch housing | 21.4 |
| Four-Wheel Drive (4WD) system | 23 |
| [23.314] Drive shaft..... | 23.1 |
| [23.101] Mechanical control | 23.2 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |

| | |
|---|-----------|
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| Rear axle system..... | 27 |
| [27.106] Rear bevel gear set and differential..... | 27.1 |
| [27.120] Planetary and final drives | 27.2 |
| Hydrostatic drive..... | 29 |
| [29.200] Mechanical control | 29.1 |
| [29.100] Transmission and steering hydrostatic control | 29.2 |
| [29.204] Reservoir, cooler, and lines | 29.3 |
| [29.218] Pump and motor components..... | 29.4 |
| [29.202] Hydrostatic transmission | 29.5 |
| Power Take-Off (PTO)..... | 31 |
| [31.101] Rear mechanical control | 31.1 |
| [31.104] Rear electro-hydraulic control..... | 31.2 |
| [31.110] One-speed rear Power Take-Off (PTO) | 31.3 |
| [31.120] Central Power Take-Off (PTO) | 31.4 |
| Brakes and controls | 33 |
| [33.110] Parking brake or parking lock | 33.1 |
| [33.120] Mechanical service brakes | 33.2 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.300] Reservoir, cooler, and filters..... | 35.2 |
| [35.104] Fixed displacement pump..... | 35.3 |
| [35.350] Safety and main relief valves | 35.4 |
| [35.204] Remote control valves | 35.5 |
| [35.114] Three-point hitch control valve | 35.6 |
| [35.116] Three-point hitch cylinder | 35.7 |
| [35.724] Front loader hydraulic system control..... | 35.8 |

| | |
|--|-----------|
| Hitches, drawbars, and implement couplings | 37 |
| [37.100] Drawbars and towing hitches | 37.1 |
| [37.108] Rear three-point hitch external controls..... | 37.2 |
| [37.110] Rear three-point hitch | 37.3 |
| Steering | 41 |
| [41.101] Steering control | 41.1 |
| [41.106] Tie rods..... | 41.2 |
| [41.200] Hydraulic control components..... | 41.3 |
| [41.216] Cylinders | 41.4 |
| [41.206] Pump | 41.5 |
| Wheels | 44 |
| [44.511] Front wheels..... | 44.1 |
| [44.520] Rear wheels | 44.2 |
| Electrical systems | 55 |
| [55.000] Electrical system | 55.1 |
| [55.100] Harnesses and connectors..... | 55.2 |
| [55.525] Cab engine controls..... | 55.3 |
| [55.201] Engine starting system | 55.4 |
| [55.301] Alternator..... | 55.5 |
| [55.640] Electronic modules | 55.6 |
| [55.031] Parking brake electrical system..... | 55.7 |
| [55.512] Cab controls..... | 55.8 |
| [55.023] Transmission position sensors and switches | 55.9 |
| [55.052] Central or middle Power Take-Off (PTO) control system | 55.10 |
| [55.610] Ground speed control | 55.11 |
| [55.DTC] FAULT CODES..... | 55.12 |
| Platform, cab, bodywork, and decals | 90 |
| [90.110] Operator platform less cab | 90.1 |

[90.114] Operator protections 90.2
[90.120] Mechanically-adjusted operator seat..... 90.3
[90.100] Engine hood and panels 90.4
[90.116] Fenders and guards 90.5

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com