

Farmlift 632
Farmlift 635
Farmlift 735
Farmlift 742
Farmlift 935
Stage IIIB
Telescopic Handler

SERVICE MANUAL

Part number 48192604

English

August 2017

© 2017 CNH Industrial Italia S.p.A. All Rights Reserved.



Link Product / Engine

Product	Market Product	Engine
Farmlift 632 telehandler 6m 120 HP	Europe	F4HFE413C*A
Farmlift 635 Telehandler 6m 140 hp	Europe	F4HFE413J*A
Farmlift 735 Telehandler 7m 120 HP - Dump Angle Increased [FNHZF735NGKC35101 -]	Europe	F4HFE413C*A
Farmlift 742 Telehandler 7m 140 HP	Europe	F4HFE413J*A
Farmlift 935 Telehandler 10m 120 HP	Europe	F4HFE413C*A

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.218] Fuel injection system.....	10.2
[10.202] Air cleaners and lines	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.400] Engine cooling system	10.5
[10.304] Engine lubrication system.....	10.6
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.155] Powershift transmission internal components.....	21.3
[21.120] Gearbox	21.4
[21.700] Torque converter	21.5
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2

[33.220] Trailer brake hydraulic control.....	33.3
[33.204] Front axle brake	33.4
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump	35.2
[35.106] Variable displacement pump	35.3
[35.359] Main control valve	35.4
[35.357] Pilot system	35.5
[35.128] Auxiliary hydraulic function control	35.6
[35.752] Hydraulic fan drive cooling system.....	35.7
[35.100] Main lift system.....	35.8
[35.701] Front loader arm hydraulic system	35.9
[35.736] Boom hydraulic system	35.10
[35.734] Tool quick coupler hydraulic system	35.11
[35.740] Telescopic arm hydraulic system.....	35.12
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.201] Engine starting system	55.2
[55.301] Alternator	55.3
[55.011] Fuel tank system	55.4
[55.512] Cab controls.....	55.5

[55.404] External lighting	55.6
[55.514] Cab lighting	55.7
[55.408] Warning indicators, alarms, and instruments	55.8
[55.DTC] FAULT CODES.....	55.9
Telescopic single arm	83
[83.122] Telescopic arm	83.1
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com