

# SERVICE MANUAL

**T9.435 / T9.480 / T9.530 / T9.565**

**T9.600 / T9.645 / T9.700**

**Tier 4B (final)**

**Tractor**

*PIN JEEZ00000FF405001 and above*

**Part number 48193205**

1<sup>st</sup> edition English  
October 2017





## SERVICE MANUAL

**T9.435 CVT, TIER 4B [JEEZ00000FF405001 - ], T9.435 Powershift, TIER 4B [JEEZ00000FF405001 - ], T9.480 CVT, TIER 4B [JEEZ00000FF405001 - ], T9.480 Powershift, TIER 4B [JEEZ00000FF405001 - ], T9.530 CVT, TIER 4B [JEEZ00000FF405001 - ], T9.530 CVT, scraper, TIER 4B [JEEZ00000FF405001 - ], T9.530 Powershift, TIER 4B [JEEZ00000FF405001 - ], T9.530 Powershift, scraper, TIER 4B [JEEZ00000FF405001 - ], T9.565 CVT, TIER 4B [JEEZ00000FF405001 - ], T9.565 Powershift, TIER 4B [JEEZ00000FF405001 - ], T9.600 CVT, TIER 4B [JEEZ00000FF405001 - ], T9.600 CVT, factory SmartTrax™, TIER 4B [JEEZ00000FF405001 - ], T9.600 CVT, scraper, TIER 4B [JEEZ00000FF405001 - ], T9.600 Powershift, TIER 4B [JEEZ00000FF405001 - ], T9.600 Powershift, factory SmartTrax™, TIER 4B [JEEZ00000FF405001 - ], T9.600 Powershift, scraper, TIER 4B [JEEZ00000FF405001 - ], T9.645 Powershift, TIER 4B [JEEZ00000FF405001 - ], T9.645 Powershift, factory SmartTrax™, TIER 4B [JEEZ00000FF405001 - ], T9.645 Powershift, scraper, TIER 4B [JEEZ00000FF405001 - ], T9.700 Powershift, TIER 4B [JEEZ00000FF405001 - ], T9.700 Powershift, factory SmartTrax™, Tier 4B [JEEZ00000FF405001 - ], T9.700 Powershift, scraper, TIER 4B [JEEZ00000FF405001 - ]**

# Link Product / Engine

Product	Market Product	Engine
T9.435 Powershift, TIER 4B [JEEZ00000FF405001 - ]	North America	F2CFE614A*B
T9.435 CVT, TIER 4B [JEEZ00000FF405001 - ]	North America	F2CFE614A*B
T9.480 Powershift, TIER 4B [JEEZ00000FF405001 - ]	North America	F3HFE613G*B001
T9.480 CVT, TIER 4B [JEEZ00000FF405001 - ]	North America	F3HFE613G*B001
T9.530 Powershift, TIER 4B [JEEZ00000FF405001 - ]	North America	F3HFE613B*B001
T9.530 Powershift, scraper, TIER 4B [JEEZ00000FF405001 - ]	North America	F3HFE613B*B001
T9.530 CVT, TIER 4B [JEEZ00000FF405001 - ]	North America	F3HFE613B*B001
T9.530 CVT, scraper, TIER 4B [JEEZ00000FF405001 - ]	North America	F3HFE613B*B001
T9.565 Powershift, TIER 4B [JEEZ00000FF405001 - ]	North America	F3HFE613B*B001
T9.565 CVT, TIER 4B [JEEZ00000FF405001 - ]	North America	F3HFE613B*B001
T9.600 Powershift, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613J*B001
T9.600 Powershift, scraper, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613J*B001
T9.600 Powershift, factory SmartTrax™, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613J*B001
T9.600 CVT, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613J*B001
T9.600 CVT, scraper, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613J*B001
T9.600 CVT, factory SmartTrax™, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613J*B001
T9.645 Powershift, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613G*B001
T9.645 Powershift, scraper, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613G*B001
T9.645 Powershift, factory SmartTrax™, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613G*B001
T9.700 Powershift, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613F*B001
T9.700 Powershift, scraper, TIER 4B [JEEZ00000FF405001 - ]	North America	F3DFE613F*B001
T9.700 Powershift, factory SmartTrax™, Tier 4B [JEEZ00000FF405001 - ]	North America	F3DFE613F*B001

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.4
[10.400] Engine cooling system .....	10.5
[10.414] Fan and drive .....	10.6
[10.310] Aftercooler.....	10.7
<b>Power coupling</b> .....	<b>19</b>
[19.100] Drive shaft.....	19.1
[19.110] Flywheel damper .....	19.2
<b>Transmission</b> .....	<b>21</b>
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.155] Powershift transmission internal components.....	21.3
[21.504] Continuously Variable Transmission (CVT) .....	21.4
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.5
[21.506] Continuously Variable Transmission (CVT) hydraulic components .....	21.6
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.7
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.310] Final drives .....	25.3
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1

[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO) .....</b>	<b>31</b>
[31.104] Rear electro-hydraulic control .....	31.1
[31.110] One-speed rear Power Take-Off (PTO) .....	31.2
[31.220] Gearbox .....	31.3
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.102] Pump control valves.....	35.4
[35.105] Charge pump.....	35.5
[35.304] Combination pump units .....	35.6
[35.204] Remote control valves .....	35.7
[35.600] High flow hydraulics.....	35.8
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.100] Drawbars and towing hitches .....	37.1
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump .....	41.3
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1

[44.520] Rear wheels .....	44.2
<b>Tracks and track suspension .....</b>	<b>48</b>
[48.130] Track frame and driving wheels .....	48.1
[48.100] Tracks .....	48.2
[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
<b>Cab climate control .....</b>	<b>50</b>
[50.104] Ventilation .....	50.1
[50.200] Air conditioning .....	50.2
[50.300] Cab pressurizing system .....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors .....	55.2
[55.640] Electronic modules .....	55.3
[55.201] Engine starting system .....	55.4
[55.301] Alternator .....	55.5
[55.302] Battery .....	55.6
[55.010] Fuel injection system .....	55.7
[55.014] Engine intake and exhaust system .....	55.8
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.9
[55.640] Electronic modules .....	55.10
[55.024] Transmission control system .....	55.11
[55.045] Front axle control system .....	55.12
[55.046] Rear axle control system .....	55.13
[55.522] Cab Power Take-Off (PTO) controls .....	55.14
[55.048] Rear Power Take-Off (PTO) control system .....	55.15
[55.035] Remote control valve electric control .....	55.16
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls .....	55.17

[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.18
[55.130] Rear three-point hitch electronic control system .....	55.19
[55.DTC] FAULT CODES.....	55.20
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.100] Engine hood and panels .....	90.4
[90.102] Engine shields, hood latches, and trims .....	90.5

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)