

**FARMALL 85A
FARMALL 95A
FARMALL 105A
FARMALL 115A**
Tractor

SERVICE MANUAL

Part number 48194628
English
September 2017
© 2017 CNHI International. All Rights Reserved.



Contents

INTRODUCTION

Engine.....	10
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.1
Clutch	18
[18.110] Clutch and components	18.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.112] Power shuttle transmission.....	21.3
[21.154] Power shuttle transmission internal components	21.4
[21.120] Gearbox	21.5
[21.160] Creeper	21.6
[21.162] Reverser	21.7
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.124] Final drive hub, steering knuckles, and shafts	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1

Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.220] Trailer brake hydraulic control	33.2
[33.224] Trailer brake pneumatic control	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.525] Auxiliary hydraulic valves and lines	35.3
[35.100] Main lift system.....	35.4
Steering.....	41
[41.200] Hydraulic control components.....	41.1
[41.206] Pump	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels.....	44.1
Cab climate control	50
[50.200] Air conditioning.....	50.1
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.525] Cab engine controls.....	55.3
[55.015] Engine control system.....	55.4
[55.201] Engine starting system	55.5
[55.301] Alternator.....	55.6
[55.302] Battery.....	55.7
[55.202] Cold start aid	55.8
[55.011] Fuel tank system	55.9
[55.010] Fuel injection system.....	55.10

[55.014] Engine intake and exhaust system.....	55.11
[55.013] Engine oil system	55.12
[55.640] Electronic modules	55.13
[55.024] Transmission control system	55.14
[55.048] Rear Power Take-Off (PTO) control system	55.15
[55.049] Front Power Take-Off (PTO) control system	55.16
[55.512] Cab controls.....	55.17
[55.130] Rear three-point hitch electronic control system	55.18
[55.408] Warning indicators, alarms, and instruments	55.19
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com