

SERVICE MANUAL

T6.125 / T6.145 / T6.155 / T6.165

T6.175 / T6.160/ T6.180

T6.145 Dynamic Command

T6.155 Dynamic Command

T6.165 Dynamic Command

T6.175 Dynamic Command

T6.180 Dynamic Command

T6.145 AutoCommand™

T6.155 AutoCommand™

T6.165 AutoCommand™

T6.175 AutoCommand™

T6.180 AutoCommand™

Tier 4B (FINAL)

Tractor

*PIN HACT61***HEG01001 and above*

Part number 51666758

English

January 2020





SERVICE MANUAL

T6.125 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6125*HEG01001 -], T6.145 AutoCommand™ Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6145*HEG01001 -], T6.145 Dynamic Command Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6145*HEG01001 -], T6.145 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6145*HEG01001 -], T6.155 AutoCommand™ Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6155*HEG01001 -], T6.155 Dynamic Command Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6155*HEG01001 -], T6.155 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6155*HEG01001 -], T6.160 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6160*KEG01001 -], T6.165 AutoCommand™ Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6165*HEG01001 -], T6.165 Dynamic Command Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6165*HEG01001 -], T6.165 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6165*HEG01001 -], T6.175 AutoCommand™ Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6175*HEG01001 -], T6.175 Dynamic Command Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6175*HEG01001 -], T6.175 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6175*HEG01001 -], T6.180 AutoCommand™ Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6180*JEG01001 -], T6.180 Dynamic Command Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6180*HEG01001 -], T6.180 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6180*HEG01001 -]

Link Product / Engine

Product	Market Product	Engine
T6.145 AutoCommand™ Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6145*HEG01001 -]	North America	F4DFE414W*B001
T6.155 AutoCommand™ Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6155*HEG01001 -]	North America	F4DFE414X*B001
T6.165 AutoCommand™ Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6165*HEG01001 -]	North America	F4DFE414Y*B001
T6.175 AutoCommand™ Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6175*HEG01001 -]	North America	F4DFE414Z*B001
T6.180 AutoCommand™ Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6180*JEG01001 -]	North America	F4DFE614G*B002
T6.125 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6125*HEG01001 -]	North America	F4DFE414D*B002
T6.145 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6145*HEG01001 -]	North America	F4DFE4134*B011
T6.145 Dynamic Command Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6145*HEG01001 -]	North America	F4DFE414W*B001
T6.155 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6155*HEG01001 -]	North America	F4DFE4133*B014
T6.155 Dynamic Command Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6155*HEG01001 -]	North America	F4DFE414X*B001
T6.160 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6160*KEG01001 -]	North America	F4DFE614B*B002
T6.165 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6165*HEG01001 -]	North America	F4DFE4132*B010
T6.165 Dynamic Command Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6165*HEG01001 -]	North America	F4DFE414Y*B001

Product	Market Product	Engine
T6.175 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6175*HEG01001 -]	North America	F4DFE4131*B015
T6.175 Dynamic Command Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6175*HEG01001 -]	North America	F4DFE414Z*B001
T6.180 Standard - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6180*HEG01001 -]	North America	F4DFE6132*B007
T6.180 Dynamic Command Sidewinder II - TIER 4B (FINAL) and STAGE IV (Mother Regulation) [HACT6180*HEG01001 -]	North America	F4DFE614G*B002

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.202] Air cleaners and lines	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
[10.310] Aftercooler.....	10.8
[10.304] Engine lubrication system.....	10.9
Clutch	18
[18.112] Slip clutch or flywheel damper	18.1
Transmission.....	21
[21.111] Semi-Powershift transmission	21.1
[21.133] Semi-Powershift transmission external controls	21.2
[21.103] Semi-Powershift transmission hydraulic components.....	21.3
[21.152] Semi-Powershift transmission internal components	21.4
[21.504] Continuously Variable Transmission (CVT)	21.5
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.6
[21.506] Continuously Variable Transmission (CVT) hydraulic components	21.7
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.8
[21.160] Creeper	21.9
[21.166] Overdrive.....	21.10
[21.109] Transmission cooler and lines.....	21.11
Four-Wheel Drive (4WD) system	23

[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control.....	25.4
[25.400] Non-powered front axle	25.5
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
[31.116] Three-speed rear Power Take-Off (PTO)	31.3
[31.142] Front Power Take-Off (PTO) control	31.4
[31.146] Front Power Take-Off (PTO)	31.5
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control	33.4
[33.204] Front axle brake.....	33.5
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3

[35.106] Variable displacement pump	35.4
[35.105] Charge pump.....	35.5
[35.322] Regulated/Low pressure system	35.6
[35.204] Remote control valves	35.7
[35.220] Auxiliary hydraulic pump	35.8
[35.114] Three-point hitch control valve	35.9
[35.116] Three-point hitch cylinder	35.10
[35.160] Front hitch controls and lines	35.11
[35.230] Priority valves	35.12
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
[37.106] Automatic pickup hitch	37.2
[37.120] Rear three-point hitch linkage.....	37.3
[37.162] Front hitch.....	37.4
Frames and ballasting	39
[39.100] Frame	39.1
[39.140] Ballasts and supports	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump	41.4
[41.216] Cylinders	41.5
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating.....	50.1

[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.014] Engine intake and exhaust system.....	55.7
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.8
[55.640] Electronic modules	55.9
[55.024] Transmission control system	55.10
[55.020] Transmission speed sensors	55.11
[55.021] Transmission pressure sensors and switches	55.12
[55.022] Transmission temperature sensors	55.13
[55.023] Transmission position sensors and switches	55.14
[55.040] Four-Wheel Drive (4WD) control system.....	55.15
[55.045] Front axle control system	55.16
[55.046] Rear axle control system.....	55.17
[55.048] Rear Power Take-Off (PTO) control system	55.18
[55.049] Front Power Take-Off (PTO) control system	55.19
[55.030] Service brake electrical system	55.20
[55.031] Parking brake electrical system	55.21
[55.032] Trailer brake electrical system	55.22
[55.035] Remote control valve electric control	55.23
[55.036] Hydraulic system control	55.24
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.25

[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.26
[55.047] Steering control system	55.27
[55.911] Satellite navigation systems.....	55.28
[55.680] Autopilot/Autoguidance	55.29
[55.518] Wiper and washer system.....	55.30
[55.405] External lighting switches and relays	55.31
[55.408] Warning indicators, alarms, and instruments	55.32
[55.DTC] FAULT CODES.....	55.33
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1
[90.156] Cab windshield and windows	90.2
[90.100] Engine hood and panels	90.3
[90.116] Fenders and guards	90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com