

**OPERATOR'S MANUAL**

# **MANURE SPREADER**

**MS2320**

**MS2326**



**HSMFG1212**

**5HPMSSD2026**

# CONTENTS

|  |       |
|--|-------|
| Table of Contents .....                                    | 1     |
| Warranty & Notes .....                                     | 2     |
| Dealer Pre-Delivery Checklist .....                        | 3     |
| Dealer Delivery Checklist .....                            | 5     |
| Specifications .....                                       | 7-8   |
| Be Alert Symbol .....                                      | 9     |
| Explanation of Safety Signs .....                          | 10    |
| Danger - Warning Signs .....                               | 11-12 |
| Warning - Owner Must Read and Understand .....             | 13    |
| Bolt Torque Chart .....                                    | 14    |
| Set-Up & Assembly .....                                    | 15    |
| Transporting .....   | 16    |
| Storage .....  | 17    |
| Preparing for Operation .....                              | 17-19 |
| Operation .....  | 20-25 |
| Adjustments .....  | 26-27 |
| Service .....  | 28-29 |
| Optional Features & Accessories .....                      | 30    |
| Lubrication Guide .....                                    | 31-34 |
| Troubleshooting Guide .....                                | 35    |
| Decal Location & Identification .....                      | 36-38 |
| Instructions for Ordering Parts - About Improvements ..... | 39    |
| Parts .....  | 40-79 |
| Service and Parts Notes .....                              | 80    |

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)