


OPERATOR'S MANUAL

Hydraulic DEBRIS BLOWER

BL2130

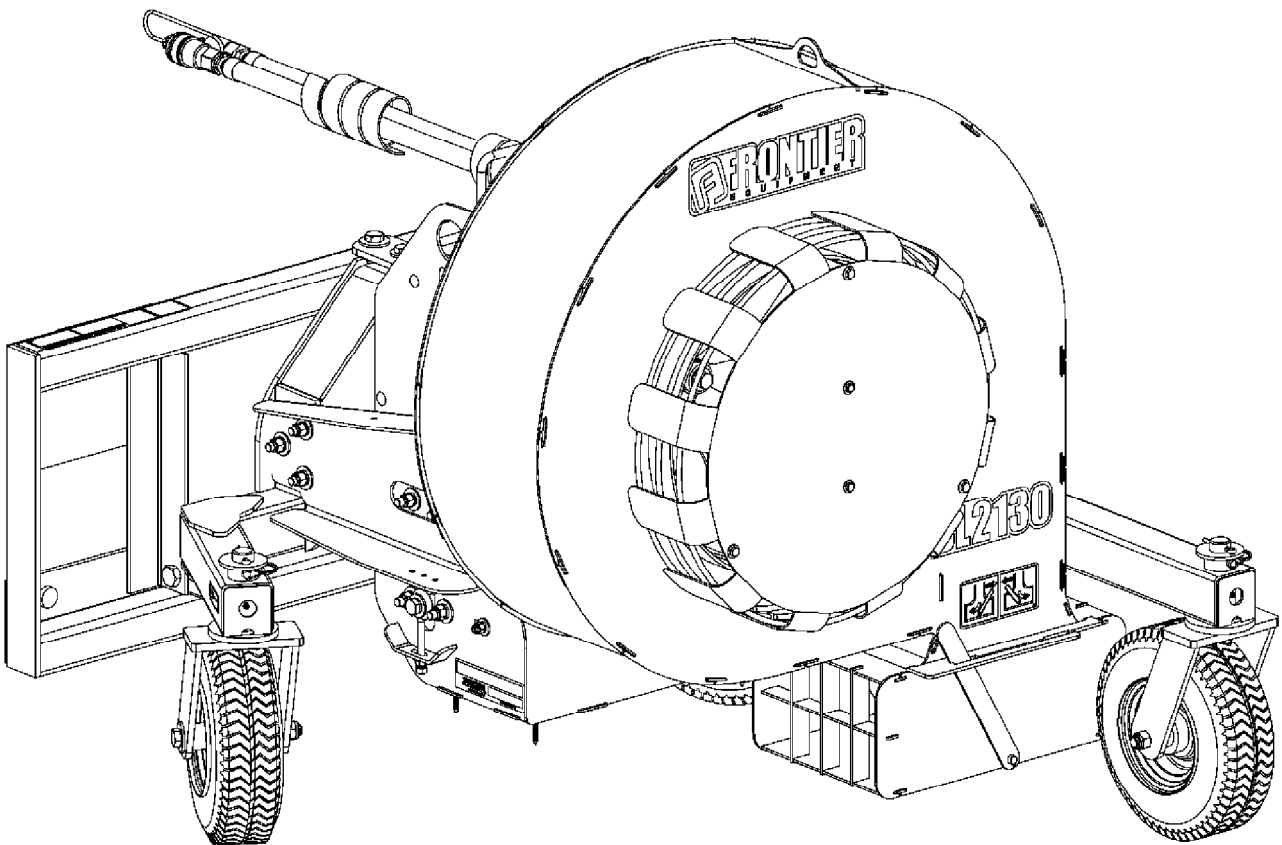

FRONTIER
EQUIPMENT

OM 0401-A
02/11

TABLE OF CONTENT

SPÉCIFICATIONS.....	3
INTRODUCTION – TO THE PURCHASER.....	4
SAFETY	5-11
Before Operation	5
Notice	6
Debris Blower	6
Before Operation.....	6
Debris Blower Operation	7
The Tractor	8
General Information	8
Operating the Tractor.....	8
During Operation.....	9
Maintenance	10
Transportation	11
Storage	11
DECALS.....	12
ASSEMBLY	13-18
Tractor Preparation	13
Debris Blower Assembly.....	13
Debris Blower removing front wooden crate	14
Installation of the Debris Blower	14
Installation of the Hydraulic Hoses	15
Installation of the Cooling Unit – 5RDF0036	16-17
Removing Debris Blower from Tractor.....	18

TABLE OF CONTENT

OPERATION	19-21
Optimum Performances	19
General Preparation	19
Operating Controls	20
Debris Blower Commands	20
Debris Blower Utilization	20
Nozzle air ejection Orientation	20
Adjustments	21
Belt Tension Adjustment	21
MAINTENANCE.....	22-26
Maintenance	22
Storage	22
Hydraulic Oil	22
Lubrication	23
Periodic Checks	23
Belt Replacement.....	24
Impeller Removing and Reinstallation.....	25
Troubleshooting	26
PARTS	27-36
Introduction	27
Manual Holder.....	27
Debris Blower –Belt Drive System	28-29
Debris Blower – Housing	30
Debris Blower – Impeller Housing.....	31
Debris Blower – Hitch and Wheels.....	32
Hydraulic Components	33
Hydraulic Motor - 5RD3910088.....	34-35
Cooling Unit – 5RDF0036 (Option).....	36
TORQUE SPECIFICATION TABLE	37-39

SPECIFICATION

Features and Specifications	BL2130
Recommended Flow	12 to 23 gpm
Recommended Pressure	2000 @ 3000 psi
Air flow	6061 cfm @ 20 gpm
Impeller dimension	29 3/4" x 10" – 12 blades
Impeller speed	1560 rpm to 20 gpm
Air velocity	141 m/h – 227 km/h
Outlet area	70.4 sq.in – 454.2 sq.cm
Drive	Belt 4-5VX560 "power band"
Impeller Drive	125 cc/rev hydraulic motor
Check Valve	Impeller motor
Main Hydraulic Hoses	3/4"
Approx. Set-up Time	2 to 3 hours (including hydraulic pump)
Directional control	Manual – left or right
Ground clearance	3 1/8"
Height adjustment	Determined by tractor
Caster wheel	3 wheels – 12" dia. X 3" pneumatic
Impeller housing	Rear & front panel: 10ga Housing edge : 12ga
Dimension	46 1/2" length x 48 1/2" height x 49 1/4" width
Weight	655 lbs

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com