

2100/2300 Series Combines

Service Manual No.7-88436

Table of Contents

| Description | PC Code | Section No. | Form No. |
|---|---------|--------------|----------|
| General | | Tab 1 | |
| Standard Torques | 6 | 1001 | 8-71601 |
| Fluid and Lubricants | 4 | 1010 | 7-62781 |
| Loctite Product Chart | | | 8-98902 |
| Engines | | Tab 2 | |
| Engine Removal and Installation | 24 | 2020 | 7-67440 |
| Refer to your Engine Service Manual for other Service Procedures | | | |
| Fuel | | Tab 3 | |
| Refer to your Engine Service Manual for Service Procedures | | | |
| Electrical | | Tab 4 | |
| How It Works | | 4000 | 7-88440 |
| How it works - See Serial Number breaks on Section Cover | 306 | 4000 | 7-89581 |
| Model Year 2001 Lighting Circuit | 22 | 4001 | 6-11650 |
| Wiring Schematics and Troubleshooting 2100 Series (Includes Poster Rac 7-65420) | 90 | 4002 | 7-62471 |
| Wiring Schematics and Troubleshooting 2100 Series - Refer to P.I.N. breaks on Section Cover (Includes Poster Rac 7-68220) | 90 | 4002 | 7-68200 |
| Wiring Schematics and Troubleshooting 2300 Series (Includes Poster Rac 7-85450) | 94 | 4002 | 7-85441 |
| Wiring Schematics and Troubleshooting 2300 Series - Refer to P.I.N. breaks on Section Cover (Includes Poster Rac 7-89220) | 98 | 4002 | 7-89210 |
| Wiring Schematics and Troubleshooting 2300 Series - Refer to P.I.N. breaks on Section Cover (Includes Poster Rac 7-94700) | 94 | 4002 | 7-94760 |
| Wiring Schematics and Troubleshooting 2300 Series - Refer to P.I.N. breaks on Section Cover (Includes Poster Rac 6-10800) | 100 | 4002 | 6-10840 |
| Wiring Schematics Poster - Refer to P.I.N. breaks on Poster | | | 6-12620 |
| Wiring Schematics Poster - Refer to P.I.N. breaks on Poster | | | 6-14650 |
| Neutral Start Switch | 4 | 4050 | 7-62440 |
| Feeder Reverser Motor | 26 | 4080 | 8-29250 |
| Battery Servicing and Testing | 10 | 4235 | 8-20291 |
| Alternator System | 26 | 4240 | 7-62451 |
| Steering | | Tab 5 | |
| Steering Hand Pump | 14 | 5020 | 7-62571 |
| Steering Cylinders | 10 | 5030 | 8-27582 |
| Steering Axles - Except Power Guide | 26 | 5040 | 7-63840 |

Reprinted

| Description | PC Code | Section No. | Form No. |
|---|---------|-------------|----------|
| Steering Axles - Power Guide Axle | 48 | 5054 | 8-91500 |
| Steering Priority Valve | 10 | 5080 | 7-62760 |
| Power Train | | Tab 6 | |
| Hydrostatic Operation | 126 | 6000 | 7-94900 |
| Hydrostatics | 32 | 6001 | 7-94910 |
| Hydrostatic Drive System Troubleshooting | 6 | 6005 | 8-29301 |
| Hydrostatic Drive System Testing | 8 | 6012 | 7-63520 |
| Foot-n-Inch Valve | 4 | 6015 | 7-62870 |
| Hydraulic Drive Pump Removal and Installation | 4 | 6017 | 7-63740 |
| Hydrostatic Drive Pump | 16 | 6018 | 7-34820 |
| Hydrostatic Drive Motor - Single Speed | 10 | 6030 | 7-34841 |
| Hydrostatic Drive Motor - Two Speed | 42 | 6031 | 8-27911 |
| Transmission and Hydrostatic Drive Motor Removal and Installation | 10 | 6035 | 7-64310 |
| Transmission Service | 46 | 6040 | 7-62703 |
| Final Drives - Standard and Heavy Duty - Removal and Overhaul | 18 | 6060 | 7-62563 |
| Final Drives - Standard and Heavy Duty - Removal, Adjusting | | | |
| Wheel Spacing and/or Final Drive Position, and Adhesive Kit Installation | 10 | 6061 | 7-67021 |
| PTO - How It Works | 36 | 6064 | 7-94920 |
| PTO Removal and Installation | 10 | 6065 | 7-37671 |
| PTO Service - 2144, 2166 | 28 | 6070 | 8-29371 |
| Servicing the PTO Housing - 2188 and 2388 Combines | 20 | 6071 | 8-29383 |
| Brakes | | Tab 7 | |
| Brake Assemblies - Removal and Overhaul | 14 | 7010 | 7-62541 |
| Master Brake Valve | 10 | 7020 | 7-62550 |
| European Park Brake | 14 | 7030 | 7-63790 |
| Hydraulics | | Tab 8 | |
| How It Works | 138 | 8000 | 7-88451 |
| Hydraulic Feeder Reverser Drive | 24 | 8001 | 6-11640 |
| Accumulator | 8 | 8005 | 7-63231 |
| Hydraulic Schematic and Troubleshooting 2100 Series | 24 | 8011 | 7-62460 |
| Hydraulic Schematic and Troubleshooting 2100 Series - Refer to P.I.N. breaks on Section Cover (Includes Poster Rac 7-68240) | 24 | 8011 | 7-68190 |
| Hydraulic Schematic and Troubleshooting 2300 Series (Includes Poster Rac 7-85431) | 26 | 8011 | 7-85421 |
| Hydraulic Schematic Rac 7- 89230 - Refer to P.I.N. breaks on Poster | | | 7-89231 |
| Hydraulic Schematic and Troubleshooting 2300 Series - Refer to P.I.N. breaks on Section Cover (Includes Poster Rac 6-10810) | 28 | 8011 | 6-10830 |
| Hydraulic Schematic Poster - Refer to P.I.N. breaks on Poster | | | 6-12630 |
| Pressure Regulator Valve | 10 | 8015 | 7-62830 |
| Auxiliary Gear Pump and PFC Pump | 20 | 8020 | 7-62920 |
| Hydraulic Valve Stack | 28 | 8030 | 7-62930 |

| Description | PC Code | Section No. | Form No. |
|--|---------|-------------|----------|
| Park Brake and Feeder Clutch Valves | 10 | 8040 | 7-62710 |
| Separator Clutch Valves | 14 | 8050 | 7-62720 |
| Separator Drive Test and Troubleshooting | 12 | 8051 | 7-38492 |
| Rotary Air Screen | 30 | 8055 | 7-86160 |
| Hydraulic Cylinders | 34 | 8060 | 7-67080 |
| Reel Drive Control Valve | 12 | 8080 | 7-62840 |
| Reel Drive Motor | 12 | 8090 | 7-63220 |
| Chassis | | Tab 9 | |
| Air Conditioning Troubleshooting | 22 | 9010 | 7-63301 |
| Air Conditioning Troubleshooting 2344 P.I.N. JJC0174360 and After, 2366 P.I.N JJC0252950 and After, 2388 JJC0267150 and After | 52 | 9010 | 7-93030 |
| Air Conditioning Testing | 24 | 9020 | 7-63310 |
| Air Conditioning System Service For Systems With R-134a Refrigerant 2344 P.I.N. JJC0174360 and After, 2366 P.I.N JJC0252950 and After, 2388 JJC0267150 and After | 52 | 9020 | 7-93050 |
| Air Conditioning Poster 2344 P.I.N. JJC0174360 and After, 2366 P.I.N JJC0252950 and After, 2388 JJC0267150 and After | | | 7-93040 |
| Air Conditioning System and Compressor | 12 | 9030 | 7-63321 |
| Air Conditioning Components | 30 | 9040 | 7-63330 |
| Separator Drive Jackshaft | 34 | 9101 | 7-62911 |
| Rotor Drive | 14 | 9102 | 7-63171 |
| Rotor Gearbox | 58 | 9103 | 7-63202 |
| Rotor | 36 | 9104 | 8-29481 |
| Rotor Drive Belt | 16 | 9105 | 7-88330 |
| Feeder and Cleaning Fan Gearbox | 8 | 9106 | 7-63801 |
| Cleaning Fan Drive | 18 | 9107 | 7-63890 |
| Elevator Drive Jackshaft | 22 | 9109 | 7-64050 |
| Inclined Delivery Auger | 16 | 9110 | 8-29510 |
| Discharge Beater | 10 | 9111 | 7-64100 |
| Straw Spreader Drive | 10 | 9113 | 7-64111 |
| Header Knife Drive | 16 | 9115 | 7-64080 |
| Tailing Monitor | 4 | 9116 | 7-86150 |
| Unloader Auger System | 18 | 9117 | 7-63510 |
| Field Tracker | 6 | 9120 | 7-38450 |
| Cross-Flow Fan | 8 | 9121 | 7-38790 |
| Straw Chopper Gearbox | 18 | 9125 | 7-63261 |
| Adjustable Concaves | 8 | 9128 | 7-63860 |
| Cleaning System Overhaul | 42 | 9130 | 7-67800 |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com