



FD14E

CRAWLER TRACTOR

S/N FD14E 060101

service manual

Form 73156500 English



**Supplement #1
Form 73156500
FD14E CRAWLER TRACTOR
SERVICE MANUAL**

(11-90)

ATTENTION: Insert this sheet in the front of publication as record or receipt.
Replace or add pages in the publication according to instructions below.

Additional copies of this supplement are available. Please direct your request to:

**FIATALLIS NORTH AMERICA Publications Services Dept.,
701 Stevenson Drive Springfield, IL 62703 U.S.A.**

This is Supplement No. 1 for the subject manual. This supplement is written to clarify and describe modified systems. Follow the instructions carefully to insert this supplement into the manual.

REPLACE OR ADD:

- Section 1: Table of Contents and pages 1-37 thru 1-42
- Section 2: Table of Contents and pages 2-7 2-8, 2-59, 2-60, 2-77 and 2-78
- Section 4: Pages 4-87 thru 4-90
- Section 5: Pages 5-27 thru 5-30
- Section 6: Pages 6-57 and 6-58
- Section 7: Table of Contents and pages 7-79, 7-80, 7-207 thru 7-217

and at the end of all text add Rear Flysheet

Any product change described in this publication is part of the continuing effort of Fiatallis to make its product responsive to customer need and is not to be construed as a field campaign. A product change may be incorporated with or without prior notice and without obligation to Fiatallis or its affiliates.

FD14E

CRAWLER TRACTOR

S/N FD14E 060101

service manual

Form 73156500 English



WARNING

STUDY THE OPERATION AND MAINTENANCE
INSTRUCTION MANUAL THROUGH BEFORE STARTING.
OPERATING, MAINTAINING, FUELING OR SERVICING
THIS MACHINE.



The Operation and Maintenance Instruction Manual provides the instructions and procedures for starting, operating, maintaining, fueling, shutdown and servicing that are necessary for properly conducting the procedures for overhaul of the related components outlined in this Service Manual.



This symbol is your safety alert sign. It MEANS ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.



Read and heed all safety instructions carrying the signal words WARNING and DANGER.



Machine mounted safety signs have been color coded yellow with black borders and lettering for warning and red with white borders and lettering for danger points.

AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home or on the highway are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason MOST ACCIDENTS CAN BE PREVENTED by recognizing the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment there are conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against an accident.
The complete observance of one simple rule would prevent many
thousand serious injuries each year.
That rule is:

Never attempt to clean, oil or adjust a machine while it is in motion.

WARNING

On machines having hydraulically, mechanically, and/or cable controlled equipment (such as shovels, loaders, dozers, scrapers, etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing. If it is necessary to have the hydraulically, mechanically, and/or cable controlled equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical devices used for controlling the equipment.

COPYRIGHT BY FIATALLIS



All rights reserved. Reproduction of text and illustrations
in whole or in part, is strictly prohibited.

INDEX

SAFETY RULES	I-VII
STANDARD TORQUE SPECIFICATIONS	VIII-XI
FOREWORD	XII
ENGINE RELATED COMPONENTS	Section 1
TRANSMISSION	Section 2
FINAL DRIVES	Section 3
BEVEL GEAR, STEERING & BRAKES	Section 4
IMPLEMENT HYDRAULICS	Section 5
UNDERCARRIAGE	Section 6
ELECTRICAL	Section 7
CAB	Section 8

SAFETY RULES

GENERAL

Study the Operation and Maintenance Instruction Manual before starting, operating, maintaining, fueling, or servicing machine.

Read and heed all machine-mounted safety signs before starting, operating, maintaining, fueling or servicing machine.

Machine-mounted safety signs have been color coded yellow with black border and lettering for WARNING and red with white border and lettering for DANGER points.

Never attempt to operate the machine or its tools from any position other than seated in the operator's seat. Keep head, body, limbs, hands and feet inside operator's compartment at all times to reduce exposure to hazards outside the operator's compartment.

Do not allow unauthorized personnel to operate service or maintain this machine.

Always check work area for dangerous features. The following are examples of dangerous work areas: slopes, overhangs, timber, demolitions, fire, high walls, drop off, back fills, rough terrain, ditches, ridges, excavations, heavy traffic, crowded parking, crowded maintenance and closed areas. Use extreme care when in areas such as these.

An operator must know the machine's capabilities. When working on slopes or near drop offs be alert to avoid loose or soft conditions that could cause sudden tipping or loss of control.

Do not jump on or off machine. Keep two hands and one foot, or two feet and one hand, in contact with steps, grab rails and handles at all times.

Do not use controls or hoses as handholds when climbing on or off machine. Hoses and controls are movable and do not provide a solid support. Controls also may be inadvertently moved causing accidental machine or equipment movement.

Keep operator's compartment, stepping points, grab-rails and handles clear of foreign objects, oil, grease, mud or snow accumulation to minimize the danger of slipping or stumbling. Clean mud or grease from shoes before attempting to mount or operate the machine.

Be careful of slippery conditions on stepping points, hand rails, and on the ground. Wear safety boots or shoes that have a high slip resistant sole material.

For your personal protection, do not attempt to climb on or off machine while machine is in motion.

Never leave the machine unattended with the engine running.

Always lock up machine when leaving it unattended. Return keys to authorized security. Heed all shutdown procedures of the Operation and Maintenance Instruction Manual. Always set the parking brake when leaving the machine for any reason.

Do not wear rings, wrist watches, jewelry, loose or hanging apparel, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can catch on moving parts. Wear proper safety equipment as authorized for the job. Examples: hard hats, safety shoes, heavy gloves, ear protectors, safety glasses or goggles, reflector vests, or respirators. Consult your employer for specific safety equipment requirements.

Do not carry loose objects in pockets that might fall unnoticed into open compartments. Do not use machine to carry loose objects by means other than attachments for carrying such objects.

DO NOT CARRY RIDERS unless the machine is equipped for carrying people to reduce personal exposure to being thrown off.

Do not operate machinery in a condition of extreme fatigue or illness. Be especially careful towards the end of the shift.

Roll Over Protective Structures are required on wheel loaders, dozer tractors, track type loaders, graders and scrapers by local or national requirements. **DO NOT** operate this machine without a Roll Over Protective Structure.

Do not operate a machine without a falling object protective structure (FOPS).

Do not operate this machine without a rear canopy screen when machine is equipped with rear mounted towing winch.

Seat belts are required to be provided with roll over protective structures or roll protection cabs by local or national regulations. Keep the safety belt fastened around you during operation.

Where noise exposure exceeds 90 dBA for 8 hours, wear authorized ear protective equipment per local or national requirements that apply.

Keep clutches and brakes on machine and attachments such as power control units, winches and master clutches adjusted according to Operation and Maintenance Instruction Manuals of the manufacturers at all times. **DO NOT** adjust machine with engine running except as specified.

Do not operate a machine with brakes out of adjustment. See the Operation and Maintenance Instruction manual.

Move carefully when under, in or near machine or implements. Wear required protective equipment, such as hard hat, safety glasses, safety shoes, ear protectors.

To move a disabled machine, use a trailer or low boy truck if available. If towing is necessary, provide warning signals as required by local rules and regulations and follow Operation and Maintenance Instruction Manual recommendations. Load and unload on a level area that gives full support to the trailer wheels. Use ramps of adequate strength, low angle and proper height. Keep trailer bed clean of clay, oil and all materials that become slippery. Tie machine down securely to truck or trailer bed and block tracks (or wheels) as required by the carrier.

To prevent entrapment in cabs or mounted enclosures, observe and know the mechanics of alternate exit routes.

On machines equipped with suction radiator fans, be sure to periodically check all engine exhaust parts for leaks as exhaust gases are dangerous to the operator. Keep a vent open to outside air at all times when operating within a closed cab.

STARTING FLUID IS FLAMMABLE. Follow the recommendations as outlined in the Operation and Maintenance Instruction Manual and as marked on the containers. Store containers in cool, well-ventilated place secure from unauthorized personnel. **DO NOT PUNCTURE OR BURN CONTAINERS.**

SAFETY RULES

Follow the recommendations of the manufacturer for storage and disposal.

Wire rope develops steel slivers. Use authorized protective equipment such as heavy gloves, safety glasses when handling.

OPERATION

Before starting machine, check, adjust and lock the operator's seat for maximum comfort and control of the machine.

DO NOT START OR OPERATE AN UNSAFE MACHINE. Before working the machine, be sure that any unsafe condition has been satisfactorily remedied. Check brakes, steering and attachment controls before moving. Advise the proper maintenance authority of any malfunctioning part or system. Be sure all protective guards or panels are in place, and all safety devices provided are in place and in good operating condition.

Check instruments at start-up and frequently during operation.

Do not run the engine of this machine in closed areas without proper ventilation to remove deadly exhaust gases.

Be sure exposed personnel in the area of operation are clear of the machine before moving the machine or its attachments. **WALK COMPLETELY AROUND** machine before mounting. Sound horn. Obey flag man, safety signals and signs.

Know the principles of cross steering of crawler tractors. Read section in Operation and Maintenance Instruction Manual on cross steering.

Keep engine exhaust system and exhaust manifolds clear of combustible material. Equip machine with screens and guards when working under conditions of flying combustible material.

If engine has a tendency to stall for any reason under load or idle, report this for adjustment to a proper maintenance authority immediately. Do not continue to operate machine until condition has been corrected.

Never use bucket as a man-lift.

Use recommended bucket for machine and material loadability and heaping characteristics of material, terrain, and other pertinent job conditions.

Avoid abrupt starts and stops when transporting a loaded bucket.

Inspect your seat belt webbing and hardware at least twice a year for signs of fraying, wear or other weakness that could lead to failure.

Use only designated towing or pulling attachment points. Use care in making attachment. Be sure pins and locks as provided are secure before pulling. Stay clear of draw bars, cables or chains under load.

When pulling or towing through a cable or chain, do not start suddenly at full throttle. Take up slack carefully. Guard against kinking chains or cables. Inspect carefully for flaws before using. Do not pull through a kinked chain or cable due to the high stresses and possibility of failure of the kinked area. Always wear heavy gloves when handling chain or cable.

Be sure cables are anchored and the anchor point is strong enough to handle the expected load. Keep exposed personnel clear of anchor point and cable or chain. **DO NOT PULL OR TOW UNLESS OPERATOR'S COMPARTMENT OF MACHINES INVOLVED ARE PROPERLY GUARDED AGAINST POTENTIAL CABLE OR CHAIN BACKLASH.**

During operation always carry ripper in full raised position when not in use and lowered to ground when parked.

When counterweights have been provided, do not work machine if they have been removed unless their equivalent weight has been replaced. See the Operation and Maintenance Instruction Manual.

When operating a machine know what clearances will be encountered, overhead doors, wires, pipes, aisles, roadways; also the weight limitations of ground, floor, and ramps.

Know bridge and culvert load limits and do not exceed them. Know machine's height, width, and weight. Use a signal person when clearance is close.

Be sure that the exact location of gas lines, utility lines, sewers, overhead and buried power lines, and other obstructions or hazards are known. Such locations should be precisely marked by the proper authorities to reduce the risk of accidents. Obtain shut-down or relocation of any such facilities before starting work, if necessary. Be certain to comply with all local, state, and federal regulations regarding working in the vicinity of power lines.

When roading find out what conditions are likely to be met clearances, congestion, type of surface, etc. Be aware of fog, smoke or dust element that obscure visibility.

When backing, always look to where the machine is to be moved. Be alert to the position of exposed personnel. **DO NOT OPERATE** if exposed personnel enter the immediate work area.

Never travel a machine on a job site, in a congested area, or around people without a signal person to guide the operator.

In darkness, check area of operation carefully before moving in with machine. Use all lights provided. Do not move into area of restricted visibility.

Maintain clear vision of all areas of travel or work. Keep cab windows clean and repaired. Carry blade low for maximum visibility while traveling. Obtain and use fan blast deflectors where tractors are used a pusher tractors in tandem.

Transport a loaded bucket with the bucket as far tipped back and in as low a position as possible for maximum visibility, stability, and safest transport of the machine. Carry it at a proper speed for the load and ground conditions.

Carry the bucket low when traveling with a load.

SECTION 1

ENGINE RELATED COMPONENTS

TABLE OF CONTENTS

 
TOPIC	TITLE	PAGE
1 1	GENERAL DESCRIPTION.....	1-1
1.2	TROUBLESHOOTING	1-2
1.3	TESTING.....	1-3
1 4	REPAIR PROCEDURES.....	1-4
1.4.1	Engine & Converter Removal	1-4
1 4.2	Muffler	1-15
1.4.3	Starter.....	1-17
1 4.4	Alternator.....	1-19
1 4.5	Belts.....	1-21
1 4.6	Throttle Linkage	1-24
1 4.7	Radiator	1-28
1 4.8	Fuel Injection Pump.....	1-31
1 4.9	Cold Weather Starting Aid	1-38
1.5	TOOLS.....	1-40
1.6	SPECIFICATIONS	1-41
1.6.1	General.....	1-41
1.6.2	Fuel & Lubricant Specifications & Capacities.....	1-41
1.6.3	Torques.....	1-41
1.6.4	Drive Belt Adjustment	1-42

Study SAFETY RULES in the front of this manual thoroughly for the protection of machine and safety of personnel.

(Revised November 1990)

1.4 REPAIR PROCEDURES


T-93515

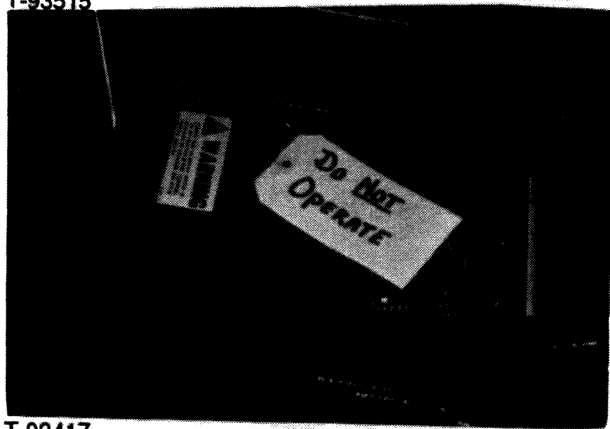

T-93417



 T-93548

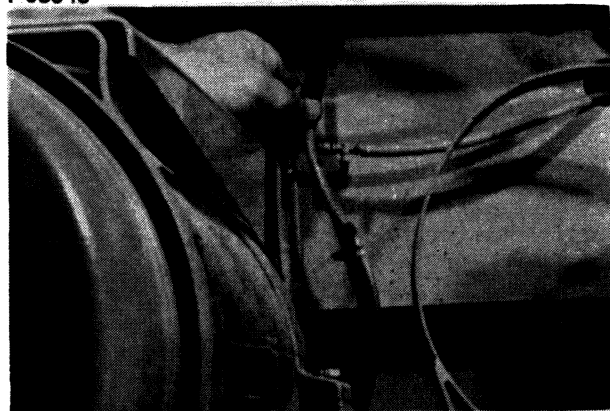

T-93549



1.4.1 ENGINE & CONVERTER

1.4.1.1 REMOVAL

1.4.1.1.1

Place machine on a level surface. Turn master electrical switch to the "OFF" position. Tag the unit with a "DO NOT START" tag. Refer to the CAB Section of this manual and tilt the cab.



WARNING

Always turn the master switch to the "OFF" position before cleaning, repairing, servicing or parking the machine to prevent injury.

1.4.1.1.2

Remove the center belly guards.

1.4.1.1.3

Disconnect windshield and door window washer hoses from engine, hood and side doors support.

NOTE: Plug lines to keep from draining reservoirs.

1.4.1.1.4

Disconnect vent hose from flywheel housing from vent.

 
Study SAFETY RULES in the front of this manual thoroughly for the protection of machine and safety of personnel.

1.4 REPAIR PROCEDURES

1 4.1.1.5

Disconnect sensor wires from air cleaner.

T-93551

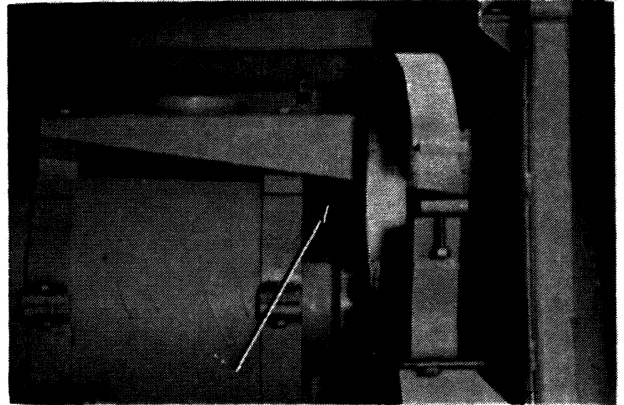

1.4.1.1.6

Disconnect wire at two locations on engine.

 
T-93550



1 4.1.1.7

Disconnect air cleaner hose from turbocharger.


T-93552

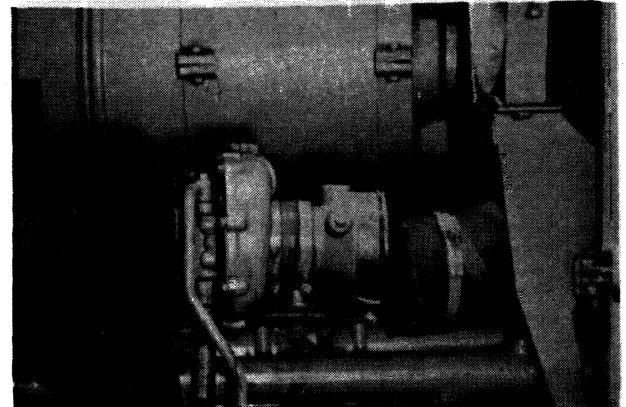

1.4.1.1.8

Support engine hood and side doors support with suitable lifting device.

 T-93554

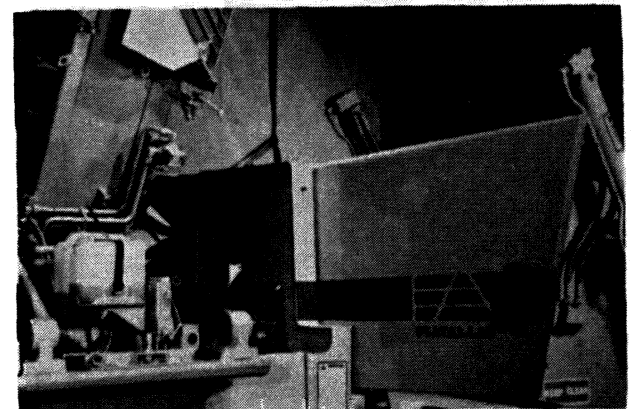


WARNING

Lift and handle all heavy parts with a lifting device of proper capacity. Be sure parts are supported by proper slings and hooks. Use lifting eyes if provided. Watch out for people in the vicinity.

Study SAFETY RULES in the front of this manual thoroughly for the protection of machine and safety of personnel.

1.4 REPAIR PROCEDURES

 
T-93553

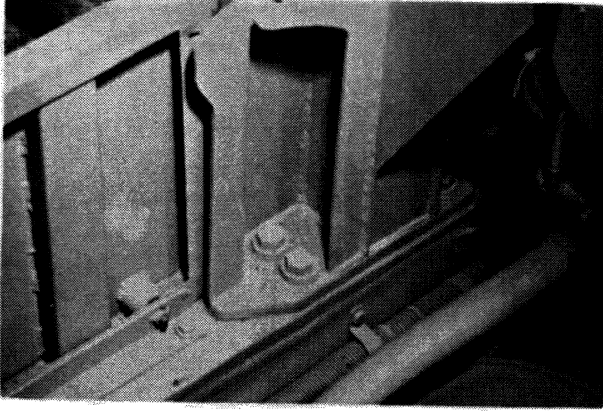

1.4.1.1.9

Remove engine hood and side doors support mounting capscrews.

 T-93555

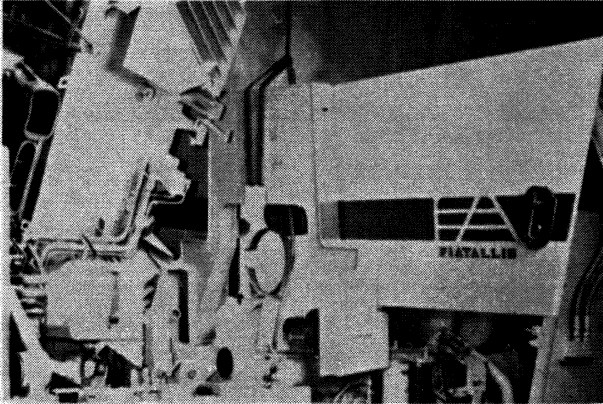

1.4.1.1.10

 
Remove engine hood and side doors support.



WARNING

Lift and handle all heavy parts with a lifting device of proper capacity. Be sure parts are supported by proper slings and hooks. Use lifting eyes if provided. Watch out for people in the vicinity.

T-93407

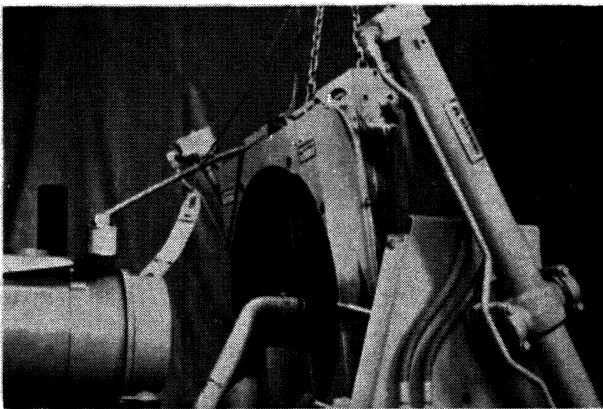

1.4.1.1.11

 
Refer to the 1.4.7 and remove radiator.



WARNING

Lift and handle all heavy parts with a lifting device of proper capacity. Be sure parts are supported by proper slings and hooks. Use lifting eyes if provided. Watch out for people in the vicinity.

T-93567

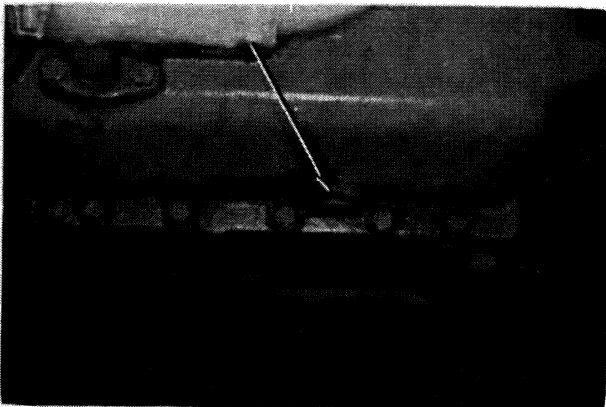

1.4.1.1.12

Drain transmission housing.

Study SAFETY RULES in the front of this manual thoroughly for the protection of machine and safety of personnel.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com