

SERVICE MANUAL

Boomer™ 3040

Boomer™ 3045

Boomer™ 3050

With Hydrostatic or 12x12 Gear Transmission

Compact Tractor

Part number 84242309

1st edition English
August 2012



Contents

INTRODUCTION

Engine	10
Engine and crankcase.....	10.001
Cylinder heads	10.101
Pan and covers.....	10.102
Crankshaft and flywheel	10.103
Connecting rods and pistons	10.105
Valve drive and gears	10.106
Balancer and damper.....	10.110
Pump drives	10.114
Lift pump and lines	10.210
Fuel tanks	10.216
Fuel injection system	10.218
Intake and exhaust manifolds and muffler.....	10.254
Engine lubrication system	10.304
Engine cooling system	10.400
Fan and drive.....	10.414
Clutch	18
Clutch hydraulic release control	18.104
Clutch and components	18.110
Transmission	21
Mechanical transmission	21.114
Mechanical transmission external controls	21.130
Mechanical transmission internal components	21.140
Front axle system	25
Powered front axle	25.100
Front bevel gear set and differential	25.102

Final drive hub, steering knuckles, and shafts	25.108
Final drives	25.310
Rear axle system	27
Powered rear axle	27.100
Rear bevel gear set and differential	27.106
Planetary and final drives	27.120
Hydrostatic drive	29
Transmission and steering hydrostatic control	29.100
Hydrostatic transmission	29.202
Reservoir, cooler, and lines	29.204
Pump and motor components	29.218
Power Take-Off (PTO)	31
Rear electrohydraulic control	31.104
Two-speed rear Power Take-Off (PTO)	31.114
Central Power Take-Off (PTO)	31.120
Brakes and controls	33
Parking brake / Parking lock	33.110
Mechanical service brakes	33.120
Hydraulic systems	35
Hydraulic systems	35.000
Pump control valves	35.102
Fixed displacement pump	35.104
Three-point hitch control valve	35.114
Remote control valves	35.204
Reservoir, cooler, and filters	35.300
Regulated/Low pressure system	35.322
Safety and main relief valves	35.350
Hitches, drawbars, and implement couplings	37
Rear three-point hitch	37.110

Steering	41
Hydraulic control components	41.200
Pump	41.206
Cylinders	41.216
Cab climate control	50
Heating	50.100
Ventilation	50.104
Air conditioning	50.200
Electrical systems	55
Electrical system	55.000
Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.050
Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.051
Harnesses and connectors	55.100
Engine starting system	55.201
Cold start aid	55.202
Alternator	55.301
Battery	55.302
Warning indicators, alarms, and instruments	55.408
Wiper/Washer system	55.518
Cab engine controls	55.525
Platform, cab, bodywork, and decals	90
Engine hood and panels	90.100
Engine shields, hood latches, and trims	90.102
Protections - ROPS and FOPS	90.114
Pneumatically-adjusted operator seat	90.124
Cab	90.150
Cab interior	90.151
Cab doors and hatches	90.154

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com