

## TJ AND T9000 MASTER TABLE OF CONTENTS

### THIS MANUAL, 84257310, COVERS THE FOLLOWING TRACTORS:

**TJ 280, 330, 380, 430, 480, and 530 Series**

**T9010, 9020, 9030, 9040, 9050, and 9060 Series**

**T9020, 9030, 9040, 9050, and 9060 Series After S/N Z7F204001**

**NOTE:** *Engine repair information is not contained within this tractor Service Manual. For engine repair, refer to appropriate engine service manual as follows:*

**87515682** - *For 8.3 & 9.0L 6 Cylinder, 24 Valve CNH Engine with High Pressure Common Rail Fuel System.*

**87523643** - *For 12.9L 6 Cylinder, Engine.*

**87737594** - *For 12.9L 6 Cylinder, Turbo Compound Engine.*

STANDARD TORQUE SPECIFICATION.....	SECTION 00, CHAPTER 1 (Book 1 - 87525642)
SAFETY.....	SECTION 00, CHAPTER 2 (Book 1 - 87525642)
LUBRICATION AND MAINTENANCE.....	SECTION 00, CHAPTER 3 (Book 1 - 87525642)
ENGINE LUBRICATION .....	00-3-3
Engine Oil Selection .....	00-3-3
Synthetic Lubricants .....	00-3-3
Engine Oil Viscosity/Temperature Usage Recommendation .....	00-3-3
Engine Coolant Solutions .....	00-3-4
LUBRICANTS AND CAPACITIES .....	00-3-5
LUBRICATION AND MAINTENANCE CHART .....	00-3-6
SPECIFICATIONS.....	SECTION 00, CHAPTER 4 (Book 1 - 87525642)
DIESEL ENGINE .....	00-4-3
ENGINE LUBRICATION SYSTEM .....	00-4-3
FUEL SYSTEM .....	00-4-3
AIR INTAKE SYSTEM .....	00-4-3
TRANSMISSION - POWER SHIFT .....	00-4-4
TRANSMISSION - MANUAL SHIFT .....	00-4-4
BRAKES .....	00-4-4
AXLE DIFFERENTIAL AAND FINAL DRIVES .....	00-4-4
POWER TAKEOFF (IF EQUIPPED) .....	00-4-4
HYDRAULIC SYSTEM .....	00-4-5
MEGAFLOW HYDRAULICS (IF EQUIPPED) .....	00-4-5
HITCH SYSTEM (IF EQUIPPED) .....	00-4-5
DRAWBAR .....	00-4-5
TRACTOR WEIGHTS .....	00-4-6
Approximate Base Shipping Weights .....	00-4-6
Approximate Component Weights .....	00-4-6
MAXIMUM TRACTOR OPERATING WEIGHT .....	00-4-6
ENGINE REMOVAL AND INSTALLATION -	
TJ380/430 TRACTORS.....	SECTION 10, CHAPTER 1 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-1-3
RECOMMENDED TOOLS .....	10-1-3
ENGINE REMOVAL .....	10-1-4
ENGINE INSTALLATION .....	10-1-13

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### ENGINE REMOVAL AND INSTALLATION -

TJ280/330 TRACTORS.....	SECTION 10, CHAPTER 2 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-2-2
SPECIAL TOOLS .....	10-2-2
ENGINE REMOVAL .....	10-2-3
ENGINE INSTALLATION .....	10-2-10

### ENGINE REMOVAL AND INSTALLATION -

TJ480/530 TRACTORS.....	SECTION 10, CHAPTER 3 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-3-2
RECOMMENDED TOOLS .....	10-3-2
ENGINE REMOVAL .....	10-3-3
ENGINE INSTALLATION .....	10-3-13

### AIR INDUCTION SYSTEM - TJ380/430 TRACTORS.....

SECTION 10, CHAPTER 4 (Book 1 - 87525642)	
SPECIAL TORQUE VALUES .....	10-4-2
AIR INDUCTION SYSTEM .....	10-4-3
AIR INDUCTION SYSTEM DESCRIPTION .....	10-4-4
AIR INDUCTION SYSTEM .....	10-4-4
AIR FILTER ELEMENTS .....	10-4-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL .....	10-4-5
PRIMARY FILTER ELEMENT SERVICE .....	10-4-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST .....	10-4-8
AIR CLEANER HOUSING REMOVAL .....	10-4-9
ASPIRATOR STRATA TUBE CLEANING .....	10-4-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST .....	10-4-11
ASPIRATOR SAFETY VALVE INSTALLATION .....	10-4-11
AIR CLEANER HOUSING INSTALLATION .....	10-4-12
RESTRICTION INDICATOR SWITCH INSTALLATION .....	10-4-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION .....	10-4-13

### AIR INDUCTION SYSTEM - TJ280/330 TRACTORS.....

SECTION 10, CHAPTER 5 (Book 1 - 87525642)	
SPECIAL TORQUE VALUES .....	10-5-3
AIR INDUCTION SYSTEM .....	10-5-4
AIR FILTER ELEMENTS .....	10-5-4
ENGINE AIR INDUCTION SYSTEM .....	10-5-5
Primary And Secondary Filter Element Removal .....	10-5-5
PRIMARY FILTER ELEMENT SERVICE .....	10-5-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST .....	10-5-7
AIR CLEANER HOUSING REMOVAL .....	10-5-8
Aspirator Strata Tube Cleaning .....	10-5-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST .....	10-5-12
ASPIRATOR SAFETY CHECK VALVE INSTALLATION .....	10-5-13
AIR CLEANER HOUSING INSTALLATION .....	10-5-14
RESTRICTION INDICATOR SWITCH INSTALLATION .....	10-5-15
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION .....	10-5-16

### AIR INDUCTION SYSTEM - TJ480/530 TRACTORS.....

SECTION 10, CHAPTER 6 (Book 1 - 87525642)	
SPECIAL TORQUE VALUES .....	10-6-2
AIR INDUCTION SYSTEM .....	10-6-3
AIR FILTER ELEMENTS .....	10-6-4
Primary And Secondary Filter Element Removal .....	10-6-5
PRIMARY FILTER ELEMENT SERVICE .....	10-6-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST .....	10-6-8
AIR CLEANER HOUSING REMOVAL .....	10-6-9
ASPIRATOR STRATA TUBE CLEANING .....	10-6-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST .....	10-6-11

## TJ AND T9000 MASTER TABLE OF CONTENTS

ASPIRATOR SAFETY VALVE INSTALLATION .....	10-6-11
AIR CLEANER HOUSING INSTALLATION .....	10-6-12
RESTRICTION INDICATOR SWITCH INSTALLATION .....	10-6-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION .....	10-6-13
VISCOUS FAN DRIVE - TJ280/330/380/430,	
HYD FAN DRIVE TEST - TJ480/530 .....	SECTION 10, CHAPTER 7 (Book 1 - 87525642)
VISCOUS FAN DRIVE TEST - TJ280, TJ330, TJ380, TJ430 .....	10-7-3
HYDRAULIC FAN DRIVE TEST - TJ480, TJ530 .....	10-7-5
RADIATOR, COOLERS AND CONDENSER	
REMOVE/INSTALL - TJ280/330 .....	SECTION 10, CHAPTER 8 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-8-2
GENERAL INFORMATION .....	10-8-3
FUEL COOLER REMOVAL .....	10-8-3
FUEL COOLER INSTALLATION .....	10-8-4
ENGINE AIR TO AIR COOLER REMOVAL .....	10-8-6
AIR TO AIR COOLER INSTALLATION .....	10-8-9
A/C CONDENSER REMOVAL .....	10-8-12
A/C CONDENSER INSTALLATION .....	10-8-13
HYDRAULIC/TRANSMISSION OIL COOLER REMOVAL .....	10-8-15
HYDRAULIC/TRANSMISSION OIL COOLER INSTALLATION .....	10-8-17
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-8-20
RADIATOR AND COOLER ASSEMBLY INSTALLATION .....	10-8-27
RADIATOR, COOLERS AND CONDENSER	
REMOVE/INSTALL - TJ480/530 .....	SECTION 10, CHAPTER 9 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-9-3
GENERAL INFORMATION .....	10-9-3
FUEL COOLER REMOVAL .....	10-9-4
FUEL COOLER INSTALLATION .....	10-9-4
ENGINE AIR TO AIR COOLER REMOVAL .....	10-9-5
ENGINE AIR TO AIR COOLER INSTALLATION .....	10-9-7
A/C CONDENSER AND HYDRAULIC FAN COOLER REMOVAL .....	10-9-9
A/C CONDENSER AND HYDRAULIC FAN COOLER INSTALLATION .....	10-9-10
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-9-12
RADIATOR/COOLER DISASSEMBLY .....	10-9-19
RADIATOR, COOLERS AND CONDENSER	
REMOVE/INSTALL - TJ380/430 .....	SECTION 10, CHAPTER 10 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-10-2
GENERAL INFORMATION .....	10-10-3
ENGINE AIR TO AIR COOLER REMOVAL .....	10-10-4
AIR TO AIR COOLER INSTALLATION .....	10-10-6
A/C CONDENSER REMOVAL .....	10-10-7
A/C CONDENSER INSTALLATION .....	10-10-8
HYDRAULIC/TRANSMISSION OIL COOLER REMOVAL .....	10-10-10
HYDRAULIC/TRANSMISSION OIL COOLER INSTALLATION .....	10-10-12
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-10-15

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

AIR INDUCTION SYSTEM, T9030, 9040 and 9050 Tractors, S/N Z7F204001 and After.....	SECTION 10, CHAPTER 11 (Book 1A - 87740915)
SPECIAL TORQUE VALUES .....	10-11-2
AIR INDUCTION SYSTEM .....	10-11-3
AIR INDUCTION SYSTEM DESCRIPTION .....	10-11-4
AIR INDUCTION SYSTEM .....	10-11-4
AIR FILTER ELEMENTS .....	10-11-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL .....	10-11-5
PRIMARY FILTER ELEMENT SERVICE .....	10-11-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST .....	10-11-8
AIR CLEANER HOUSING REMOVAL .....	10-11-9
ASPIRATOR STRATA TUBE CLEANING .....	10-11-11
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST .....	10-11-12
ASPIRATOR SAFETY VALVE INSTALLATION .....	10-11-12
AIR CLEANER HOUSING INSTALLATION .....	10-11-13
RESTRICTION INDICATOR SWITCH INSTALLATION .....	10-11-14
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION .....	10-11-15
ENGINE REMOVAL AND INSTALLATION, T9050 TRACTOR, S/N Z7F204001 AND AFTER .....	SECTION 10, CHAPTER 12 (Book 1A - 87740915)
SPECIAL TORQUE VALUES .....	10-12-3
RECOMMENDED TOOLS .....	10-12-3
ENGINE REMOVAL .....	10-12-4
ENGINE INSTALLATION .....	10-12-15
RADIATOR, COOLERS AND CONDENSER REMOVE AND INSTALL, T9050 TRACTOR .....	SECTION 10, CHAPTER 13 (Book 1A - 87740915)
SPECIAL TORQUE VALUES .....	10-13-3
ENGINE AIR TO AIR COOLER REMOVAL .....	10-13-4
ENGINE AIR TO AIR COOLER INSTALLATION .....	10-13-6
A/C CONDENSER AND HYDRAULIC FAN COOLER REMOVAL .....	10-13-8
A/C CONDENSER AND HYDRAULIC FAN COOLER INSTALLATION .....	10-13-9
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-13-11
RADIATOR/COOLER DISASSEMBLY .....	10-13-18
POWERSHIFT TRANSMISSION REMOVE/INSTALL - TJ280/330.....	SECTION 21, CHAPTER 1 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-1-2
SPECIAL TOOLS .....	21-1-2
TRANSMISSION REMOVAL .....	21-1-3
TRANSMISSION INSTALLATION .....	21-1-9
POWERSHIFT TRANSMISSION REMOVE/INSTALL - TJ380/430/480/530.....	SECTION 21, CHAPTER 2 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-2-3
SPECIAL TOOLS .....	21-2-3
TRANSMISSION REMOVAL .....	21-2-4
TRANSMISSION INSTALLATION .....	21-2-10
ENGINE/TRANSMISSION DRIVE COUPLER REMOVE/INSTALL - TJ280/330 .....	SECTION 21, CHAPTER 3 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-3-2
DRIVE COUPLER REMOVAL .....	21-3-3
DRIVE COUPLER INSTALLATION .....	21-3-5

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

ENGINE/TRANSMISSION DRIVE COUPLER	
REMOVE/INSTALL - TJ480/530 .....	SECTION 21, CHAPTER 4 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-4-2
DRIVE COUPLER REMOVAL .....	21-4-3
DRIVE COUPLER INSTALLATION .....	21-4-6
16 SPEED POWERSHIFT TRANSMISSION REPAIR.....	SECTION 21, CHAPTER 5 (Book 2 - 87525640)
SPECIFICATIONS .....	21-5-3
SPECIAL TORQUE VALUES .....	21-5-3
SPECIAL TOOLS .....	21-5-4
TRANSMISSION DISASSEMBLY .....	21-5-7
INPUT (FIRST) SHAFT DISASSEMBLY .....	21-5-18
PUMP (SECOND) SHAFT DISASSEMBLY .....	21-5-27
MASTER CLUTCH (FOURTH) SHAFT DISASSEMBLY .....	21-5-33
OUTPUT (FIFTH) SHAFT DISASSEMBLY .....	21-5-41
COUNTER (THIRD) SHAFT DISASSEMBLY .....	21-5-48
CLEANING AND INSPECTION .....	21-5-50
CLUTCH PACK CLEARANCE AND CLUTCH PACK TRAVEL TEST .....	21-5-52
1F, 1R, 2F AND 2R CLUTCH GEAR BEARING PRELOAD TEST .....	21-5-55
INPUT (FIRST) SHAFT ASSEMBLY .....	21-5-58
PUMP (SECOND) SHAFT ASSEMBLY .....	21-5-72
MASTER CLUTCH (FOURTH) SHAFT ASSEMBLY .....	21-5-82
OUTPUT (FIFTH) SHAFT ASSEMBLY .....	21-5-96
COUNTER (THIRD) SHAFT BEARING ASSEMBLY .....	21-5-107
TRANSMISSION ASSEMBLY .....	21-5-110
16 SPEED POWERSHIFT TRANSMISSION - HOW IT WORKS ..	SECTION 21, CHAPTER 6 (Book 2 - 87525640)
GENERAL DESCRIPTION OF OPERATION .....	21-6-3
Regulator Valve .....	21-6-4
Lube Regulator Valve .....	21-6-5
Master Clutch Lube Valve .....	21-6-5
Range Selector Valve .....	21-6-6
MASTER CLUTCH CONTROL VALVE .....	21-6-7
Transmission Power Flow .....	21-6-8
Default Settings .....	21-6-8
Helical-cut Gears .....	21-6-8
Shifting The Powershift Transmission .....	21-6-9
REAR DRIVE LINE AND CARRIER BEARING.....	SECTION 21, CHAPTER 7 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-7-2
REAR DRIVE LINE AND CARRIER BEARING REMOVAL .....	21-7-3
REAR DRIVE LINE AND CARRIER BEARING INSTALLATION .....	21-7-5
CHARGE PUMP REPAIR FOR 16-SPEED	
POWERSHIFT TRANSMISSION .....	SECTION 21, CHAPTER 8 (Book 2 - 87525640)
SPECIFICATIONS .....	21-8-3
SPECIAL TORQUE VALUES .....	21-8-3
PUMP DISASSEMBLY .....	21-8-4
PUMP ASSEMBLY .....	21-8-7

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### 24 SPEED MANUAL TRANSMISSION REMOVAL

AND INSTALLATION .....	SECTION 21, CHAPTER 9 (Book 2 - 87525640)
SPECIAL TOOLS .....	21-9-3
SPECIAL TORQUE VALUES .....	21-9-3
24 SPEED TRANSMISSION REMOVAL .....	21-9-4
24 SPEED TRANSMISSION INSTALLATION .....	21-9-13
MASTER CLUTCH ADJUSTMENT .....	21-9-23
SHIFT LEVER LINKAGE ADJUSTMENT .....	21-9-24

### ENGINE/TRANSMISSION DRIVE COUPLER

REMOVE/INSTALL - TJ380/430 .....	SECTION 21, CHAPTER 10 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-10-2
DRIVE COUPLER REMOVAL .....	21-10-3
DRIVE COUPLER INSTALLATION .....	21-10-6

### 24 SPEED MANUAL TRANS HOW IT WORKS/

PRESSURE TESTING/REPAIR.....	SECTION 21, CHAPTER 11 (Book 2 - 87525640)
SPECIFICATIONS .....	21-11-4
SPECIAL TORQUE VALUES .....	21-11-5
SPECIAL TOOLS .....	21-11-6
PRESSURE TESTING SPECIFICATIONS .....	21-11-8
GENERAL SETUP PROCEDURE .....	21-11-9
TRANSMISSION PRESSURE TEST PORT LOCATIONS .....	21-11-11
TESTING THE LUBRICATION PRESSURE .....	21-11-13
TRANSMISSION SERIAL NUMBER IDENTIFICATION .....	21-11-14
TRANSMISSION LUBRICATION CIRCUIT .....	21-11-15
TRANSMISSION OIL FLOW CHART .....	21-11-16
DESCRIPTION OF OPERATION .....	21-11-20
TRANSMISSION POWER FLOW .....	21-11-24
STARTING IN A FORWARD SPEED .....	21-11-26
STARTING IN A REVERSE SPEED .....	21-11-27
TROUBLESHOOTING GUIDE .....	21-11-35
NEUTRAL SAFETY SWITCH ADJUSTMENT .....	21-11-40
TRANSMISSION SPEED SENSOR ADJUSTMENT .....	21-11-40
TRANSMISSION DISASSEMBLY .....	21-11-41
SHIFT LEVER SEAL REPLACEMENT .....	21-11-53
INPUT SHAFT DISASSEMBLY .....	21-11-54
INPUT SHAFT ASSEMBLY .....	21-11-59
PUMP SHAFT DISASSEMBLY .....	21-11-72
PUMP SHAFT ASSEMBLY .....	21-11-75
SPEED SHAFT DISASSEMBLY .....	21-11-81
SPEED SHAFT ASSEMBLY .....	21-11-84
CENTER SHAFT DISASSEMBLY .....	21-11-88
CENTER SHAFT ASSEMBLY .....	21-11-90
RANGE SHAFT DISASSEMBLY .....	21-11-94
RANGE SHAFT ASSEMBLY .....	21-11-967
TRANSMISSION ASSEMBLY .....	21-11-100
HIGH-LOW CLUTCH CONTROL ASSEMBLY .....	21-11-118
HIGH-LOW CONTROL VALVE DISASSEMBLY .....	21-11-119
REGULATOR VALVE ASSEMBLY .....	21-11-121
REGULATOR VALVE DISASSEMBLY AND ASSEMBLY .....	21-11-122
MASTER CLUTCH CONTROL VALVE ASSEMBLY .....	21-11-123
MASTER CLUTCH CONTROL VALVE DISASSEMBLY AND ASSEMBLY .....	21-11-124
LOCKOUT VALVE ASSEMBLY .....	21-11-126
LOCKOUT VALVE DISASSEMBLY AND ASSEMBLY .....	21-11-127
MASTER CLUTCH CABLE ADJUSTMENT .....	21-11-128

## TJ AND T9000 MASTER TABLE OF CONTENTS

16-SPEED POWERSHIFT TRANSMISSION - PRESSURE TESTING AND TROUBLESHOOTING .....	SECTION 21, CHAPTER 12 (Book 2A - 87740916)
RECOMMENDED TOOLS .....	21-12-3
SPECIAL TORQUE VALUES .....	21-12-4
TRANSMISSION TROUBLESHOOTING .....	21-12-5
Important General Information .....	21-12-5
Fault Code Retrieval .....	21-12-5
Fault Codes Recorded .....	21-12-6
No Fault Codes Recorded .....	21-12-7
Solenoid Swap Test .....	21-12-8
CLUTCH TEST PORT IDENTIFICATION .....	21-12-9
Transmission Clutch Pressure Test .....	21-12-10
TEST PORT IDENTIFICATION .....	21-12-15
PRESSURE TEST SPECIFICATIONS AND WORKSHEETS .....	21-12-16
LUBE TEST PORT IDENTIFICATION .....	21-12-19
LUBRICATION CIRCUIT PRESSURE TEST .....	21-12-20
MASTER CLUTCH LUBE TEST .....	21-12-22
PTO CLUTCH PRESSURE TEST .....	21-12-23
PTO AND TRANSMISSION PRESSURE TEST REASSEMBLY .....	21-12-25
16 SPEED POWERSHIFT TRANSMISSION, RANGE SELECTOR, PRESSURE REGULATOR AND MASTER CLUTCH VALVE REPAIR .....	SECTION 21, CHAPTER 13 (Book 2A - 87740916)
SPECIAL TORQUE VALUES .....	21-13-3
REGULATOR VALVE DISASSEMBLY .....	21-13-4
CLEANING, INSPECTION AND SOLENOID VALVE TEST .....	21-13-12
REGULATOR VALVE ASSEMBLY .....	21-13-15
RANGE SELECTOR VALVE DYNAMIC TEST .....	21-13-23
RANGE SELECTOR PWM VALVE TEST .....	21-13-26
RANGE SELECTOR VALVE DISASSEMBLY .....	21-13-29
RANGE SELECTOR VALVE ASSEMBLY .....	21-13-32
PTO SYSTEM HOW IT WORKS AND TROUBLESHOOTING .....	SECTION 31, CHAPTER 1 (Book 3 - 87525644)
POWER TAKE OFF, General Information .....	31-1-3
PTO LUBRICATION, General Information .....	31-1-4
PTO CONTROL	
PTO Control Switch .....	31-1-5
To Operate the PTO .....	31-1-5
To Stop the PTO .....	31-1-5
PTO Electrical Circuit .....	31-1-6
PTO Switch in the OFF Position .....	31-1-7
PTO Switch in the ON Position .....	31-1-8
Diode Suppressed PTO Coil .....	31-1-9
Neutral Start Feature .....	31-1-9
PTO VALVE	
Operational Modes .....	31-1-10
PTO Control Valve Operation .....	31-1-12
PTO Clutch Disengaged .....	31-1-13
PTO Modulated Engagement .....	31-1-14
PTO Fully Engaged .....	31-1-15
PTO Clutch Drive .....	31-1-16
PTO Clutch .....	31-1-17
PTO Brake .....	31-1-18
PTO Drop Box and Clutch .....	31-1-19
Engine RPM Speed Circuit .....	31-1-19

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

PTO SYSTEM TROUBLESHOOTING	
PTO Will Not Engage .....	31-1-20
PTO Will Not Disengage .....	31-1-21
PTO CLUTCH REMOVAL AND INSTALLATION -	
TJ380/430/480/530.....	SECTION 31, CHAPTER 2 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-2-2
PTO CLUTCH ASSEMBLY REMOVAL .....	31-2-3
PTO CLUTCH ASSEMBLY INSTALLATION .....	31-2-9
PTO DRIVE UNIT (CLUTCH) REPAIR .....	SECTION 31, CHAPTER 3 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-3-3
SPECIFICATIONS .....	31-3-3
PTO DRIVE UNIT DISASSEMBLY .....	31-3-4
PTO DRIVE UNIT ASSEMBLY (EXPLODED VIEW) .....	31-3-13
PTO CLUTCH AND BRAKE ASSEMBLY (EXPLODED VIEW) .....	31-3-14
PTO DRIVE UNIT ASSEMBLY .....	31-3-15
PTO CLUTCH REMOVAL AND INSTALLATION - TJ280/330.....	SECTION 31, CHAPTER 4 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-4-2
PTO CLUTCH REMOVAL .....	31-4-3
PTO CLUTCH INSTALLATION .....	31-4-5
PTO TRANSFER CASE REMOVAL AND INSTALLATION .....	SECTION 31, CHAPTER 5 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-5-2
SPECIAL TOOLS .....	31-5-2
TRANSFER CASE REMOVAL .....	31-5-3
TRANSFER CASE INSTALLATION .....	31-5-10
PTO DROPBOX REPAIR.....	SECTION 31, CHAPTER 6 (Book 3 - 87525644)
SPECIFICATIONS .....	31-6-2
SPECIAL TORQUE VALUES .....	31-6-2
PTO DROPBOX DISASSEMBLY .....	31-6-3
EXPLODED VIEW PTO DROPBOX ASSEMBLY .....	31-6-9
PTO DROPBOX ASSEMBLY .....	31-6-10
PTO DRIVELINE HANGER BEARING.....	SECTION 31, CHAPTER (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-7-2
PTO DRIVELINE HANGER BEARING REMOVAL .....	31-7-3
HANGER BEARING ASSEMBLY REPAIR (Exploded View) .....	31-7-5
HANGER BEARING DISASSEMBLY .....	31-7-6
HANGER BEARING ASSEMBLY .....	31-7-7
PTO DRIVELINE HANGER BEARING INSTALLATION .....	31-7-10
PTO CLUTCH VALVE.....	SECTION 31, CHAPTER 8 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-8-2
PTO VALVE REMOVAL .....	31-8-3
PTO VALVE DISASSEMBLY .....	31-8-4
CLEANING AND INSPECTION .....	31-8-7
PTO VALVE SOLENOID TESTS .....	31-8-8
PTO VALVE SECTIONAL VIEW .....	31-8-9
PTO VALVE ASSEMBLY .....	31-8-10
PTO VALVE INSTALLATION .....	31-8-13



## TJ AND T9000 MASTER TABLE OF CONTENTS

POWER BRAKES SYSTEM - HOW IT WORKS AND TROUBLESHOOTING .....	SECTION 33, CHAPTER 1 (Book 3 - 87525644)
BRAKE SYSTEM .....	33-1-3
General Information .....	33-1-3
General Description .....	33-1-4
Axle Pump .....	33-1-4
Axle Cooling Filter .....	33-1-5
Axle Lube Solenoid Valve .....	33-1-5
Pressure/Lube Control Valve .....	33-1-6
Brake Lubrication and Jet Pump .....	33-1-6
Pressure/Lube Control Valve .....	33-1-7
Regulated Pressure Spool .....	33-1-8
Park Brake/Tow Valve .....	33-1-10
Park Brake Applied .....	33-1-11
Park Brake Released .....	33-1-11
Tow Valve .....	33-1-11
BRAKE CIRCUIT COMPONENTS .....	33-1-12
Brake Pedal .....	33-1-12
Brake Control Valve .....	33-1-13
Brake Clutch Pack .....	33-1-13
Axle Brake Cylinders .....	33-1-13
HYDRAULIC BRAKE CONTROL .....	33-1-14
General Description .....	33-1-14
Brake Valve .....	33-1-14
Service Brake Circuit .....	33-1-15
Emergency Braking .....	33-1-18
BRAKE SYSTEM TROUBLESHOOTING .....	33-1-19
SERVICE BRAKE VALVE .....	SECTION 33, CHAPTER 2 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	33-2-2
RECOMMENDED TOOLS .....	33-2-2
SERVICE BRAKE VALVE REMOVAL .....	33-2-3
SERVICE BRAKE VALVE DISASSEMBLY .....	33-2-6
INSPECTION AND CLEANING .....	33-2-8
BRAKE MAL-FUNCTION SWITCH TEST .....	33-2-8
SERVICE BRAKE VALVE EXPLODED VIEW .....	33-2-9
SERVICE BRAKE VALVE SECTIONAL VIEW .....	33-2-10
SERVICE BRAKE VALVE ASSEMBLY .....	33-2-11
SERVICE BRAKE VALVE INSTALLATION .....	33-2-13
<b>2006 AND 2007 MODEL YEAR HYDRAULIC SCHEMATIC .....</b>	<b>POSTER 87522497</b>
<b>2008 MODEL YEAR HYDRAULIC SCHEMATIC .....</b>	<b>POSTER 87722947</b>
HOW TO READ SYMBOLS IN A HYDRAULIC SCHEMATIC .....	SECTION 35, CHAPTER 1 (Book 4 - 87618159)
Introduction .....	35-1-3
Circuit Diagrams .....	35-1-3
Symbol Systems .....	35-1-3
Using Schematic Symbols .....	35-1-3
Reservoirs .....	35-1-3
Lines, Tubes and Hoses .....	35-1-4
Crossing or Joining Lines .....	35-1-5
Pump Symbols .....	35-1-5
Hydraulic Motor Symbols .....	35-1-6
Cylinder Symbols .....	35-1-6

## TJ AND T9000 MASTER TABLE OF CONTENTS

Pressure Control Symbols .....	35-1-7
Normally Closed .....	35-1-7
Normally Open .....	35-1-7
Relief Valve .....	35-1-7
Pressure Reducing Valve .....	35-1-7
Sequence Valve .....	35-1-8
Directional Control Symbols .....	35-1-8
Simplified Symbols .....	35-1-8
One Way Valve .....	35-1-8
By Pass Valve .....	35-1-8
Composite Symbols .....	35-1-8
One Way Valves .....	35-1-8
Two Position Valves .....	35-1-8
Three Position Valves .....	35-1-9
Actuating Controls .....	35-1-9
Flow Control Symbols .....	35-1-9
Restrictors .....	35-1-9
Accessories .....	35-1-10
SIMPLE SCHEMATIC .....	35-1-12
COMMON SYMBOLS .....	35-1-14
Lines and Line Functions .....	35-1-14
Mechanical Devices .....	35-1-14
Pumps and Motors .....	35-1-14
Reservoirs .....	35-1-15
Cylinders .....	35-1-15
Valves .....	35-1-15
Valve Actuators .....	35-1-17
Accessories.....	35-1-17

### HYDRAULIC SYSTEM HOW IT WORKS

WITH TROUBLESHOOTING .....	SECTION 35, CHAPTER 2 (Book 4 - 87618159)
GENERAL INTRODUCTION .....	35-2-3
SPECIFICATIONS .....	35-2-5
MODEL NUMBER LOCATION .....	35-2-7
STANDARD AND HIGH FLOW PFC PISTON PUMPS .....	35-2-8
Principle of Control .....	35-2-8
Engine Start Up .....	35-2-8
Operating Modes .....	35-2-8
Low Pressure Standby .....	35-2-8
Pressure and Flow Delivery and Compensation Principle .....	35-2-8
Increased Flow Demand .....	35-2-9
Decreased Flow Demand .....	35-2-9
High Pressure Standby .....	35-2-9
Return to Low Pressure Standby .....	35-2-9
Destroke Valve .....	35-2-9
Model 480 and 530 Tractor Hydraulic Fan Pump And Motor .....	35-2-10
PRESSURE/FLOW COMPENSATED PUMP .....	35-2-12
PFC CHARGE PRESSURE TEST .....	35-2-14
LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS .....	35-2-16
PFC PISTON PUMP FLOW TEST AT REMOTE COUPLERS .....	35-2-17
MEGAFLOW PUMP LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS .....	35-2-18
MEGAFLOW PFC PISTON PUMP FLOW TEST AT REMOTE COUPLERS .....	35-2-20
REGULATED PRESSURE TEST .....	35-2-21
REGULATED PRESSURE ADJUSTMENT PROCEDURE .....	35-2-22
REGULATED/LUBE PUMP TESTS .....	35-2-23

## TJ AND T9000 MASTER TABLE OF CONTENTS

480 and 530 HYDRAULIC FAN PUMP LOW PRESSURE STANDBY, HIGH PRESSURE AND FLOW TESTS .....	35-2-25
480 and 530 HYDRAULIC FAN MOTOR TEST .....	35-2-27
REGULATED PRESSURE / LUBE CONTROL SYSTEM .....	35-2-28
REGULATOR VALVE .....	35-2-29
480 and 530 HYDRAULIC FAN CIRCUIT .....	35-2-30
480 and 530 HYDRAULIC FAN SYSTEM .....	35-2-31
STEERING PRIORITY VALVE .....	35-2-32
HYDRAULIC FAN/MOTOR REMOVAL AND FAN MOTOR/PUMP REPAIR - TJ480/530 .....	SECTION 35, CHAPTER 3 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-3-3
HYDRAULIC FAN AND FAN MOTOR REMOVAL .....	35-3-4
HYDRAULIC FAN AND FAN MOTOR INSTALLATION .....	35-3-15
HYDRAULIC FAN PUMP REMOVAL .....	35-3-28
HYDRAULIC FAN PUMP INSTALLATION .....	35-3-31
HYDRAULIC FAN MOTOR DISASSEMBLY .....	35-3-35
HYDRAULIC FAN MOTOR ASSEMBLY .....	35-3-39
COMPENSATOR CONTROL VALVE REMOVAL AND DISASSEMBLY .....	35-3-42
COMPENSATOR CONTROL VALVE ASSEMBLY AND INSTALLATION .....	35-3-43
HYDRAULIC FAN PUMP DISASSEMBLY .....	35-3-44
PUMP CLEANING AND INSPECTION .....	35-3-51
PFC PISTON PUMP REMOVAL AND INSTALLATION - TJ380/430/480/530 .....	SECTION 35, CHAPTER 4 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-4-2
SPECIAL TOOLS .....	35-4-2
PISTON PUMP REMOVAL .....	35-4-3
PISTON PUMP INSTALLATION .....	35-4-8
START-UP PROCEDURE .....	35-4-13
GEAR PUMP REMOVAL AND INSTALLATION - TJ380/430/480/530 .....	SECTION 35, CHAPTER 5 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-5-2
SPECIAL TOOLS .....	35-5-2
GEAR PUMP REMOVAL .....	35-5-3
GEAR PUMP INSTALLATION .....	35-5-5
PFC AXIAL PISTON PUMP REPAIR .....	SECTION 35, CHAPTER 6 (Book 4 - 87618159)
SPECIFICATIONS .....	35-6-3
SPECIAL TORQUE VALUES .....	35-6-4
PISTON PUMP DISASSEMBLY .....	35-6-5
PRESSURE/FLOW COMPENSATOR DISASSEMBLY .....	35-6-12
PISTON PUMP CLEANING AND INSPECTION .....	35-6-16
PRESSURE/FLOW COMPENSATOR ASSEMBLY EXPLODED VIEW .....	35-6-20
PRESSURE/FLOW COMPENSATOR ASSEMBLY .....	35-6-21
PISTON PUMP ASSEMBLY EXPLODED VIEW .....	35-6-24
PISTON PUMP ASSEMBLY .....	35-6-25

## TJ AND T9000 MASTER TABLE OF CONTENTS

HITCH SYSTEM - HOW IT WORKS .....	SECTION 35, CHAPTER 7 (Book 4 - 87618159)
THREE POINT HITCH .....	35-7-3
ELECTRONIC HITCH CONTROL .....	35-7-4
Operator Controls and Settings .....	35-7-5
ELECTRONIC HITCH CONTROL SYSTEM FEATURES .....	35-7-7
HITCH CONTROL VALVE .....	35-7-14
General .....	35-7-14
Raise and Lower Solenoids .....	35-7-14
Raise and Lower Pilot Spools .....	35-7-14
Raise Spool .....	35-7-14
Lower Poppet .....	35-7-14
Load Check Ball .....	35-7-14
Manual Raise or Lower Control Pins .....	35-7-14
Overload Relief Valve .....	35-7-14
Neutral Function and Troubleshooting .....	35-7-16
Raise Function and Troubleshooting .....	35-7-18
Raise Function and Troubleshooting .....	35-7-19
Lower Function and Troubleshooting .....	35-7-20
Lower Function and Troubleshooting .....	35-7-21
THREE POINT HITCH VALVE.....	SECTION 35, CHAPTER 8 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-8-2
TPH VALVE REMOVAL .....	35-8-3
TPH VALVE DISASSEMBLY .....	35-8-5
CLEANING AND INSPECTION .....	35-8-9
HITCH VALVE SOLENOID TEST .....	35-8-11
THREE POINT HITCH VALVE .....	35-8-13
TPH VALVE ASSEMBLY .....	35-8-14
TPH VALVE INSTALLATION .....	35-8-18
REMOTE ELECTRONIC HYD SYSTEMS - HOW IT WORKS/TROUBLESHOOTING.....	SECTION 35, CHAPTER 9 (Book 4 - 87618159)
REMOTE HYDRAULIC SYSTEM INTRODUCTION .....	35-9-3
REMOTE SYSTEM CONTROLS (ELECTRONIC) .....	35-9-5
Remote Function Control .....	35-9-6
Full Function Position .....	35-9-6
Neutral Lock Position .....	35-9-6
Float Lock-Out Position .....	35-9-7
Non-Detent Raise Position .....	35-9-7
Hydraulic Motor Position .....	35-9-7
Hydraulic Valve Timer Control .....	35-9-9
Variable Flow Control .....	35-9-9
Remote Valve Load Check Valves .....	35-9-10
REMOTE VALVE PROPORTIONAL CURRENT CONTROL (PCC) SOLENOID OPERATION .....	35-9-11
REMOTE VALVE OPERATION (ELECTRONIC) .....	35-9-12
REMOTE VALVE PROBLEMS AND WHERE TO LOOK .....	35-9-20
ELECTRONIC REMOTE VALVE SYSTEM TESTING .....	35-9-21
FAULT CODE RETRIEVAL .....	35-9-21
REGULATED PRESSURE CHECK .....	35-9-24
REMOTE VALVE HIGH PRESSURE TEST .....	35-9-24
REMOTE VALVE PROPORTIONAL SOLENOID CHECK .....	35-9-26
LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS .....	35-9-27
REMOTE VALVE FLOW TEST .....	35-9-29
REMOTE VALVE SIGNAL CHECK AND HITCH SIGNAL CHECK TEST .....	35-9-31
REMOTE VALVE COUPLER TEST .....	35-9-32
LOAD CHECK INSPECTION .....	35-9-33

## TJ AND T9000 MASTER TABLE OF CONTENTS

HYDRAULIC GEAR (CHARGE) PUMP REPAIR .....	SECTION 35, CHAPTER 10 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-10-2
PUMP DISASSEMBLY .....	35-10-3
CLEANING AND INSPECTION .....	35-10-7
PUMP ASSEMBLY .....	35-10-8
HYDRAULIC FILTERS .....	SECTION 35, CHAPTER 11 (Book 4 - 87618159)
SPECIFICATIONS .....	35-11-2
SERVICING THE HYDRAULIC AND TRANSMISSION OIL FILTERS .....	35-11-3
REMOTE AUXILIARY VALVE AND COUPLER, REMOVAL/INSTALLATION/REPAIR .....	SECTION 35, CHAPTER 12 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-12-3
REMOTE AUXILIARY VALVE MANIFOLD SEAL REPLACEMENT .....	35-12-4
REMOTE AUXILIARY VALVE SOLENOID TEST .....	35-12-9
REMOTE AUXILIARY VALVE SOLENOID REMOVAL AND DISASSEMBLY .....	35-12-9
REMOTE AUXILIARY VALVE SOLENOID ASSEMBLY AND INSTALLATION .....	35-12-12
REMOTE AUXILIARY VALVE CONTROL SPOOL REMOVAL .....	35-12-15
REMOTE AUXILIARY VALVE CONTROL SPOOL INSTALLATION .....	35-12-17
REMOTE AUXILIARY VALVE REMOVAL .....	35-12-19
REMOTE AUXILIARY VALVE SECTION DISASSEMBLY .....	35-12-20
LOAD CHECK VALVE DISASSEMBLY .....	35-12-25
REMOTE AUXILIARY VALVE SECTION ASSEMBLY .....	35-12-27
LOAD CHECK VALVE ASSEMBLY .....	35-12-29
REMOTE AUXILIARY VALVE SECTION ASSEMBLY .....	35-12-31
REMOTE AUXILIARY VALVE SECTION INSTALLATION .....	35-12-36
HYDRAULIC GEAR PUMP AND PISTON PUMP REMOVE/INSTALL - TJ280/330 .....	SECTION 35, CHAPTER 13 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-13-3
RECOMMENDED TOOLS .....	35-13-3
GEAR PUMP REMOVAL .....	35-13-4
GEAR PUMP INSTALLATION .....	35-13-7
PFC PISTON PUMP REMOVAL .....	35-13-9
PFC PISTON PUMP INSTALLATION .....	35-13-14
START-UP PROCEDURE .....	35-13-19
DRAWBAR REMOVAL AND INSTALLATION .....	SECTION 37, CHAPTER 1 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	37-1-2
SPECIAL TOOLS .....	37-1-2
DRAWBAR REMOVAL .....	37-1-3
DRAWBAR INSTALLATION .....	37-1-7
CENTER HINGE BEARINGS AND CONNECTING LINK - TJ380/430/480/530 .....	SECTION 39, CHAPTER 1 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	39-1-3
SPECIAL TOOL .....	39-1-3
RECOMMENDED TOOLS .....	39-1-3
GENERAL INFORMATION .....	39-1-5
SEPARATING THE FRONT AND REAR FRAMES .....	39-1-5
BOTTOM HINGE BEARING REPLACEMENT .....	39-1-11
CONNECTING LINK FRONT BUSHING REPLACEMENT .....	39-1-19
CONNECTING LINK REMOVAL .....	39-1-21
CONNECTING LINK REAR BEARING REPLACEMENT .....	39-1-22
CONNECTING LINK INSTALLATION .....	39-1-23
CONNECTING THE FRONT AND REAR FRAMES .....	39-1-25

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### CENTER HINGE BEARINGS AND CONNECTING LINK -

TJ280/330.....	SECTION 39, CHAPTER 2 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	39-2-3
SPECIAL TOOL .....	39-2-3
RECOMMENDED TOOLS .....	39-2-3
GENERAL INFORMATION .....	39-2-5
SEPARATING THE FRONT AND REAR FRAMES .....	39-2-5
BOTTOM HINGE BEARING REPLACEMENT .....	39-2-11
CONNECTING LINK FRONT BUSHING REPLACEMENT .....	39-2-19
CONNECTING LINK REMOVAL .....	39-2-21
CONNECTING LINK REAR BEARING REPLACEMENT .....	39-2-22
CONNECTING LINK INSTALLATION .....	39-2-23
CONNECTING THE FRONT AND REAR FRAMES .....	39-2-25

### CENTER HINGE BEARINGS AND CONNECTING LINK,

T9030, 9040, 9050, AND 9060 S/N Z7F204001 AND AFTER....	SECTION 39, CHAPTER 3 (Book 4A - 87740917)
SPECIAL TORQUE VALUES .....	39-3-3
SPECIAL TOOL .....	39-3-3
RECOMMENDED TOOLS .....	39-3-3
GENERAL INFORMATION .....	39-3-5
SEPARATING THE FRONT AND REAR FRAMES .....	39-3-5
BOTTOM HINGE BEARING REPLACEMENT .....	39-3-12
CONNECTING LINK FRONT BUSHING REPLACEMENT .....	39-3-20
CONNECTING LINK REMOVAL .....	39-3-22
CONNECTING LINK REAR BEARING REPLACEMENT .....	39-3-23
CONNECTING LINK INSTALLATION .....	39-3-24
CONNECTING THE FRONT AND REAR FRAMES .....	39-3-26

STEERING COLUMN REPAIR.....	SECTION 41, CHAPTER 1 (Book 5 - 87525646)
TILT STEERING COLUMN DISASSEMBLY .....	41-1-3
TILT STEERING COLUMN ASSEMBLY .....	41-1-5

### CENTER CONSOLE, STEERING COLUMN,

PEDALS AND SWITCHES.....	SECTION 41, CHAPTER 2 (Book 5 - 87525646)
SPECIAL TOOLS .....	41-2-3
SPECIAL TORQUE VALUES .....	41-2-3
STEERING WHEEL REMOVAL .....	41-2-4
TRANSMISSION SHIFT LEVER REMOVAL .....	41-2-4
CENTER CONSOLE COVER REMOVAL .....	41-2-7
CENTER CONSOLE COVER INSTALLATION .....	41-2-9
TRANSMISSION SHIFT INSTALLATION .....	41-2-11
STEERING WHEEL INSTALLATION .....	41-2-14
STEERING COLUMN REMOVAL .....	41-2-15
STEERING COLUMN INSTALLATION .....	41-2-16
TILT STEERING COLUMN RELEASE CABLE REMOVAL .....	41-2-17
TILT STEERING COLUMN RELEASE CABLE INSTALLATION .....	41-2-18
CLUTCH AND BRAKE PEDAL ASSEMBLY REMOVAL .....	41-2-20
CLUTCH AND BRAKE PEDAL ASSEMBLY INSTALLATION .....	41-2-22
DECELERATION SWITCH REMOVAL .....	41-2-25
DECELERATION SWITCH INSTALLATION .....	41-2-26
CLUTCH POTENTIOMETER REMOVAL .....	41-2-27
CLUTCH POTENTIOMETER INSTALLATION .....	41-2-28
CLUTCH POTENTIOMETER CALIBRATION .....	41-2-29
CLUTCH POTENTIOMETER CALIBRATION .....	41-2-31
DIFFERENTIAL LOCK BRAKE SWITCH REMOVAL .....	41-2-34
DIFFERENTIAL LOCK BRAKE SWITCH INSTALLATION .....	41-2-34

## TJ AND T9000 MASTER TABLE OF CONTENTS

HVAC PLENUM ACTUATOR MOTOR AND LOUVER REMOVAL .....	41-2-36
HVAC PLENUM ACTUATOR MOTOR AND LOUVER INSTALLATION .....	41-2-39
TRANSMISSION SHIFT LEVER DISASSEMBLY .....	41-2-42
TRANSMISSION SHIFT LEVER ASSEMBLY .....	41-2-49
STEERING HAND PUMP & PRIORITY/CONTROL VALVE REMOVE/INSTALL - TJ380/430/480/530 AND T9030/40/50/60 TRACTORS.....SECTION 41, CHAPTER 3 (Book 5 - 87525646)	
SPECIAL TOOLS .....	41-3-2
SPECIAL TORQUE VALUES .....	41-3-2
STEERING HAND PUMP REMOVAL .....	41-3-3
STEERING TUBE LINES REMOVAL .....	41-3-5
STEERING PRIORITY/CONTROL VALVE REMOVAL .....	41-3-7
STEERING PRIORITY/CONTROL VALVE INSTALLATION .....	41-3-8
STEERING TUBE LINES INSTALLATION .....	41-3-9
STEERING HAND PUMP INSTALLATION .....	41-3-11
STEERING HAND PUMP & PRIORITY/CONTROL VALVE REMOVE/INSTALL - TJ280/330 AND T9010/20 TRACTORS.....SECTION 41, CHAPTER 4 (Book 5 - 87525646)	
SPECIAL TOOLS .....	41-4-2
SPECIAL TORQUE VALUES .....	41-4-2
STEERING HAND PUMP REMOVAL .....	41-4-3
STEERING TUBE LINES REMOVAL .....	41-4-5
STEERING PRIORITY/CONTROL VALVE REMOVAL .....	41-4-7
STEERING PRIORITY/CONTROL VALVE INSTALLATION .....	41-4-10
STEERING TUBE LINES INSTALLATION .....	41-4-13
STEERING HAND PUMP INSTALLATION .....	41-4-15
STEERING SYSTEM HOW IT WORKS.....SECTION 41, CHAPTER 5 (Book 5 - 87525646)	
ELECTROHYDRAULIC STEERING SYSTEM (EHPS) .....	41-5-3
PRIORITY / STEERING CONTROL VALVE (EHPS) .....	41-5-4
EHPS STEERING SYSTEM .....	41-5-6
Engine Running Steering in Neutral Position .....	41-5-7
Engine Running, Turning Left .....	41-5-9
EHPS Steering System .....	41-5-11
280 AND 330 MODELS STEERING LAYOUT .....	41-5-12
380, 430, 480 AND 530 MODELS STEERING LAYOUT .....	41-5-13
FRONT AXLE REMOVAL AND INSTALLATION - TJ380/430/480/530.....SECTION 44, CHAPTER 1 (Book 5 - 87525646)	
SPECIAL TORQUE VALUES .....	44-1-3
SPECIAL TOOLS .....	44-1-3
RECOMMENDED TOOLS .....	44-1-3
FRONT AXLE REMOVAL .....	44-1-4
FRONT AXLE INSTALLATION .....	44-1-10
FRONT AXLE REMOVAL AND INSTALLATION - TJ280/330.....SECTION 44, CHAPTER 2 (Book 5 - 87525646)	
SPECIAL TORQUE VALUES .....	44-2-3
SPECIAL TOOLS .....	44-2-3
RECOMMENDED TOOLS .....	44-2-3
FRONT AXLE REMOVAL .....	44-2-4
FRONT AXLE INSTALLATION .....	44-2-10

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### REAR AXLE REMOVAL AND INSTALLATION -

TJ380/430/480/530.....	SECTION 44, CHAPTER 3 (Book 5 - 87525646)
SPECIAL TORQUE VALUES .....	44-3-3
SPECIAL TOOLS .....	44-3-3
RECOMMENDED TOOLS .....	44-3-3
REAR AXLE REMOVAL .....	44-3-4
REAR AXLE INSTALLATION .....	44-3-13

### REAR AXLE REMOVAL AND INSTALLATION - TJ280/330 ..... SECTION 44, CHAPTER 4 (Book 5 - 87525646)

SPECIAL TORQUE VALUES .....	44-4-3
SPECIAL TOOLS .....	44-4-3
RECOMMENDED TOOLS .....	44-4-3
REAR AXLE REMOVAL .....	44-4-4
REAR AXLE INSTALLATION .....	44-4-12

### FRONT AND REAR AXLE REPAIR - 300 SERIES AXLES ..... SECTION 44, CHAPTER 5 (Book 5 - 87525646)

AXLE SPECIFICATIONS .....	44-5-4
SPECIAL TORQUE VALUES .....	44-5-4
SPECIAL TOOLS .....	44-5-5
RECOMMENDED TOOLS .....	44-5-6
GENERAL INFORMATION .....	44-5-12
AXLE FINAL DRIVE REMOVAL .....	44-5-12
FINAL DRIVE DISASSEMBLY .....	44-5-14
PLANETARY CARRIER DISASSEMBLY .....	44-5-18
PLANETARY CARRIER ASSEMBLY .....	44-5-19
FINAL DRIVE HOUSING ASSEMBLY .....	44-5-21
FRONT COVER REMOVAL .....	44-5-26
FRONT COVER DISASSEMBLY .....	44-5-28
FRONT COVER ASSEMBLY .....	44-5-31
RH SIDE BRAKE CARRIER REMOVAL .....	44-5-37
BRAKE CARRIER/BEARING SUPPORT DISASSEMBLY .....	44-5-38
RH BRAKE CARRIER ASSEMBLY PROCEDURES .....	44-5-42
DIFFERENTIAL REMOVAL .....	44-5-47
DIFFERENTIAL CASE DISASSEMBLY PROCEDURES .....	44-5-48
DIFFERENTIAL CASE ASSEMBLY PROCEDURES .....	44-5-51
LH DIFFERENTIAL BEARING CARRIER DISASSEMBLY .....	44-5-57
LH DIFFERENTIAL BEARING CARRIER ASSEMBLY .....	44-5-58
ADJUSTING BEVEL PINION GEAR DEPTH .....	44-5-59
SETTING DIFFERENTIAL CARRIER BEARING PRELOAD .....	44-5-62
SETTING RING/PINION GEAR BACKLASH .....	44-5-65
RH BEARING CARRIER/BRAKE SUPPORT INSTALLATION .....	44-5-69
FRONT COVER INSTALLATION .....	44-5-70
LEAK TESTING THE SERVICE BRAKE .....	44-5-73
LEAK TESTING THE PARK BRAKE .....	44-5-74
LEAK TESTING THE DIFFERENTIAL LOCK .....	44-5-75
FINAL DRIVE INSTALLATION .....	44-5-77

### FRONT AND REAR AXLE REPAIR - 500 SERIES AXLES ..... SECTION 44, CHAPTER 6 (Book 5 - 87525646)

AXLE IDENTIFICATION .....	44-6-4
AXLE SPECIFICATIONS .....	44-6-5
SPECIAL TORQUE VALUES .....	44-6-5
SPECIAL TOOLS .....	44-6-6
RECOMMENDED TOOLS .....	44-6-8
GENERAL INFORMATION .....	44-6-13
AXLE FINAL DRIVE REMOVAL .....	44-6-13
FINAL DRIVE DISASSEMBLY .....	44-6-15



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)