

SERVICE MANUAL

TD65F / TD75F / TD85F
Tractor

Part number 84574094A

English
February 2017





SERVICE MANUAL

TD65F Without cab, 12x12, TD65F Without cab, 20x12, TD65F Without cab, 12x12, Semi Knock-Down Argentina, TD65F Without cab, 20x12, Semi Knock-Down Argentina, TD75F Without cab, 12x12, TD75F Without cab, 20x12, TD75F Without cab, 12x12, Semi Knock-Down Argentina, TD75F Without cab, 20x12, Semi Knock-Down Argentina, TD85F Without cab, 12x12, TD85F Without cab, 20x12, TD85F Without cab, 12x12, Semi Knock-Down Argentina, TD85F Without cab, 20x12, Semi Knock-Down Argentina

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.106] Valve drive and gears	10.2
[10.101] Cylinder heads	10.3
[10.105] Connecting rods and pistons.....	10.4
[10.103] Crankshaft and flywheel.....	10.5
[10.110] Balancer and damper	10.6
[10.114] Pump drives	10.7
[10.218] Fuel injection system.....	10.8
[10.400] Engine cooling system	10.9
[10.304] Engine lubrication system.....	10.10
[10.102] Pan and covers	10.11
[10.210] Lift pump and lines	10.12
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.110] Clutch and components	18.2
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.160] Creeper	21.2
[21.162] Reverser	21.3
[21.182] Differential.....	21.4
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3

Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
Front axle system	25
[25.100] Powered front axle	25.5
[25.102] Front bevel gear set and differential	25.6
[25.108] Final drive hub, steering knuckles, and shafts	25.7
[25.310] Final drives	25.8
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
Brakes and controls	33
[33.220] Trailer brake hydraulic control	33.1
[33.202] Hydraulic service brakes	33.2
[33.110] Parking brake or parking lock	33.3
Hydraulic systems	35
[35.204] Remote control valves	35.1
[35.114] Three-point hitch control valve	35.2
[35.322] Regulated/Low pressure system	35.3
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
Steering	41

[41.206] Pump	41.1
[41.216] Cylinders	41.2
[41.200] Hydraulic control components.....	41.3
Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.518] Wiper and washer system.....	55.1
[55.301] Alternator.....	55.2
[55.201] Engine starting system	55.3
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.4
[55.523] Cab hitch controls	55.5
[55.408] Warning indicators, alarms, and instruments	55.6
[55.302] Battery.....	55.7
[55.100] Harnesses and connectors.....	55.8
Platform, cab, bodywork, and decals	90
[90.154] Cab doors and hatches	90.1
[90.151] Cab interior.....	90.2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com