

---

# TD75D, TD95D, TD95D HIGH CLEARANCE REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	6
SECTION 21 - FRONT TRANSMISSION .....	7
SECTION 23 - FWD TRANSFER BOX .....	8
SECTION 25 - FWD AXLE .....	9
SECTION 27 - REAR TRANSMISSION .....	10
SECTION 31 - POWER TAKE-OFF .....	11
SECTION 33 - BRAKES .....	12
SECTION 35 - HYDRAULIC SYSTEMS .....	13
SECTION 41 - STEERING .....	16
SECTION 44 - FRONT AXLE AND WHEELS (2WD) .....	17
SECTION 55 - ELECTRICAL SYSTEM .....	18
SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS .....	23

The following pages are the collation of the contents pages from each section and chapter of the TD75D, TD95D, and TD95D High Clearance Repair manual. Complete Repair part # 87572972.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TD75D, TD95D, and TD95D High Clearance Tractors.

---

**SECTION 00 - GENERAL**

**Chapter 1 - General**

**CONTENTS**

<b>Section</b>	<b>Description</b>	<b>Page</b>
	General Instructions .....	3
	Health and Safety .....	5
	Precautionary Statements .....	15
	Safety .....	16
	Ecology and the Environment .....	19
	Minimum Hardware Tightening Torques .....	20
	Federal Emissions Warranty .....	22
	California Emission Control Warranty Statement .....	23
	Consumables .....	25

# SAFETY

## PRECAUTIONARY STATEMENTS

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read the following precautions before operating this equipment. Equipment should be operated only by those who are responsible and instructed to do so.

Carefully review the procedures given in this manual with all operators. It is important that all operators be familiar with and follow safety precautions.

### THE TRACTOR

1. Read the Operator's Manual carefully before using the tractor. Lack of operating knowledge can lead to accidents.
2. Only allow properly trained and qualified persons to operate the tractor.
3. To prevent falls, use the handrails and step plates when getting on and off the tractor. Keep steps and platform clear of mud and debris.
4. Do not permit anyone but the operator to ride on the tractor unless a passenger seat is fitted. There is no safe place for extra riders otherwise.
5. Replace all missing, illegible or damaged safety decals.
6. Keep safety decals free of dirt or grime.
7. Do not modify or alter or permit anyone else to modify or alter the tractor or any of its components or any tractor function without first consulting your dealer.
8. Tractor wheels are very heavy. Handle with care and ensure, when stored, that they cannot fall.

### DRIVING THE TRACTOR

1. Always sit in the drivers seat while starting or driving the tractor.
2. When driving on public roads, have consideration for other road users. Pull off the road occasionally to allow any following traffic to pass. Do not exceed the legal speed limit set in your area.
3. Use low beam lights when meeting a vehicle at night. Make sure the lights are adjusted to prevent blinding the driver of an oncoming vehicle
4. Reduce speed before turning or applying the brakes. Ensure that both brake pedals are locked together when traveling at road speeds or when

on public roads. Brake both wheels simultaneously when making an emergency stop.

5. Use extreme caution and avoid hard application of the tractor brakes when towing heavy loads at road speeds.
6. Any towed vehicle whose total weight exceeds that of the towing tractor must be equipped with brakes for safe operation.
7. Never apply the differential lock when turning. When engaged, the differential lock will prevent the tractor from turning.
8. Always check overhead clearance, specifically when transporting the tractor. Watch where you are going, especially at low overhanging obstacles.
9. Use extreme caution when operating on steep slopes.
10. To avoid overturns, drive the tractor with care and at speeds compatible with safety, especially when operating over rough ground, when crossing ditches or slopes and when turning.
11. If the tractor becomes stuck or the tires are frozen to the ground, reverse the tractor out to prevent corners.
12. Keep the tractor in the same gear when going downhill as would be used when going uphill. Do not coast or freewheel down hills.

### OPERATING THE TRACTOR

1. Apply the parking brake, place the PTO control in the 'OFF' position, the lift control lever in the down position, the remote control valve levers in the neutral position and the transmission lever in neutral before starting the tractor.
2. Do not start the engine or operate controls while standing beside the tractor. Always sit in the tractor seat when starting the engine or operating the controls.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)