

Rowtrac™ 370 / 420 / 470 / 500
Steiger® 370 / 420 / 470 / 500 / 540 / 580 / 620
Quadtrac® 470 / 500 / 540 / 580 / 620
Tier 4B (final)
Tractor
PIN ZFF308001 and above

SERVICE MANUAL

Part number 47924539

1st edition English
September 2015



Link Product / Engine

Product	Market Product	Engine
QuadTrac® 470 Quadtrac® [ZFF308001 -]	North America	F3HFE613D*B001
QuadTrac® 540 Quadtrac® [ZFF308001 -]	North America	F3DFE613J*B001
QuadTrac® 540 Quadtrac® scraper [ZFF308001 -]	North America	F3DFE613J*B001
QuadTrac® 580 Quadtrac® [ZFF308001 -]	North America	F3DFE613G*B001
QuadTrac® 580 Quadtrac® scraper [ZFF308001 -]	North America	F3DFE613G*B001
QuadTrac® 620 Quadtrac® [ZFF308001 -]	North America	F3DFE613F*B001
RowTrac™ 370 Rowtrac™ [ZFF308001 -]	North America	F2CFE614A*B
RowTrac™ 420 Rowtrac™ [ZFF308001 -]	North America	F3HFE613G*B001
RowTrac™ 470 Rowtrac™ [ZFF308001 -]	North America	F3HFE613D*B001
RowTrac™ 500 Rowtrac™ [ZFF308001 -]	North America	F3HFE613B*B001
Steiger® 370 Standard wheeled [ZFF308001 -]	North America	F2CFE614A*B
Steiger® 370 Heavy duty wheeled [ZFF308001 -]	North America	F2CFE614A*B
Steiger® 420 Heavy duty wheeled [ZFF308001 -]	North America	F3HFE613G*B001
Steiger® 470 Heavy duty wheeled [ZFF308001 -]	North America	F3HFE613D*B001
Steiger® 470 Wheeled scraper [ZFF308001 -]	North America	F3HFE613D*B001
Steiger® 500 Heavy duty wheeled [ZFF308001 -]	North America	F3HFE613B*B001
Steiger® 500 Wheeled scraper [ZFF308001 -]	North America	F3HFE613B*B001
Steiger® 500 QT Quadtrac® [ZFF308001 -]	North America	F3HFE613B*B001
Steiger® 500 QT Quadtrac® scraper [ZFF308001 -]	North America	F3HFE613B*B001
Steiger® 540 Heavy duty wheeled [ZFF308001 -]	North America	F3DFE613J*B001
Steiger® 540 Wheeled scraper [ZFF308001 -]	North America	F3DFE613J*B001
Steiger® 580 Heavy duty wheeled [ZFF308001 -]	North America	F3DFE613G*B001
Steiger® 580 Wheeled scraper [ZFF308001 -]	North America	F3DFE613G*B001

Product	Market Product	Engine
Steiger® 620 Heavy duty wheeled [ZFF308001 -]	North America	F3DFE613F*B001
Steiger® 620 Wheeled scraper [ZFF308001 -]	North America	F3DFE613F*B001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.202] Air cleaners and lines	10.3
[10.310] Aftercooler.....	10.4
[10.400] Engine cooling system	10.5
[10.414] Fan and drive	10.6
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.7
Power coupling.....	19
[19.110] Flywheel damper	19.1
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.155] Powershift transmission internal components.....	21.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
[25.500] Front axle track yoke assembly	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
[27.610] Rear axle track yoke assembly	27.4
Power Take-Off (PTO).....	31

[31.104] Rear electro-hydraulic control	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.220] Gearbox	31.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems	35.1
[35.102] Pump control valves.....	35.2
[35.105] Charge pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.204] Remote control valves	35.5
[35.220] Auxiliary hydraulic pump and lines	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units	35.8
[35.600] High flow hydraulics.....	35.9
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
Frames and ballasting	39
[39.100] Frame	39.1
[39.110] Drawbar and hitch assembly	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
Wheels	44
[44.511] Front wheels.....	44.1

[44.520] Rear wheels	44.2
Tracks and track suspension	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning	50.2
[50.300] Cab pressurizing system	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.301] Alternator	55.3
[55.302] Battery	55.4
[55.010] Fuel injection system	55.5
[55.014] Engine intake and exhaust system	55.6
[55.024] Transmission control system	55.7
[55.045] Front axle control system	55.8
[55.046] Rear axle control system	55.9
[55.048] Rear Power Take-Off (PTO) control system	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.11
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.12
[55.404] External lighting	55.13
[55.522] Cab Power Take-Off (PTO) controls	55.14
[55.640] Electronic modules	55.15
[55.035] Remote control valve electric control	55.16
[55.130] Rear three-point hitch electronic control system	55.17

[55.988] Selective Catalytic Reduction (SCR) electrical system	55.18
[55.DTC] FAULT CODES.....	55.19
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4
[90.151] Cab interior.....	90.5

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com