

Vibratory Rollers SV212 and SV216

Service Manual

Cre 7-29530

CONTENTS

SECTION 00 - MAINTENANCE

CHAPTER 1 - General Instructions

Description	Page
Introduction	1
Safety instructions.....	3
Environmental measures and health precautions.....	6
Product identification.....	8
Torque specifications.....	9

CHAPTER 2 - General Specifications

Description	Page
Description of the machine	1
Fluids and lubricants.....	2
Specifications.....	5
Overall machine dimensions.....	9

CHAPTER 3 - Troubleshooting

Description	Page
Troubleshooting - Engine.....	2
Troubleshooting - Hydraulic system oil overheating - emulsifying.....	3
Troubleshooting - Vibration.....	3
Troubleshooting - Travel.....	5
Troubleshooting - Brakes.....	6
Troubleshooting - Steering.....	6

SECTION 10 - ENGINE

CHAPTER 1 - Removal and installation

Description	Page
Specifications.....	1
Description.....	2
Torque specifications.....	4
Special tools.....	4
Removal.....	6
Installation.....	13
Accelerator cable assembly removal and installation.....	13

SECTION 21 - TRANSMISSION

CHAPTER 1 - Hydraulic motor

Description	Page
Description	2
Specifications.....	3
Torque specifications	3
Disassembly.....	3
Reconditioning and replacement	5
Assembly	8

CHAPTER 2 - Travel reduction gear

Description	Page
Specification.....	1
Torque specifications	2
Special tools.....	2
Exploded view of travel brake	6
Disassembly and assembly	7
Brake test.....	9
Exploded view.....	10
Disassembly and assembly	11

SECTION 29 - HYDROSTATIC DRIVE

CHAPTER 1 - Pumps - Cento drive coupling

Description	Page
Specifications.....	1
Tightening torque	1
Description	2
Special tools.....	3
Removal of pumps, Cento clutch	3
Cento drive coupling	7

SECTION 35 - HYDRAULIC SYSTEM

CHAPTER 1 - Hydraulic cylinders

Description	Page
Torque Specifications	1
Description	2
Special tools.....	3
Hood hydraulic cylinders.....	5
Cab hydraulic cylinder.....	7
Hydraulic cylinders.....	7

CHAPTER 2 - Vibration Motor

Description	Page
Description	2
Specifications	3
Torque specifications	3
Disassembly	3
Assembly	9
Supply pressure relief valve adjustment	13

CHAPTER 3 - Hydraulic circuit

Description	Page
Hydraulic installation	2
Functional description	2
Travel without activation	3
Travel activated, moving forward	4
The multi-function valve	5
The idler-wheel lock-block on the flow divider	6
ASC valve	7
Vibration hydraulics	8
Vibration without activation	8
Vibration activated	9
Steering hydraulics	10
Steering without activation	11
Steering to the right	12
Lifting hydraulics	13
Lifting of the cab or hood	14
Lowering the cab and hood	15
Reservoir hydraulics	16
Hydraulic reservoir	16
Discharging of closed circuits	17
Brake release - emergency towing	18
Test points	19
Releasing transmission and wheel hydraulic motor brakes	20
Hydraulic diagram	22

CHAPTER 4 - Hydraulic pump

Description	Page
Specifications	1
Torque specifications	1
Description	2
Disassembly	3
Reconditioning and replacement of parts	8
Assembly	14
Inspection and adjustments	26

SECTION 39 - FRAMES

CHAPTER 1 - Drum

Description	Page
Description	2
Specifications.....	4
Torque specifications	4
Special tools.....	4
Drum removal	7
Vibrator plate assembly	14
Removal of the right side of the drum	16
Inspection and adjustment of vibration frequency.....	19

CHAPTER 2 - Articulation

Description	Page
Specifications.....	1
Torque specifications	1
Description	2
Special tools.....	3
Disassembly.....	4

CHAPTER 3 - Drum Segments and Scrapers

Description	Page
Specifications.....	1
Hardware torque	1
Special tools.....	1
Description	2
Segment installation.....	3

SECTION 41 - STEERING

CHAPTER 1 - Control

Description	Page
Specifications.....	1
Special tools.....	1
Description	2
Fault finding - steering	3
Disassembly and assembly of steering wheel	3

CHAPTER 2 - Steering cylinders

Description	Page
Specifications.....	1
Special torques	1
Special tools.....	2
Removal of steering cylinders.....	3
Replacing the seals.....	4

CHAPTER 3 - Steering control valve

Description	Page
Specifications.....	1
Tightening torques.....	1
Description.....	2
Special tools.....	3
Disassembly.....	4
Reassembly.....	7
Functional check.....	12

SECTION 50 - HEATER - AIRCONDITIONING**CHAPTER 1 - Removal and installation**

Description	Page
Specifications.....	1
Removal.....	2
Defects in the airconditioning system.....	4
Replacing (tightening) the belt.....	5

SECTION 55 - ELECTRICAL CIRCUIT**CHAPTER 1 - Wiring diagram**

Description	Page
Electrical installation.....	1

SECTION 90 - PLATFORM, CAB**CHAPTER 1 - Operator's compartment**

Description	Page
Torque specifications.....	1
Operator's compartment.....	2
Travel brake control adjustment.....	8

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com