

[Previous Screen](#)

Product: EXCAVATOR

Model: 320D LN EXCAVATOR WBN

Configuration: 320D LN Excavator WBN00001-UP (MACHINE) POWERED BY C6.4 Engine

Disassembly and Assembly

C6.4 Engine for Caterpillar Built Machines

Media Number -KENR8106-09

Publication Date -01/10/2017

Date Updated -18/10/2017

i02747674

Inlet and Exhaust Valve Springs - Remove and Install

SMCS - 1108-010

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	9U-6195	Valve Spring Compressor	1
B	9U-6198	Crankshaft Turning Tool	1

Start By:

- Remove the rocker shaft assembly. Refer to Disassembly and Assembly, "Rocker Shaft and Pushrod - Remove".
- Remove the valve mechanism cover base. Refer to Disassembly and Assembly, "Valve Mechanism Cover Base - Remove and Install".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

Note: The following procedure should be adopted in order to remove the valve springs when the cylinder head is installed to the engine.

Note: Ensure that the appropriate piston is at top dead center before the valve spring is removed. Failure to ensure that the piston is at top dead center may allow the valve to drop into the cylinder bore.



Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

NOTICE

Plug the apertures for the push rods in the cylinder head in order to prevent the entry of loose parts into the engine.

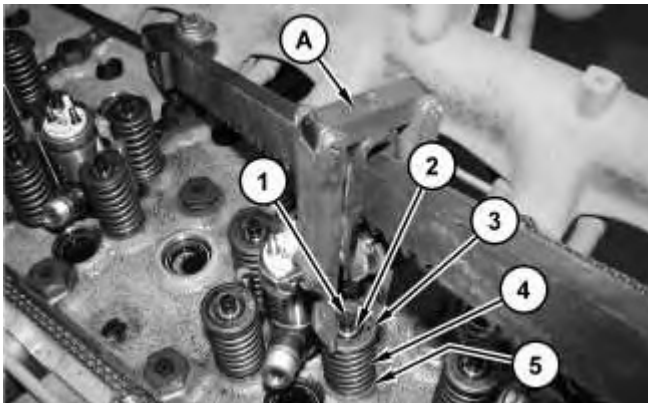


Illustration 1

g01376301

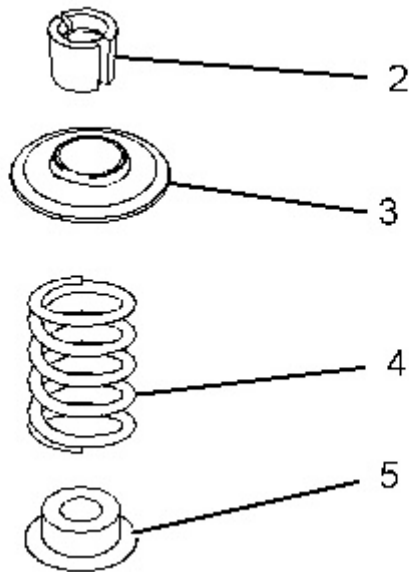


Illustration 2

g01376302

NOTICE

Ensure that the valve spring is compressed squarely or damage to the valve stem may occur.

1. Install Tooling (A) into position on the cylinder head in order to compress a valve spring (4) for the appropriate piston.

2. Use Tooling (A) in order to compress valve spring (4) and open valve (1) slightly.

Note: Do not compress valve spring (4) so that valve spring retainer (3) touches valve stem seal (5).

3. Use Tooling (B) in order to rotate the crankshaft carefully, until the piston touches the valve.

Note: Do not use excessive force to turn the crankshaft. The use of force can result in bent valve stems.

4. Continue to rotate the crankshaft and gradually release the pressure on Tooling (A) until the piston is at the top dead center position. The valve is now held in a position that allows valve spring (4) to be safely removed.

Note: Valve springs must be replaced in pairs for the inlet valve or the exhaust valve of each cylinder. If all valve springs require replacement the procedure can be carried out on two cylinders at the same time. The procedure can be carried out on the following pairs of cylinders. 1 with 6, 2 with 5 and 3 with 4. Ensure that all of the valve springs are installed before changing from one pair of cylinders to another pair of cylinders.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com