

Product: EXCAVATOR

Model: 320D L EXCAVATOR SPN

Configuration: 320D L Excavator SPN00001-UP (MACHINE) POWERED BY C6.4 Engine

## Disassembly and Assembly C6.4 Engine for Caterpillar Built Machines

Media Number -KENR8106-09

Publication Date -01/10/2017

Date Updated -18/10/2017

i02746250

# Fuel Injection Pump Gear - Remove

SMCS - 1251-011

## Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	5F-7465	Puller Gp	1

### Start By:

- Remove the fan drive. Refer to Disassembly and Assembly, "Fan Drive - Remove".
- Remove the fuel injection pump. Refer to Disassembly and Assembly, "Fuel Injection Pump - Remove".

---

### NOTICE

**Keep all parts clean from contaminants.**

**Contaminants may cause rapid wear and shortened component life.**

---

---

### NOTICE

**Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the product. Be prepared to collect the fluid with suitable containers**

**before opening any compartment or disassembling any component containing fluids.**

**Dispose of all fluids according to local regulations and mandates.**

---



Illustration 1

g01375404

1. Remove nut (1).
- 



Illustration 2

g01375405

2. Use Tooling (A) in order to remove fuel injection pump gear (2).
-



---

Illustration 3

g01375406

3. Remove key (3).

---

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)