

Product: WHEEL LOADER

Model: 962G WHEEL LOADER 3BS

Configuration: 962G Wheel Loader 3BS00001-UP (MACHINE) POWERED BY 3126 Engine

## Disassembly and Assembly

### 950G and 962G Wheel Loaders and IT62G Integrated Toolcarrier Power Train

Media Number -SEN1381-10

Publication Date -01/10/2007

Date Updated -25/10/2007

i07093515

## Axle Housing - Disassemble

SMCS - 3260-015

## Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	138-7573	Link Bracket	2
B	1P-2420	Transmission Repair Stand	1
	FT-0996	Positioning Group	4
	FT-0957	Adapter Group	4
C	1P-1863	Pliers	1
D	4C-8358	Lifting Eyes	3
E	6V-7820	Torque Multiplier	1
	120-9877	Spanner Wrench As <sup>(1)</sup>	1
	1U-9478	Spanner Wrench As <sup>(2)</sup>	1
F	150-1782	Crossblock	1
	5F-7366	Forcing Screw	1
	3H-0466	Nut	1
	3H-0468	Plate	2
	9U-7692	Threaded Rod	2

<sup>(1)</sup> For use with M105 bearing nut.

<sup>(2)</sup> For use with M95 bearing nut.

**Start By:**

- a. Remove the fixed axle. Refer to Disassembly and Assembly, "Fixed Axle (Front) - Remove and Install".
- b. Remove the oscillating axle. Refer to Disassembly and Assembly, "Oscillating Axle (Rear) - Remove".

**Note:** The axle housing assemblies that are used in the front fixed axle and in the rear oscillating axle are similar. Therefore, both axle housing assemblies can be removed in the same manner.

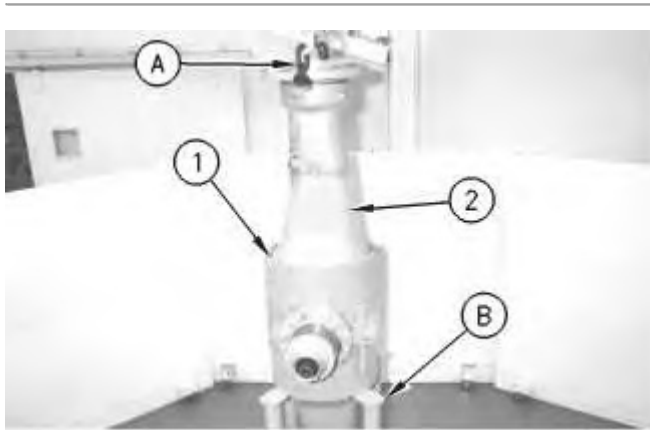



Illustration 1  
Typical Example

g00301040

1. Install the axle housing in a vertical position on Tooling (B).

**Note:** Carefully remove the axle housing assembly. Part of the wear gauge pin will remain in the axle housing assembly. The pin will remain in the axle housing assembly. The spring and the piston will remain in the differential housing.

2. Fasten Tooling (A) and a hoist to the rim of the axle shaft, as shown. Remove bolts (1) that secure axle housing assembly (2) to the differential housing. Carefully remove the axle housing assembly. The weight of axle housing assembly (2) is 295 kg (650 lb).

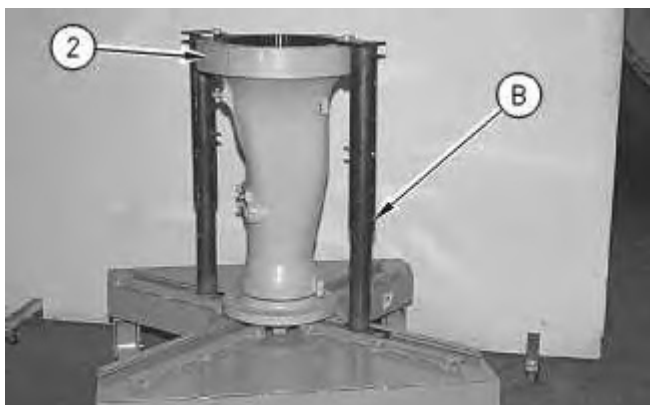

3. Remove the bottom half of the axle housing from Tooling (B). Install axle housing assembly (2) on Tooling (B), as shown.

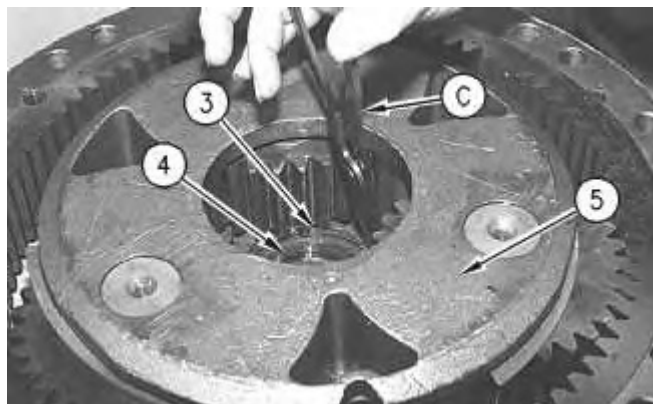


Illustration 3

**Note:** To remove retaining ring (3), planetary carrier assembly (5) must be disassembled.

4. Use Tooling (C) to remove retaining ring (3) from axle shaft (4).

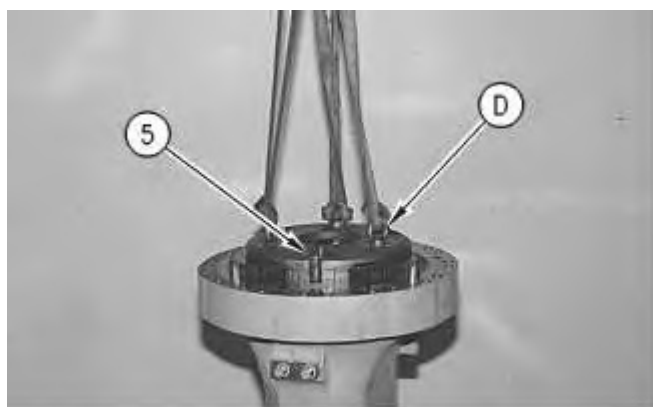


Illustration 4

5. Install Tooling (D) and suitable lifting slings to planetary carrier assembly (5), as shown.
  6. Use a hoist to remove the planetary carrier assembly from the axle housing assembly. The weight of the planetary carrier assembly is 80 kg (175 lb).
-

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)