

Product: WHEEL LOADER

Model: 962H WHEEL LOADER J6J

Configuration: 962H WHEEL LOADER J6J00001-UP (MACHINE) POWERED BY C7 ENGINE

Disassembly and Assembly

IT62H Integrated Toolcarrier and 950H and 962H Wheel Loaders Machine Systems

Media Number -REN8881-01

Publication Date -01/06/2009

Date Updated -08/06/2009

i02356712

Steering Control Valve (Command Control Steering) - Disassemble

SMCS - 4307-015

Disassembly Procedure

Start By:

- A. Remove the valve. Refer to Disassembly and Assembly, "Steering Control Valve (Command Control Steering) - Remove".

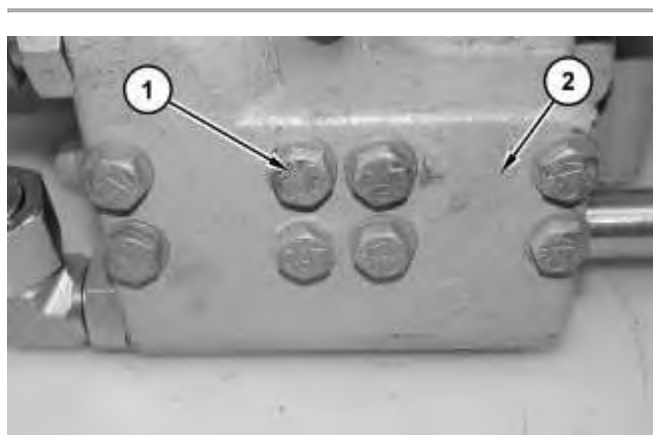


Illustration 1

g01177250



WARNING

Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

1. Remove bolts (1) and housing (2) .

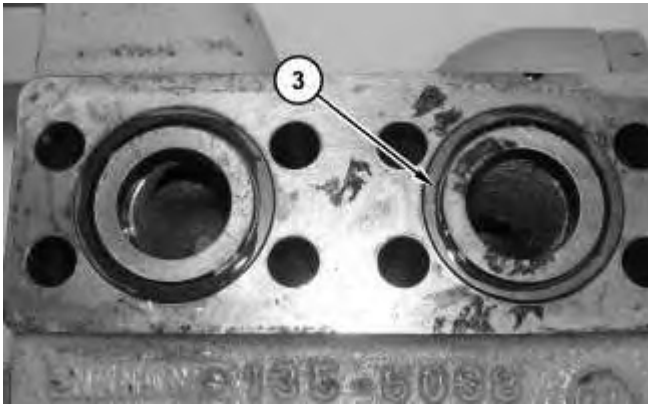


Illustration 2

g01177251

2. Remove O-ring seals (3) .

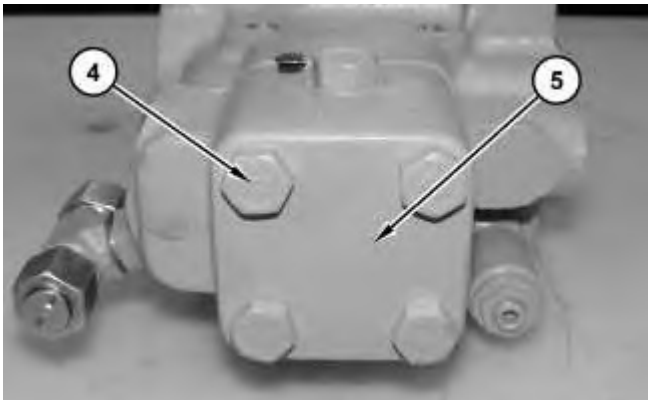


Illustration 3

g01177252



WARNING

Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

3. Remove bolts (4) and cover (5) .



Illustration 4

g01177253

4. Remove O-ring seals (6) and spool assembly (7) .

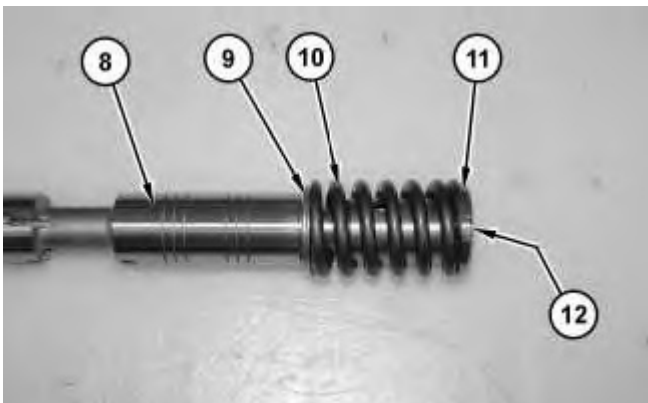


Illustration 5

g01177254



Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com