




Fig. 1100 FRAME

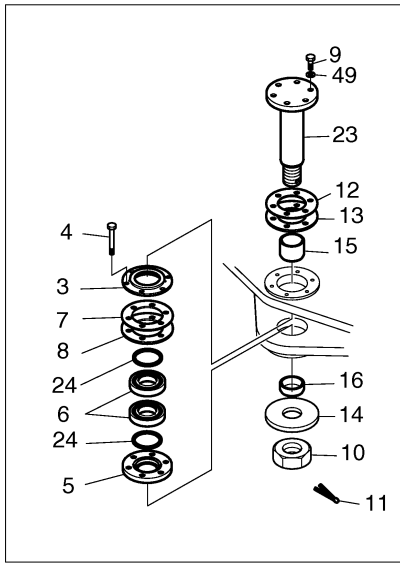

DETAIL A

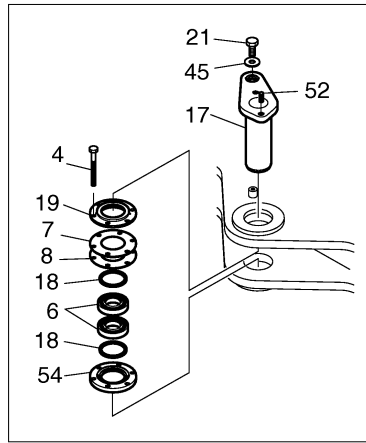


DETAIL B

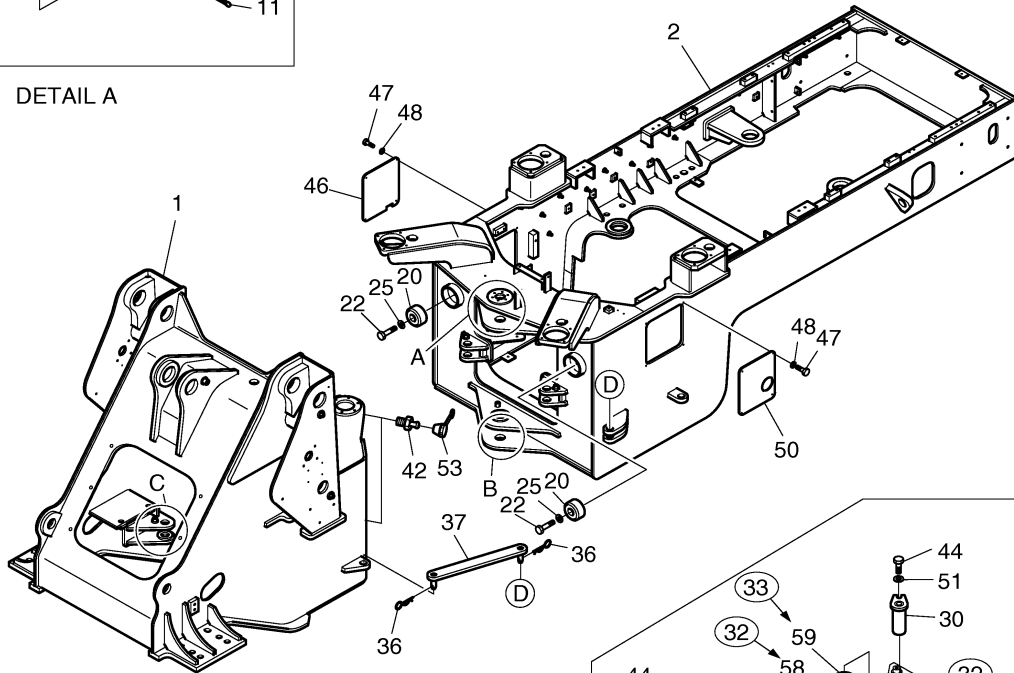

DETAIL C

Serial No. 1024 ~

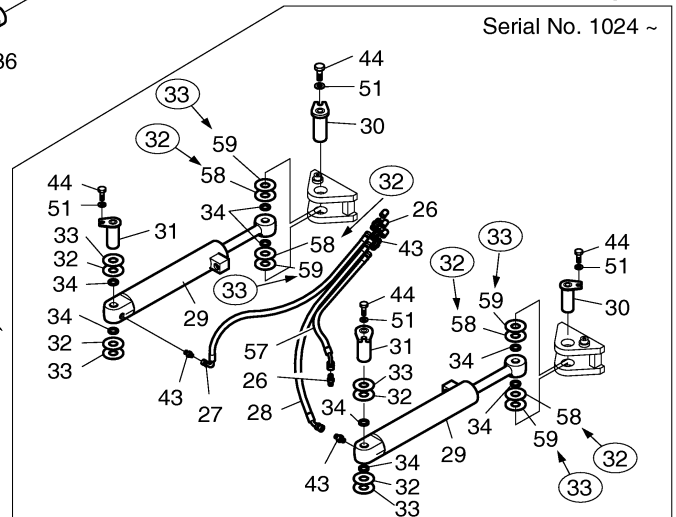

DETAIL C

Serial No.
1001 ~ 1023

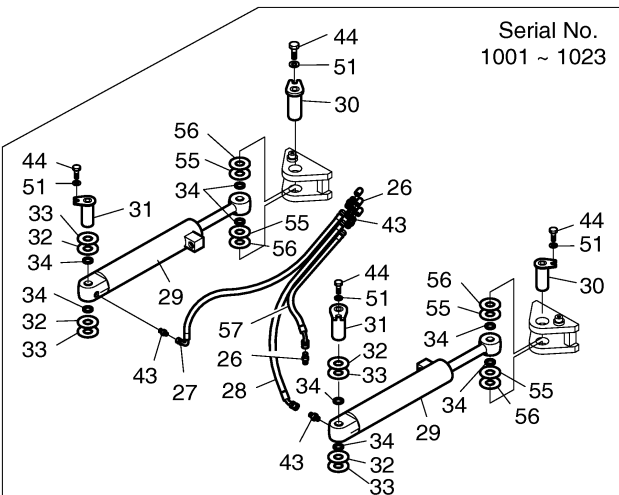


Fig. 1100 FRAME

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
-	600-00061	FRAME ASS'Y	-	D	1001~1242			
-	600-00061A	FRAME ASS'Y	-	D	1243~1547			
-	160609-00115	FRAME ASSY	-	D	1548~			
1	606-00054C	FRAME:FRONT	1		1001~1030	I	606-00054G	1
1	606-00054G	FRAME:FRONT	1		1031~1060			
1	606-00054J	FRAME:FRONT	1		1061~1547			
1	160612-00044	FRAME,FRONT	1		1548~			
2	606-00053C	FRAME:REAR	1		1001~1023			
2	606-00053E	FRAME:REAR	1		1024~1030	I	606-00053E	1
2	606-00053G	FRAME:REAR	1		1031~1060	I	606-00053H	1
2	606-00053H	FRAME:REAR	1		1061~1077	I	606-00053J	1
2	606-00053J	FRAME:REAR	1		1078~1109	I	606-00053K	1
2	606-00053K	FRAME:REAR	1		1110~1133			
2	606-00053L	FRAME:REAR	1		1134~1152			
2	606-00053M	FRAME:REAR	1		1153~1242	I	606-00053N	1
2	606-00053N	FRAME:REAR	1		1243~1550	I	160615-00199	1
2	160615-00199	FRAME,REAR	1		1551~			
3	4111-1013A	CAP:END	1					
4	S0559266	BOLT	12					
5	111-00029	CAP:BEARING	1					
6	4109-9068	BEARING:TAPER ROLLER	4					
7	4114-1864	SHIM 0.1T	12					
8	4114-1865	SHIM 0.5T	6					
9	S0558266	BOLT	6					
10	S4213633	NUT:CASTLE M33X3.5	1					
11	S5735791	PIN:SPLIT	1					
12	4114-4105	SHIM 0.2T	3					
13	4114-4106	SHIM 0.5T	4					
14	4114-4113	WASHER	1					
15	4114-1867	SPACER	1					
16	4114-1866	SPACER	1					
17	123-00368	PIN	1		1001~1550	I	120501-01218	1
17	120501-01218	PIN	1		1551~			
18	2180-1106D7	SEAL:DUST	2					
19	4111-1012A	CAP:END	1					
20	161-00311	RUBBER	2					

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
21	S0514853	BOLT	1					
22	S0521553	BOLT M16X2.0X45	2					
23	123-00369A	PIN	1		1001~1550	I	120501-01219	1
23	120501-01219	PIN	1		1551~			
24	2180-1106D8	SEAL:DUST	2					
25	S5010913	WASHER,PLAIN:M16	2					
26	2181-4112	ADAPTER	4					
27	DS2055682	HOSE	1					
28	DS2054225	HOSE	1					
29	440-00252	CYLINDER:STEERING	2					
30	123-00358	PIN:STEER	2		1001~1550	I	120501-01220	2
30	120501-01220	PIN,STEER	2		1551~			
31	123-00359	PIN:STEER	2		1001~1550	I	120501-01146	2
31	120501-01146	PIN,STEER;FRONT FRAME	2		1551~			
32	2114-1059D45	SHIM 1.6T	4		1001~1023			
32	2114-1059D45	SHIM 1.6T	8		1024~1152			
32	2114-1059D45	SHIM 1.6T	4		1153~			
33	2114-1059D46	SHIM 1.0T	4		1001~1023			
33	2114-1059D46	SHIM 1.0T	8		1024~1152			
33	2114-1059D46	SHIM 1.0T	4		1153~			
34	2180-1106BD21	SEAL:DUST	8					
36	4123-2423	PIN:SET	2					
37	178-00004	PLATE	1		1001~1030			
37	178-00004A	PLATE	1		1031~			
42	S6710041	NIPPLE:GREASE	2					
43	2181-1110D41	ADAPTER PF1/4-PT1/8	2					
44	S0511853	BOLT	4					
45	2114-1058D68	WASHER	1					
46	621-01481B	COVER:R.H	1					
47	S0508453	BOLT M8X1.25X12	8					
48	S5102503	WASHER,SPRING:M8	8					
49	4114-1793A	WASHER:HARD	6					
50	621-01480	COVER:L.H	1					
51	4114-4104A	WASHER	4					
52	S3524303	SCREW:SET M10X1.5X10	2					
53	160-00020	CAP:GREASE NIPPLE	5					
54	111-00030	CAP:BEARING	1					
55	2114-1058D3	SHIM	4		1001~1023			

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
56	2114-1058D44	SHIM	4		1001~1023			
57	DS2054226	HOSE PF1/4-770L	1					
58	2114-1059D3	SHIM	4		1153~			
59	DS7701366	SHIM	4		1153~			

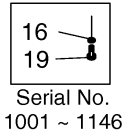


Fig. 1110 ENGINE MOUNTING

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
–	201-00054	ENGINE & TRANS. ASS'Y	–	D	1001~1264			
–	201-00054C	ENGINE & TRANS. ASS'Y	–	D	1265~			
1	201-00053	ENGINE ASS'Y(DB58TI)	1					
2	210-00004	TRANSMISSION ASS'Y	1					
3	181-00464	ADAPTER FLANGE	1					
4	115-00089	ADAPTER;RING	1					
5	195-00755A	BRACKET;R.H	1		1001~1137	I	195-00755B	1
5	195-00755B	BRACKET;R.H	1		1138~			
6	195-00756	BRACKET;L.H	1					
7	4197-2058A	BRACKET(R.H)	1					
8	4197-2059B	BRACKET;L.H	1					
9	161-00104	MOUNT;T/M	4		1001~1264	I	161-00552	4
9	161-00552	MOUNT;T/M	4		1265~			
10	161-00299	MOUNT;E/G	4		1001~1264	I	161-00553	4
10	161-00553	RUBBER;E/G MOUNTING	4		1265~			
11	2114-1929	WASHER	4					
12	4114-4116	WASHER;HARD M20	4					
13	S4033133	NUT	4					
14	S0771266	BOLT M20X1.5X120	4					
16	S5110603	WASHER;SPRING	3		1147~			
17	2114-1898D1	WASHER	4		1147~			
18	2120-2166D2	BOLT	4		1147~			
19	S0512053	BOLT	7		1001~1146			
19	S2212066	BOLT;SOCKET M10X1.5X25	3		1147~			
20	2114-1917A	SHIM	12					
21	203-00058A	MUFFLER;STD.	1					
22	2204-2008A	AIR CLEANER	1		1001~1178	I	2204-2008C	1
22	2204-2008C	AIR CLEANER	1		1179~1200	I	2204-2008E	1
22	2204-2008E	AIR CLEANER	1		1201~			
22A	2474-6006B	ELEMENT;OUTER	1					
22B	2474-9038	ELEMENT;INNER	1					
23	4114-4085	WASHER	8					
24	4183-4795E	MUFFLER;2nd	1					
25	198-00026	RUBBER	8					
26	S4012633	NUT	16					
27	193-00656	PIPE;EXHAUST	1					

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
28	195-01414	BRACKET	4					
29	S0559053	BOLT M10X1.5X75	4		1001~1264	I	S0559066	4
29	S0559066	BOLT M10X1.5X75	4		1265~			
30	S0514953	BOLT M12X1.75X22	4		1001~1264	I	S0514966	4
30	S0514966	BOLT	4		1265~			
31	4180-4011A	GASKET	1					
32	2204-9037	PRE-CLEANER	1		1001~1155	Y	2204-9031	1
32	2204-9031	PRE-CLEANER	1		1156~1335			
32	K1017883	PRE-CLEANER	1		1336~			
33	S0512263	BOLT M10X1.5X30	8		1001~1155	I	S0512266	8
33	S0512266	BOLT M10X1.5X30	8		1156~			
34	S5102603	WASHER,SPRING:M10	35		1001~1146			
34	S5102603	WASHER,SPRING:M10	28		1147~			
35	182-00032B	PIPE;FILLER	1					
36	4187-9002	DIPSTICK	1					
37	S2209666	BOLT;SOCKET	2					
38	S5110503	WASHER;SPRING	2					
39	S0518253	BOLT M14X2.0X30	1					
40	S5102803	WASHER;SPRING	1					
41	185-00068	HOSE	1					
42	185-00067	HOSE;AIR-CLEARER	1					
43	2182-1513	PIPE	1		1001~1152	I	193-00904	1
43	193-00904	PIPE	1		1153~			
44	4124-1662	CLAMP:BAND	2					
45	4182-1569B	PIPE;PRE CLEANER	1		1001~1335			
45	K1019016	PIPE;PRE CLEANER	1		1336~			
46	S0786253	BOLT M12X1.5X30	8		1001~1264	I	S0786266	8
46	S0786266	BOLT M12X1.5X30	8		1265~			
47	S5102703	WASHER;SPRING M12	12					
48	S0527466	BOLT M20X2.5X40	8					
49	S5103103	WASHER;SPRING	8					
50	2181-2690	ADAPTER;FILTER	1		1001~1146			
51	2170-9005	INDICATOR	1					
52	S0565056	BOLT M16X2.0X40	4					
53	S5102903	WASHER,SPRING	4					
54	S2562556	STUD M10X1.5X45	12					
55	2114-1058D30	WASHER;PLAIN	4					
56	4180-9159	GASKET	1					

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
57	4183-3610	PIPE;E/G OIL	1					
60	114-00403	WASHER	4					
61	4181-9089A	PLUG	1					
62	S0758253	BOLT M10X1.25X35	8					
63	114-00404	SPACER	4					
64	2124-1024D14	CLAMP;HOSE	3					
65	2124-1024D16	CLAMP;HOSE	1					



FRONT

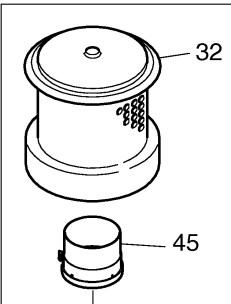


Fig. 1115 ENGINE MOUNTING (TIER-II)

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
–	201-00098G	ENGINE & TRANS. ASS'Y	–	D				
1	201-00156	ENGINE ASS'Y(DB58TIS)	1					
2	210-00004	TRANSMISSION ASS'Y	1					
3	181-00464	ADAPTER FLANGE	1					
4	115-00089	ADAPTER:RING	1					
5	195-00755A	BRACKET:R.H	1					
6	195-00756	BRACKET:L.H	1					
7	4197-2058A	BRACKET(R.H)	1					
8	4197-2059B	BRACKET:L.H	1					
9	161-00104	MOUNT:T/M	4					
10	161-00299	MOUNT:E/G	4					
11	2114-1929	WASHER	4					
12	4114-4116	WASHER:HARD M20	4					
13	S4033133	NUT	4					
14	S0771266	BOLT M20X1.5X120	4					
15	2124-1024D16	CLAMP:HOSE	1					
16	2124-1024D14	CLAMP:HOSE	3					
17	114-00404	SPACER	4					
18	S0758253	BOLT M10X1.25X35	8					
19	S0512053	BOLT	3		1001~1146			
19	S2212066	BOLT:SOCKET M10X1.5X25	3		1147~			
20	4181-9089A	PLUG	1					
21	203-00081A	MUFFLER	1					
22	2204-9039A	CLEANER:AIR	1					
23	4114-4085	WASHER	8					
24	203-00055	PIPE:MUFFLER	1					
25	198-00026	RUBBER	8					
26	S4012633	NUT	16					
27	193-00722	PIPE:EXHAUST	1					
28	195-01414	BRACKET	4					
29	S0559053	BOLT M10X1.5X75	4					
30	S0514953	BOLT M12X1.75X22	4					
31	114-00403	WASHER	4					
32	2204-9037	PRE-CLEANER	1		1001~1155	Y	2204-9031	1
32	2204-9031	PRE-CLEANER	1		1156~1335			
32	K1017883	PRE-CLEANER	1		1336~1484			

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
32	K1043471	PRE CLEANER	1		1485~			
33	S0512263	BOLT M10X1.5X30	4					
34	S5102603	WASHER,SPRING;M10	27		1001~1146			
34	S5102603	WASHER,SPRING;M10	24		1147~			
35	182-00032B	PIPE;FILLER	1					
36	4187-9002	DIPSTICK	1					
37	S2209666	BOLT;SOCKET	2					
38	S5110503	WASHER;SPRING	2					
39	S0518253	BOLT M14X2.0X30	1					
40	S5102803	WASHER;SPRING	1					
41	185-00350	HOSE	1					
42	185-00351	HOSE	1					
43	2182-1513	PIPE	1		1001~1152	I	193-00904	1
43	193-00904	PIPE	1		1153~			
44	2124-1593A	BAND;AIR CLEANER	2					
45	4182-1569B	PIPE;PRE CLEANER	1		1001~1335			
45	K1019016	PIPE;PRE CLEANER	1		1336~1484			
45	K1045405	PIPE;EXTENSION	1		1485~			
46	S0786253	BOLT M12X1.5X30	8					
47	S5102703	WASHER;SPRING M12	12					
48	S0527466	BOLT M20X2.5X40	8					
49	S5103103	WASHER;SPRING	8					
50	2181-2690	ADAPTER;FILTER	1		1001~1146			
51	2170-9005	INDICATOR	1					
52	S0565056	BOLT M16X2.0X40	4					
53	S5102903	WASHER,SPRING	4					
54	S2562556	STUD M10X1.5X45	12					
55	2114-1058D30	WASHER;PLAIN	4					
56	4180-9159	GASKET	1					
57	4183-3610	PIPE;E/G OIL	1					
58	2114-2031D6	WASHER;SPRING	4					
59	2120-2166D32	BOLT	4					
60	2114-1917A	SHIM	12					
61	2114-1898D1	WASHER	4					
62	2120-2166D2	BOLT	4					
63	S5110603	WASHER;SPRING	3		1147~			

Serial No. 1001 ~ 1472

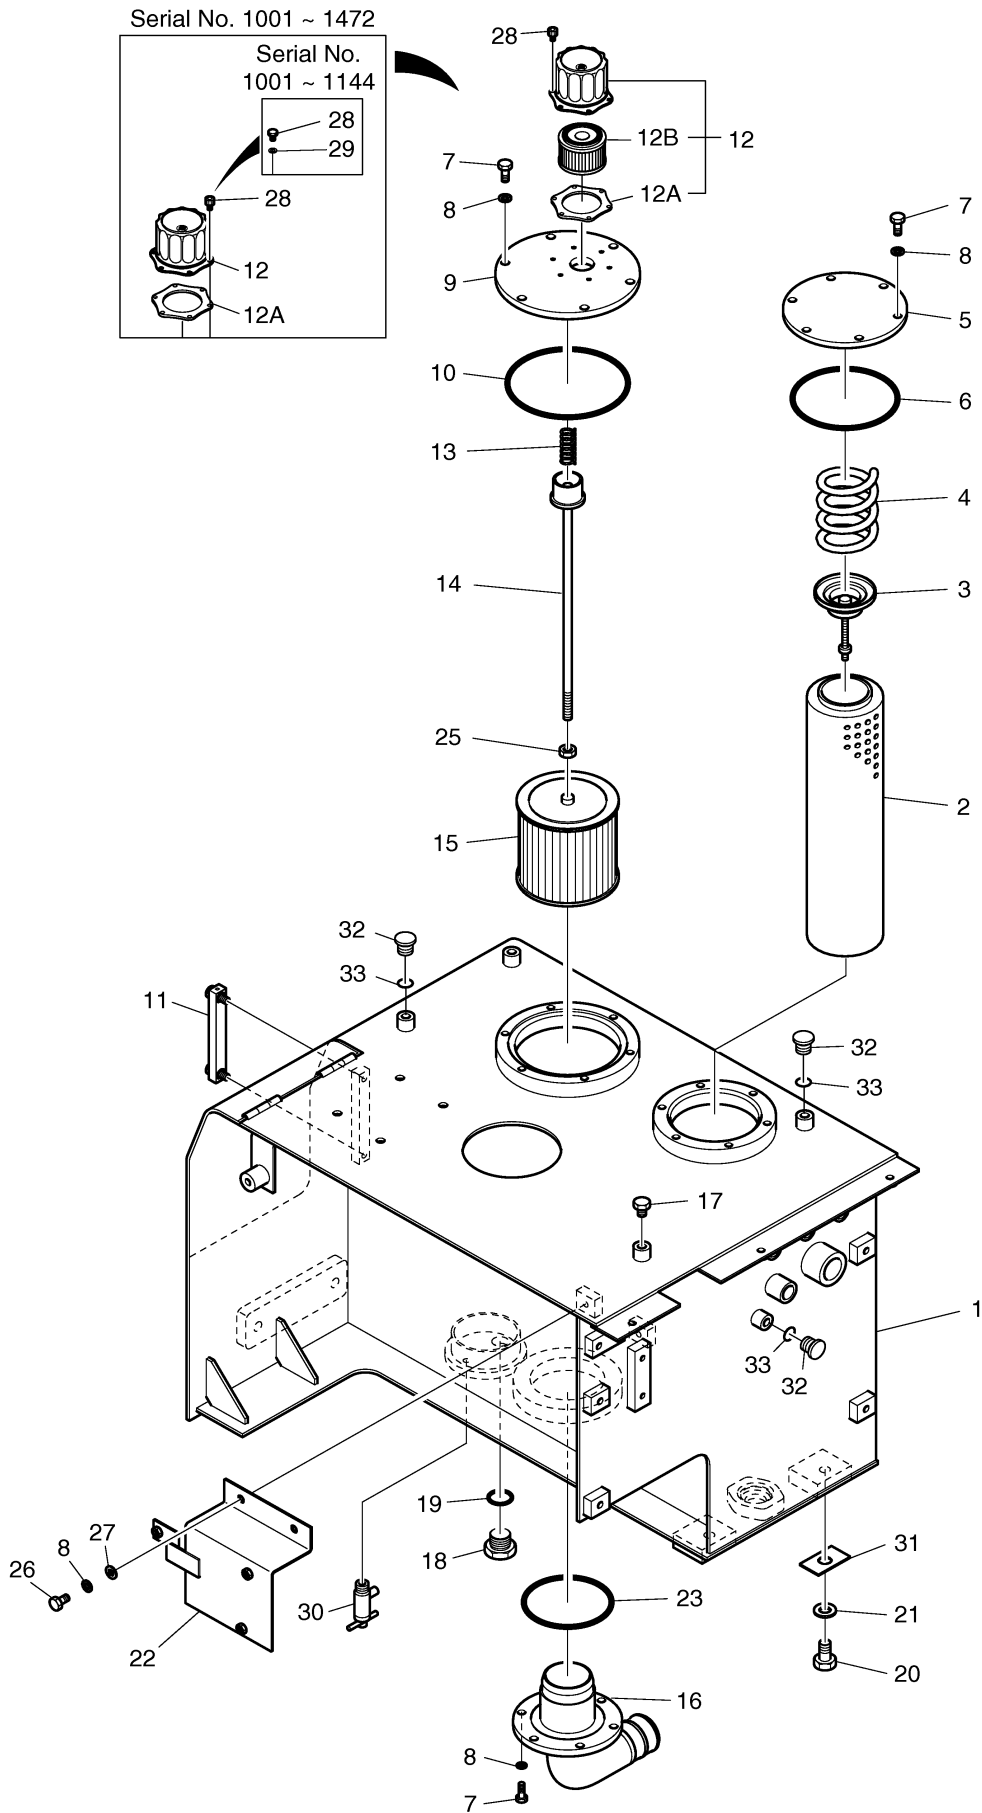


Fig. 1120 OIL TANK

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
—	470-00068	OIL TANK ASS'Y	—	D				
1	470-00067E	TANK:OIL	1		1001~1023	I	470-00067G	1
1	470-00067G	TANK:OIL	1		1024~1055	Y	470-00067H	1
1	470-00067H	TANK:OIL	1		1056~1152	I	470-00067J	1
1	470-00067J	TANK:OIL	1		1153~1519	I	470-00067K	1
1	470-00067K	TANK:OIL	1		1520~			
2	2474-9008	ELEMENT:FILTER	1					
3	2426-9009	VALVE:BY-PASS	1					
4	2129-1038	SPRING	1					
5	4213-4011B	COVER	1					
6	S8011300	O-RING	1					
7	S0512053	BOLT	18					
8	S5102603	WASHER,SPRING:M10	20					
9	4473-1079B	COVER	1					
10	S8011650	O-RING	1					
11	2119-1007	GAUGE:LEVEL	1					
12	422-00027A	BREATHER:AIR	1		1001~1144	I	422-00028A	1
12	422-00028A	BREATHER:AIR	1		1145~1472	I	K1012685A	1
12A	180-00200	PACKING	1		1001~1472			
12	K1012685A	BREATHER:AIR	1		1473~			
12A	K9005662	GASKET	1		1473~			
12B	K1029257	ELEMENT:AIR BREATHER	1		1473~			
13	2129-1008	SPRING:COMPRESS	1					
14	136-00025	ROD	1					
15	2474-9016A	FILTER:SUCTION	1					
16	193-00569	PIPE	1					
18	2181-1950D9	PLUG	1					
19	S8000291	O-RING	1					
20	S0521256	BOLT M16X2.0X30	5					
21	2114-1816	WASHER:HARD	5					
22	195-01023B	BRACKET:COVER	1					
23	S8011200	O-RING	1					
24	4161-2456	RUBBER:CUSHION	1					
25	S4012733	NUT	1					
26	S0511853	BOLT	1					
27	S5010613	WASHER,PLAIN:M10	2					

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
28	S3450816	BOLT M5X0.5X8	6		1001~1144			
28	S2202766	BOLT	6		1145~			
29	S5000213	WASHER;PLAIN M5	6		1001~1144			
30	2186-9005	COCK	1					
31	4114-4159A	SHIM	5					
32	S0514653	BOLT M12X1.75X16	2					
33	2181-1890D2	PLUG	3		1056~			
34	S8000111	O-RING	3		1056~			

Fig. 1125 OIL TANK (TIER-II)



Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com