


FORD

Service Manual

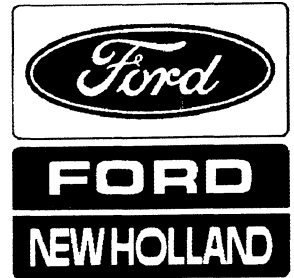

Wheel Loaders A-62, A-64 and A-66

Part 1 – Engine System

Part 2 – Fuel System

Part 3 – Electrical System

Part 4 – Transmission

Part 5 – Engine-Transmission Removal

Part 6 – Axles, Brakes, Drive Shafts, Wheels and Tires

40006230A

Vol. 1



Reprinted

FOREWORD

This manual provides information for the proper servicing of the Ford A62 — A64 — A66 Wheel Loaders. The manual is grouped into parts, each containing chapter divisions. The chapters contain such information as general operating principles, detailed inspection and repair procedures, and full specifics regarding trouble shooting, specifications, and special tools. Whenever possible, the special tools are illustrated performing their specific operations. Any reference made in the manual to right, left, front, rear, top, or bottom, is as viewed facing the direction of forward travel from the driver's seat.

The material contained in this manual was correct at the time the manual was approved for printing. Ford policy is one of continuous improvement and the Ford Motor Company reserves the right to discontinue models at any time or change specifications or design without notice and without incurring obligation.

Ford Tractor Operations
Ford Motor Company

CONTENTS

Part 1 – Engine System	Vol. 1
Part 2 – Fuel System	Vol. 1
Part 3 – Electrical System	Vol. 1
Part 4 – Transmission	Vol. 1
Part 5 – Engine-Transmission Removal	Vol. 1
Part 6 – Axles, Brakes, Drive Shafts, Wheels and Tires	Vol. 1

CONTENTS

Part 7 – Steering	Vol. 2
Part 8 – Hydraulic System	Vol. 2
Part 9 – Ford Wheel Loader Frames Loader Linkage and Buckets	Vol. 2
Part 10 – Operator’s Platform and Sheet Metal ..	Vol. 2
Part 11 – Air Conditioning and Heating	Vol. 2
Reference Information	Vol. 2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com