

Operator's Manual

ZAXIS

470LC-5G

670LC-5G

870LC-5G

Hydraulic Excavator

INDEX

MACHINE NUMBERS

SAFETY

SAFETY SIGNS

COMPONENTS NAME

GETTING ON/OFF THE MACHINE

OPERATOR'S STATION

BREAK-IN

OPERATING THE ENGINE

DRIVING THE MACHINE

OPERATING THE MACHINE

TRANSPORTING

MAINTENANCE

MAINTENANCE UNDER SPECIAL ENVIRONMENTAL CONDITIONS

STORAGE

TROUBLESHOOTING

SPECIFICATIONS

INDEX

CONTENTS

MACHINE NUMBERS	1	Avoid Applying Heat to Lines Containing Flammable Fluids	S-34
SAFETY	S-1	Precautions for Handling Accumulator and Gas Damper.....	S-34
Recognize Safety Information	S-1	Remove Paint Before Welding or Heating	S-35
Understand Signal Words.....	S-1	Beware of Asbestos and Silicon Dust and Other Contamination.....	S-35
Follow Safety Instructions.....	S-2	Prevent Battery Explosions	S-36
Prepare for Emergencies.....	S-3	Service Air Conditioning System Safely	S-36
Wear Protective Clothing.....	S-3	Handle Chemical Products Safely.....	S-37
Protect Against Noise	S-4	Dispose of Waste Properly.....	S-37
Inspect Machine	S-4	Never Ride Attachment.....	S-38
General Precautions for Cab.....	S-5	Precautions for Communication Terminal.....	S-38
Use Handholds and Steps	S-6	Precaution for Communication Terminal Equipment	S-39
Adjust the Operator's Seat	S-6	SAFETY SIGNS	S-41
Ensure Safety Before Rising from or Leaving Operator's Seat	S-7	COMPONENTS NAME.....	1-1
Fasten Your Seat Belt	S-7	Components Name	1-1
Move and Operate Machine Safely.....	S-8	GETTING ON/OFF THE MACHINE	1-2
Operate Only from Operator's Seat	S-8	Getting ON/OFF the Machine	1-2
Jump Starting.....	S-9	OPERATOR'S STATION	1-3
Keep Riders off Machine	S-9	Cab Features (Std. Model)	1-3
Precautions for Operations	S-10	Cab Features (with Attachment).....	1-4
Investigate Job Site Beforehand	S-11	Multi Function Monitor	1-5
Install OPG Guard	S-12	Basic Screen.....	1-6
Provide Signals for Jobs Involving Multiple Machines....	S-13	How to Use Screens	1-7
Confirm Direction of Machine to Be Driven.....	S-13	Displaying Basic Screen	1-7
Drive Machine Safely.....	S-14	Hour Meter	1-10
Avoid Injury from Rollaway Accidents.....	S-16	Clock.....	1-10
Avoid Injury from Back-Over and Swing Accidents	S-17	Fuel Gauge	1-10
Keep Person Clear from Working Area.....	S-18	Coolant Temperature Gauge	1-11
Never Position Bucket Over Anyone	S-18	Operating Status Icon Display.....	1-11
Avoid Undercutting.....	S-19	Security Functions (Optional)	1-12
Avoid Tipping.....	S-19	Input Password	1-12
Never Undercut a High Bank.....	S-20	Extending Password Duration Time	1-13
Dig with Caution.....	S-20	Alarm Occurrence Screen.....	1-14
Operate with Caution	S-20	Remedy	1-16
Avoid Power Lines.....	S-21	Main Menu.....	1-19
Precautions for Lightning.....	S-21	Air Conditioner.....	1-20
Object Handling	S-22	Circulation Air Mode.....	1-20
Protect Against Flying Debris	S-22	Air Conditioner ON/OFF	1-20
Park Machine Safely.....	S-23	Radio	1-21
Handle Fluids Safely—Avoid Fires.....	S-23	Work Mode	1-22
Transport Safely	S-24	Attachment Selection	1-22
Practice Safe Maintenance	S-25	Mail (Optional).....	1-23
Warn Others of Service Work	S-26	Setting Menu	1-25
Support Machine Properly.....	S-26	Date and Time.....	1-26
Stay Clear of Moving Parts	S-27	Time Adjustment	1-26
Prevent Parts from Flying	S-27	Date Adjustment.....	1-28
Store Attachments Safely	S-28	Display Mode Setting	1-30
Prevent Burns.....	S-28	Attachment Adjust.....	1-32
Replace Rubber Hoses Periodically.....	S-29	Flow Rate Adjustment.....	1-32
Avoid High-Pressure Fluids	S-29	Attachment Name Input.....	1-34
Prevent Fires.....	S-30	Auto-Lubrication	1-36
Evacuating in Case of Fire.....	S-32	Lubrication Interval Setting	1-36
Beware of Exhaust Fumes.....	S-32		
Precautions for Welding and Grinding	S-33		
Avoid Heating Near Pressurized Fluid Lines	S-34		

CONTENTS

Password Change (Optional).....	1-38	Handle (Emergency Engine Stop)	1-87
Sub Meter	1-42	Engine Stop Switch (for Maintenance).....	1-87
Rear View Camera Monitor (Optional)	1-44	Fuse Box.....	1-88
Rear View Camera ON/OFF	1-44	Fuse Box 1	1-88
Brightness Adjustment.....	1-46	Fuse Box 2	1-88
Language Settings	1-48	Auto Air Conditioner	1-89
Lists of Display Language.....	1-50	Features	1-89
Unit Selection	1-51	Components Name	1-90
Display Item Selection (Rear View Camera OFF)	1-53	Controller Part Name and Function	1-91
Main Menu Sequence Change	1-55	Cab Heater Operation	1-93
Information Menu	1-57	Cooling Operation	1-94
Operation	1-58	Defroster Operation	1-95
Breaker Operation	1-58	Cool Head/Warm Feet Operation.....	1-95
Attachment Operation.....	1-60	Tips for Optimal Air Conditioner Usage	1-96
Travel Operation.....	1-62	For Rapid Cooling	1-96
Actual Operation.....	1-64	When Windows Become Clouded	1-96
Maintenance	1-66	Off-Season Air Conditioner Maintenance	1-96
Maintenance Notice.....	1-66	AM/FM Radio Operation	1-97
Time Remains and Maintenance Interval.....	1-68	Controls on the Radio.....	1-97
Monitoring.....	1-70	Tuning Procedure	1-97
Switch Panel.....	1-72	Station Presetting Procedure.....	1-98
Return to Previous Screen (Monitor)	1-73	Station Auto-Presetting Procedure	1-99
Return to Basic Screen (Monitor)	1-73	TONE Control	1-100
Select/Confirm Switch (Monitor).....	1-73	Audio Input (Optional)	1-101
Temperature Control Switch/Mode Switch (Air Conditioner)	1-73	Audio Input Selection	1-101
AUTO/OFF Switch/Fan Switch (Air Conditioner).....	1-73	Connecting Audio Device.....	1-101
AM/FM Selector/Tuning Switch (Radio).....	1-74	Volume Control of Audio Device.....	1-101
Power Switch/Volume Control Knob (Radio)	1-74	Cab Door Release Lever	1-102
Engine Control Dial	1-74	Opening/Closing and Removing Cab Inside Window ..	1-103
Auto-Idle Switch	1-75	Opening/Closing Upper Front Window	1-104
Travel Mode Switch	1-75	Opening/Closing Upper Front Window	1-104
Mode Switch.....	1-76	Removing and Storing Lower Front Window	1-105
ECO (Economy) Mode	1-76	Removing and Storing Lower Front Window	1-105
PWR (Power) Mode.....	1-76	Opening Side Windows.....	1-106
H/P (High Power) Mode	1-76	Opening/Closing Overhead Window	1-107
Work Light Switch.....	1-77	Opening/Closing Overhead Window (Clear Hatch: If Equipped)	1-108
Wiper/Washer Switch	1-78	Emergency Exit	1-109
Numeric Keypad.....	1-79	Adjusting Operator's Seat	1-110
Switch Panel (for Optional Equipment).....	1-80	Seat Height and Angle Adjustment	1-110
Travel Alarm Deactivation Switch (Optional) (1)	1-81	Console and Seat Fore-aft Adjustment.....	1-110
Rear Light Switch (Optional) (2).....	1-81	Seat Fore-Aft Adjustment	1-110
Boom Mode Switch (3).....	1-81	Suspension Adjustment	1-110
Swing Alarm Deactivation Switch (Optional) (4)	1-81	Backrest Adjustment	1-111
Auto-Lubrication Switch (5)	1-82	Armrest Adjustment	1-111
Auto-Lubrication Selector Switch (Optional) (6)	1-82	Installation and Adjustment of Mirrors	1-112
Seat Heater Switch (Optional) (7)	1-82	1 m-Vicinity Visibility.....	1-112
Key Switch.....	1-83	Seat Belt	1-113
Power Boost Switch	1-83	Seat Belt.....	1-113
Horn Switch	1-83	Battery Disconnect Switch (Optional).....	1-114
Cigar Lighter.....	1-84	Switch Operation	1-115
Using Cigar Lighter	1-84	BREAK-IN	2-1
Using Cigar Lighter Port as External Power Source	1-84	Observe Engine Operation Closely	2-1
Cab Light Switch.....	1-85	Every 10 Hours or Daily	2-1
Installing Fire Extinguisher (Optional)	1-85	After the First 50 Hours	2-1
Pilot Control Shut-Off Lever	1-86	After the First 100 Hours	2-1

CONTENTS

OPERATING THE ENGINE 3-1	Correct Maintenance and Inspection Procedures.....7-1
Inspect Machine Daily Before Starting3-1	Check the Hour Meter Regularly.....7-3
Before Starting Engine3-2	Use Correct Fuels and Lubricants7-3
Starting the Engine.....3-3	Layout.....7-4
Check Instruments After Starting.....3-7	Maintenance Guide Table.....7-7
Using Booster Batteries3-8	Preparations for Inspection and Maintenance7-9
Stopping the Engine 3-10	Hood and Access Covers..... 7-10
DRIVING THE MACHINE 4-1	Daily Check 7-13
Drive the Machine Carefully4-1	Maintenance Guide 7-14
Steering the Machine Using Pedals4-2	Periodic Replacement of Parts..... 7-20
Steering the Machine Using Levers4-3	Kind of Oils..... 7-21
Travel Mode Switch4-4	A. Greasing..... 7-25
Travel Alarm (Optional)4-4	Front Joint Pins 7-25
Operating on Soft Ground4-5	Swing Bearing 7-27
Raise One Track Using Boom and Arm4-6	Swing Internal Gear..... 7-28
Towing Machine a Short Distance.....4-7	Automatic/Manual Lubrication (Optional)..... 7-29
Operating in Water or Mud4-8	Auto-Lubrication 7-29
Parking the Machine on Slopes.....4-9	Manual Lubrication 7-31
Parking the Machine4-9	Lubricator (Optional)..... 7-33
OPERATING THE MACHINE 5-1	Greasing Method 7-33
Control Lever (ISO Pattern)5-1	Grease Container Replacement..... 7-35
Control Lever (HITACHI Pattern) (Optional).....5-2	B. Engine 7-37
Attachment Pedal (Hydraulic Breaker) (Optional)5-3	Check Engine Oil Level..... 7-37
Attachment Pedal (Hydraulic Crusher) (Optional).....5-4	Change Engine Oil, Replace Engine Oil Filter 7-38
Pilot Control Shut-Off Lever5-5	C. Transmission..... 7-41
Warming Up Operation.....5-6	Pump Transmission (ZX670LC-5G, 870LC-5G) 7-41
Engine Speed Control.....5-7	Swing Reduction Gear 7-43
Auto-Idle5-8	Travel Reduction Gear 7-45
Work Mode 5-10	D. Hydraulic System..... 7-47
Power Boost Switch 5-13	Inspection and Maintenance of Hydraulic Equipment... 7-47
Mode Switch 5-14	Check Hydraulic Oil Level 7-50
Operating Backhoe 5-15	Water Drain from Hydraulic Oil Tank..... 7-51
Precaution for Arm Roll-In/Bucket Roll-In Combined	Change Hydraulic Oil..... 7-52
Operation..... 5-15	Suction Filter Cleaning..... 7-52
Grading Operation..... 5-16	Bleed Air from the Hydraulic System 7-55
Do Not Strike the Ground with Bucket Teeth 5-17	Replacement of Full-Flow Filter 7-56
Avoid Hammer Work 5-17	Replace Pump Drain Filter 7-57
Avoid Abusive Operation 5-18	Replace Pilot Oil Filter..... 7-58
Avoid Side Load the Bucket..... 5-18	Replace Air Breather Element..... 7-60
Do Not Use Wide Track Shoes on Rough Ground. 5-19	Check Hoses and Lines 7-61
Object Handling --- If Equipped..... 5-20	E. Fuel System 7-66
Hydraulic Breaker and Hydraulic Crusher..... 5-22	Drain Fuel Tank Sump..... 7-68
Precautions for Breaker Operation..... 5-25	Check Water Separator 7-69
Precautions for Crusher Operation 5-33	Bleed Air from the Fuel System..... 7-70
Attachment..... 5-36	Replace Fuel Main Filter..... 7-71
How to Lower Boom In Case of Emergency and When	Replace Fuel Pre-Filter Element..... 7-72
Engine Stops..... 5-38	Replace Fuel Double Pre-Filter Element (Option) 7-72
Precautions for After Operations 5-39	Clean Feed Pump Strainer 7-74
TRANSPORTING 6-1	Check Fuel Hoses 7-75
Transporting by Road6-1	F. Air Cleaner..... 7-76
Loading/Unloading on a Trailer6-2	Clean Air Cleaner Element..... 7-76
Fastening Machine for Transporting6-4	Replace Air Cleaner Outer/Inner Element..... 7-76
Unloading6-4	G. Cooling System 7-79
MAINTENANCE..... 7-1	Check Coolant Level 7-80
	Change Coolant..... 7-81

CONTENTS

Clean Radiator, Oil Cooler and Inter Cooler (ZX670LC-5G, 870LC-5G) Core	7-83	Shoe Types and Applications ZX870LC-5G	12-9
Clean Radiator, Oil Cooler and Inter Cooler (ZX670LC-5G, 870LC-5G) Front Screen	7-83	Bucket Types and Applications ZX870LC-5G.....	12-9
Clean Air Conditioner Condenser	7-83	INDEX.....	14-1
H. Air Conditioner.....	7-84		
Clean and Replace Air Conditioner Filter	7-84		
Check Air Conditioner	7-86		
Adjust Compressor Belt Tension.....	7-87		
Check Looseness at Each of Fastened Areas.....	7-87		
Check at Preseason and Off-Season.....	7-88		
I. Electrical System.....	7-89		
Battery.....	7-89		
Replacing Fuses	7-94		
J. Miscellaneous	7-96		
Check and Replace Bucket Teeth	7-96		
Change Bucket.....	7-99		
Adjust Bucket Linkage	7-102		
Remove Travel Levers	7-103		
Check and Replace Seat Belt.....	7-103		
Check Windshield Fluid Level	7-104		
Check Track Sag	7-105		
Clean Cab Floor.....	7-108		
Retighten Cylinder Head Bolt.....	7-109		
Inspect and Adjust Valve Clearance	7-109		
Check of Fuel Injection Timing.....	7-109		
Measure Engine Compression Pressure.....	7-109		
Check Starter and Alternator	7-109		
Check Water Pump	7-109		
Check and Replace Injection Nozzle.....	7-109		
Check Gas Damper	7-110		
Check Cushion Rubber of Handrail (ZX470LC-5G)....	7-110		
Tightening and Retightening Torque of Nuts and Bolts.....	7-110		
Check O-rings in Bucket	7-148		
MAINTENANCE UNDER SPECIAL ENVIRONMENTAL CONDITIONS	9-1		
Maintenance Under Special Environmental Conditions...	9-1		
STORAGE	10-1		
Storing the Machine.....	10-1		
Removing the Machine From Storage.....	10-2		
TROUBLESHOOTING.....	11-1		
Troubleshooting	11-1		
SPECIFICATIONS	12-1		
Specifications ZX470LC-5G.....	12-1		
Working Ranges ZX470LC-5G	12-2		
Shoe Types and Applications ZX470LC-5G	12-3		
Bucket Types and Applications ZX470LC-5G.....	12-3		
Specifications ZX670LC-5G.....	12-4		
Working Ranges ZX670LC-5G	12-5		
Shoe Types and Applications ZX670LC-5G	12-6		
Bucket Types and Applications ZX670LC-5G.....	12-6		
Specifications ZX870LC-5G.....	12-7		
Working Ranges ZX870LC-5G	12-8		

MACHINE NUMBERS

The manufacturing Nos. explained in this group is the individual number (serial No.) given to each machine and hydraulic components. These numbers are requested when inquiring any information on the machine and/or components. Fill these serial Nos. in the blank spaces in this group to immediately make them available upon request.

Machine

ZAXIS	
Model type	
Product	Hydraulic Excavator
Identification Number	
 日立建機株式会社 Hitachi Construction Machinery Co., Ltd. 650, Kameoka-cho, Tsukuba-shi, Ibaraki-ken, 300-0013 Japan	

MZX5-00-001EN


Product Identification Number

PRODUCT
IDENTIFICATION
NUMBER : _____


Engine

TYPE : _____


MFG. NO. : _____

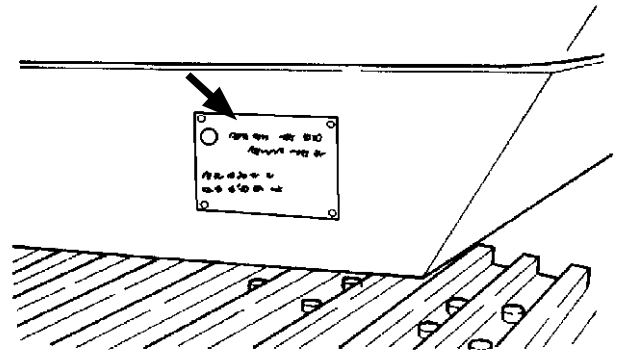


M157-00-001

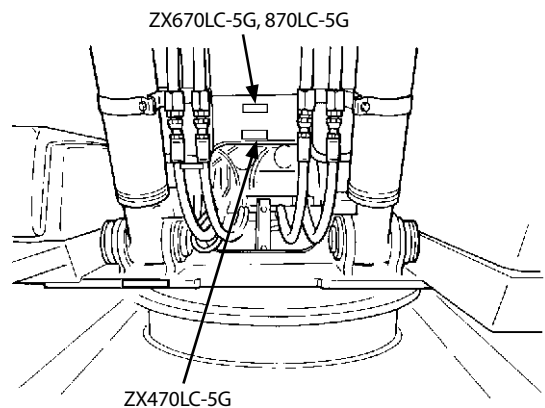

M157-12-008

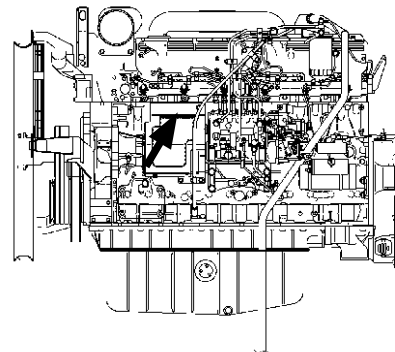

M16J-00-004

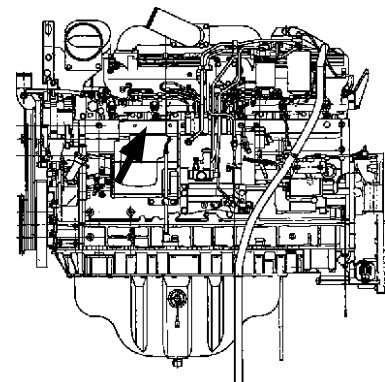


MJAC-00-001

MACHINE NUMBERS

Travel Motor


TYPE : _____

MFG. NO. : _____

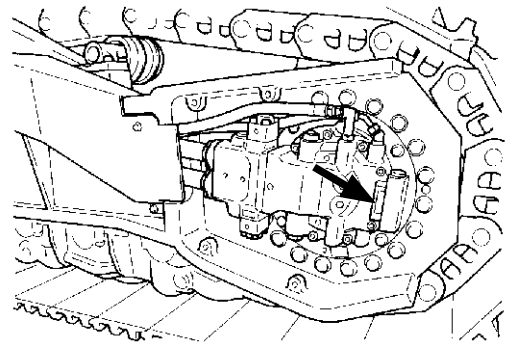


ZX470LC-5G

M111-12-007

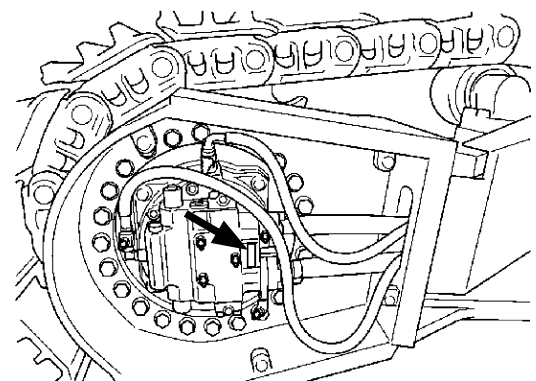

ZX670LC-5G

M17P-01-001

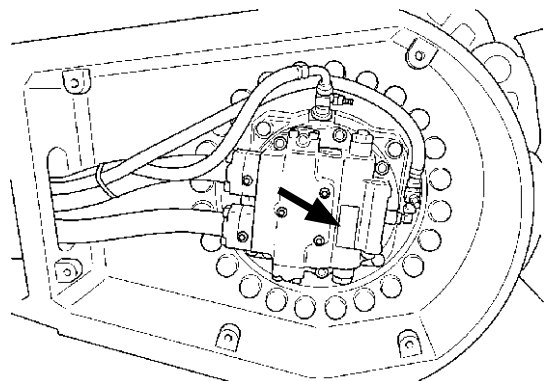

ZX870LC-5G


M17V-00-002

MACHINE NUMBERS

Swing Motor


TYPE : _____

MFG. NO. : _____

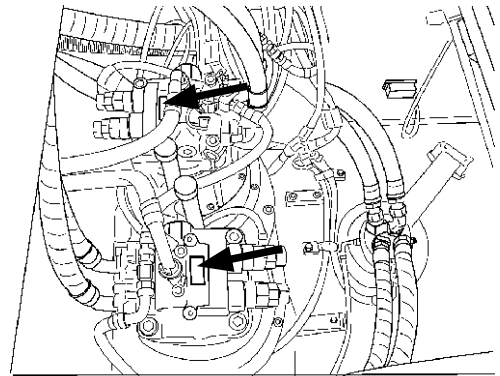


ZX470LC-5G

M16J-07-007

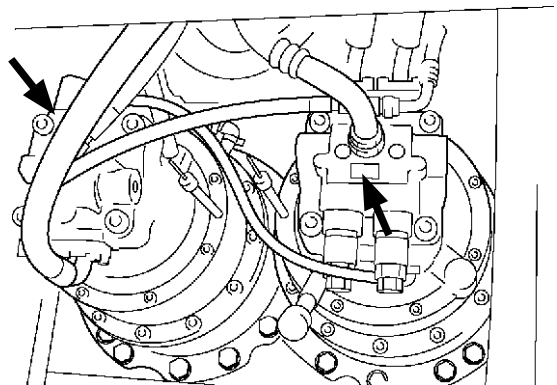

ZX670LC-5G

M1J7-07-005

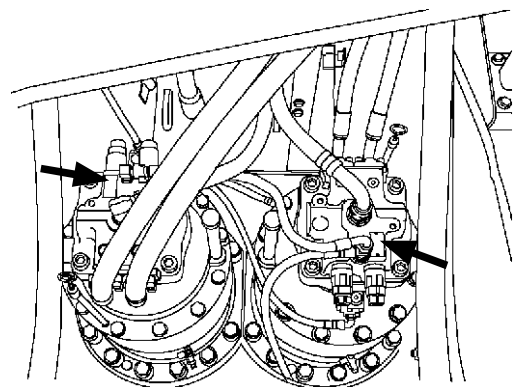

ZX870LC-5G


M1JB-00-001

MACHINE NUMBERS

Hydraulic Pump


TYPE : _____

MFG. NO. : _____

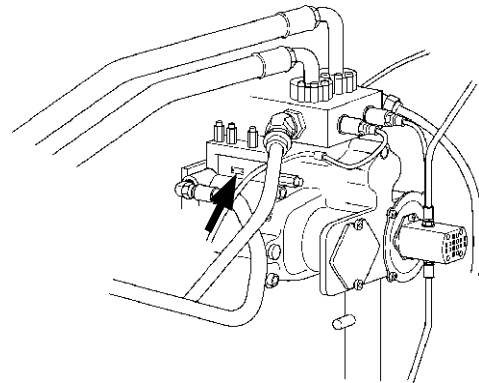

ZX470LC-5G

M16J-00-003

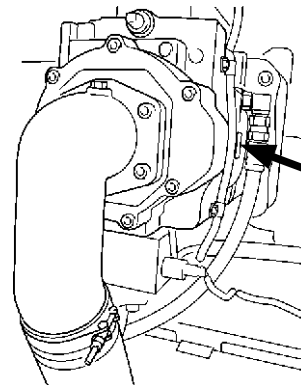


ZX670LC-5G, 870LC-5G

M1J7-07-003

Boom

TYPE : _____

MFG. NO. : _____

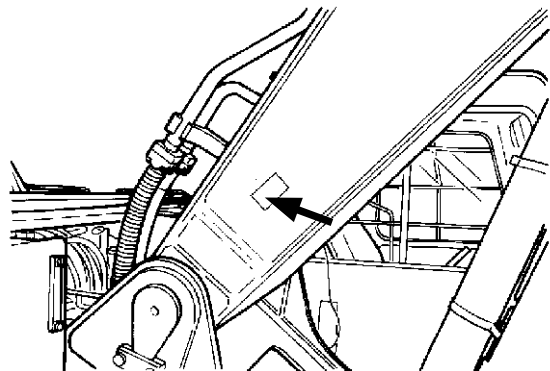


M111-12-005

MACHINE NUMBERS

Arm

TYPE : _____

MFG. NO. : _____

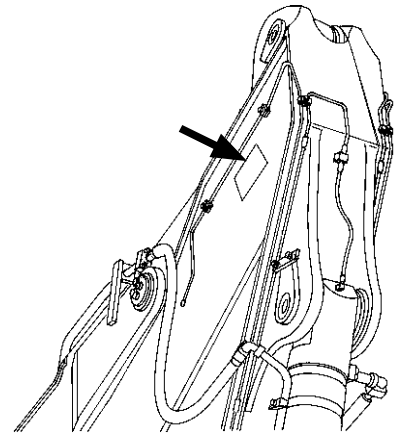


M17V-00-005

Bucket

TYPE : _____

MFG. NO. : _____

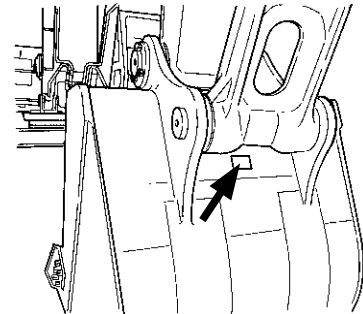

M116-12-004


MEMO

This image shows a full page of a document template designed for handwritten notes or essays. It features approximately 30 evenly spaced, thin grey horizontal lines across the entire width of the page. The margins are consistent on all sides, providing a clear area for writing. There are no titles, headers, or other markings present on the page.

SAFETY

Recognize Safety Information

- These are the **SAFETY ALERT SYMBOLS**.
 - When you see these symbols on your machine or in this manual, be alert to the potential for personal injury.
 - Follow recommended precautions and safe operating practices.

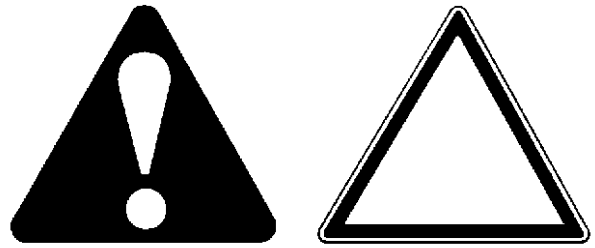

SA-688

Understand Signal Words

- On machine safety signs, signal words designating the degree or level of hazard - DANGER, WARNING, or CAUTION - are used with the safety alert symbol.
 - **DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 - **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 - **CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
 - **DANGER or WARNING safety signs** are located near specific hazards. General precautions are listed on **CAUTION safety signs**.
 - Some safety signs do not use any of the designated signal words above after the safety alert symbol are occasionally used on this machine.



IMPORTANT




- To avoid confusing machine protection with personal safety messages, a signal word **IMPORTANT** indicates a situation which, if not avoided, could result in damage to the machine.
-  **NOTE**: indicates an additional explanation for an element of information.

SA-1223

SAFETY

Follow Safety Instructions

- Carefully read and follow all safety signs on the machine and all safety messages in this manual.
- Safety signs should be installed, maintained and replaced when necessary.
 - If a safety sign or this manual is damaged or missing, order a replacement from your authorized dealer in the same way you order other replacement parts (be sure to state machine model and serial number when ordering).
- Learn how to operate the machine and its controls correctly and safely.
- Allow only trained, qualified, authorized personnel to operate the machine.
- Keep your machine in proper working condition.
 - Unauthorized modifications of the machine may impair its function and/or safety and affect machine life.
 - Do not modify any machine parts without authorization. Failure to do so may deteriorate the part safety, function, and/or service life. In addition, personal accident, machine trouble, and/or damage to material caused by unauthorized modifications will void Hitachi Warranty Policy.
 - Do not use attachments and/or optional parts or equipment not authorized by Hitachi. Failure to do so may deteriorate the safety, function, and/or service life of the machine. In addition, personal accident, machine trouble, and/or damage to material caused by using unauthorized attachments and/or optional parts or equipment will void Hitachi Warranty Policy.
- The safety messages in this SAFETY chapter are intended to illustrate basic safety procedures of machines. However it is impossible for these safety messages to cover every hazardous situation you may encounter. If you have any questions, you should first consult your supervisor and/or your authorized dealer before operating or performing maintenance work on the machine.

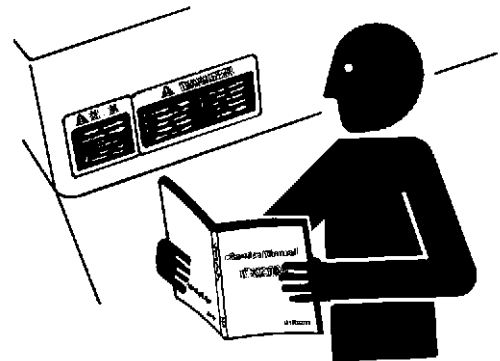

SA-003

SAFETY

Prepare for Emergencies

- Be prepared if a fire starts or if an accident occurs.
 - Keep a first aid kit and fire extinguisher on hand.
 - Thoroughly read and understand the label attached on the fire extinguisher to use it properly.
 - To ensure that a fire extinguisher can be always used when necessary, check and service the fire extinguisher at the recommended intervals as specified in the fire extinguisher manual.
- Establish emergency procedure guidelines to cope with fires and accidents.
- Keep emergency numbers for doctors, ambulance service, hospital, and fire department posted near your telephone.




SA-437

Wear Protective Clothing

- Wear close fitting clothing and safety equipment appropriate to the job.

You may need:

A hard hat
Safety shoes
Safety glasses, goggles, or face shield
Heavy gloves
Hearing protection
Reflective clothing
Wet weather gear
Respirator or filter mask.

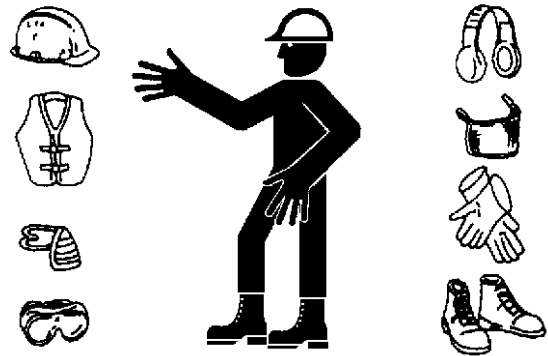

SA-438

Be sure to wear the correct equipment and clothing for the job. Do not take any chances.

- Avoid wearing loose clothing, jewelry, or other items that can catch on control levers or other parts of the machine.
- Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating the machine.

SAFETY

Protect Against Noise

- Prolonged exposure to loud noise can cause impairment or loss of hearing.
 - Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortably loud noises.



SA-434

Inspect Machine

- Inspect your machine carefully each day or shift by walking around it before you start it to avoid personal injury.
 - In the walk-around inspection be sure to cover all points described in the "Inspect Machine Daily Before Starting" section in the operator's manual.



SA-435

SAFETY


General Precautions for Cab

- Before entering the cab, thoroughly remove all dirt and/or oil such as mud, grease, soil or stones that may mess up the cab from the soles of your work boots. If any controls such as a pedal is operated while with dirt and/or oil on the soles of the operator's work boots, the operator's foot may slip off the pedal, possibly resulting in a personal accident.
- Do not mess up around the operator's seat with parts, tools, soil, stones, obstacles that may fold up or turn over, cans or lunch box. The levers or pedals become inoperable if obstacle jams in operation stroke of the travel levers/pedals, pilot control shut-off lever or control levers, which may result in serious injury or death.
- Avoid storing transparent bottles in the cab. Do not attach any transparent type window decorations on the windowpanes as they may focus sunlight, possibly starting a fire.
- Refrain from listening to the radio, or using music headphones or mobile telephones in the cab while operating the machine.
- Keep all flammable objects and/or explosives away from the machine.
- After using the ashtray, always cover it to extinguish the match and/or tobacco.
- Do not leave cigarette lighters in the cab. When the temperature in the cab increases, the lighter may explode.
- Use proper floor mat dedicated to the machine. If another floor mat is used, it may be displaced and contact with the travel pedals during operation, resulting in serious injury or death.

SAFETY

Use Handholds and Steps

- Falling is one of the major causes of personal injury.
 - When you get on and off the machine, always face the machine and maintain a three-point contact with the steps and handrails.
 - Do not use any controls as hand-holds.
 - Never jump on or off the machine. Never mount or dismount a moving machine.
 - Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.
 - Never get on and off the machine with tools in your hands.

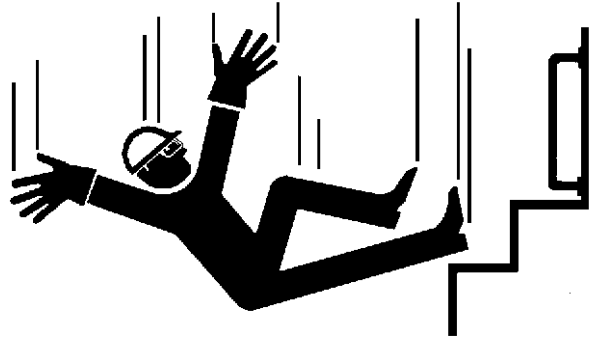

SA-439

Adjust the Operator's Seat

- A poorly adjusted seat for either the operator or for the work at hand may quickly fatigue the operator leading to misoperations.
 - The seat should be adjusted whenever changing the operator for the machine.
 - The operator should be able to fully depress the pedals and to correctly operate the control levers with his back against the seat back.
 - If not, move the seat forward or backward, and check again.
 - Adjust the rear view mirror position so that the best rear visibility is obtained from the operator's seat. If the mirror is broken, immediately replace it with a new one.



SA-378


SAFETY

Ensure Safety Before Rising from or Leaving Operator's Seat

- Before rising from the operator's seat to open/close either side window or to adjust the seat position, be sure to first lower the front attachment to the ground and then move the pilot control shut-off lever to the LOCK position. Failure to do so may allow the machine to unexpectedly move when a body part unintentionally comes in contact with a control lever and/or pedal, possibly resulting in serious personal injury or death.
- Before leaving the machine, be sure to first lower the front attachment to the ground and then move the pilot control shut-off lever to the LOCK position. Turn the key switch OFF to stop the engine.
- Before leaving the machine, close all windows, doors, and access covers and lock them up.

Fasten Your Seat Belt

- If the machine should overturn, the operator may become injured and/or thrown from the cab. Additionally the operator may be crushed by the overturning machine, resulting in serious injury or death.
 - Prior to operating the machine, thoroughly examine webbing, buckle and attaching hardware. If any item is damaged or worn, replace the seat belt or component before operating the machine.
 - Be sure to remain seated with the seat belt securely fastened at all times when the machine is in operation to minimize the chance of injury from an accident.
 - We recommend that the seat belt be replaced every three years regardless of its apparent condition.

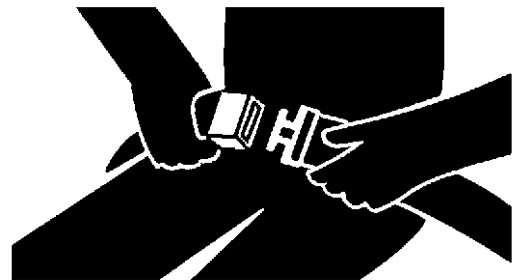


SA-237

SAFETY

Move and Operate Machine Safely

- Bystanders can be run over.
 - Take extra care not to run over bystanders. Confirm the location of bystanders before moving, swinging, or operating the machine.
 - Always keep the travel alarm and horn in working condition (if equipped). It warns people when the machine starts to move.
 - Use a signal person when moving, swinging, or operating the machine in congested areas. Coordinate hand signals before starting the machine.
 - Use appropriate illumination. Check that all lights are operable before operating the machine. If any faulty illumination is present, immediately repair it.
 - Ensure the cab door, windows, doors and covers are securely locked.
 - Check the mirrors and the monitor in the CAB for problems.
If there is, replace the problem part(s) or clean the mirror, camera and the monitor.
Refer to Rear View Monitor section on the cleaning of the camera and the monitor.

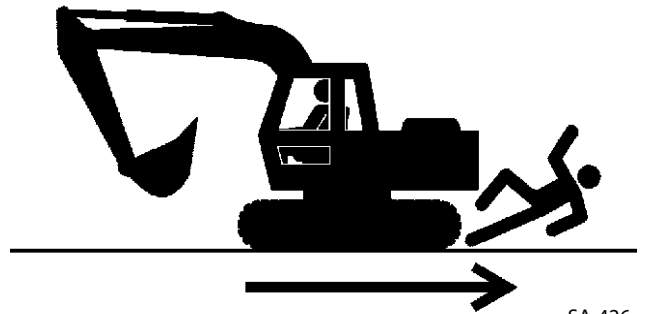

SA-426

Operate Only from Operator's Seat

- Inappropriate engine starting procedures may cause the machine to runaway, possibly resulting in serious injury or death.
 - Start the engine only when seated in the operator's seat.
 - NEVER start the engine while standing on the track or on ground.
 - Do not start engine by shorting across starter terminals.
 - Before starting the engine, confirm that all control levers are in neutral.
 - Before starting the engine, confirm the safety around the machine and sound the horn to alert bystanders.




SA-444

SAFETY

Jump Starting

- Battery gas can explode, resulting in serious injury.
 - If the engine must be jump started, be sure to follow the instructions shown in the “OPERATING THE ENGINE” chapter in the operator’s manual.
 - The operator must be in the operator’s seat so that the machine will be under control when the engine starts. Jump starting is a two-person operation.
 - Never use a frozen battery.
 - Failure to follow correct jump starting procedures could result in a battery explosion or a runaway machine.

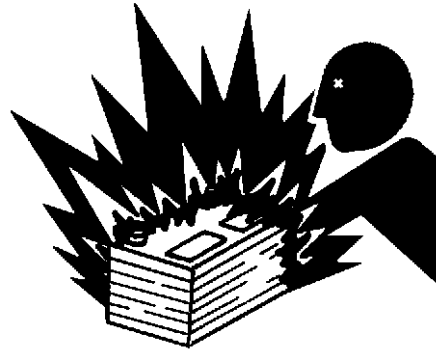

SA-032

Keep Riders off Machine

- Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine.
 - Only the operator should be on the machine. Keep riders off.
 - Riders also obstruct the operator’s view, resulting in the machine being operated in an unsafe manner.



SA-379

SAFETY


Precautions for Operations

- Investigate the work site before starting operations.
 - Be sure to wear close fitting clothing and safety equipment appropriate for the job, such as a hard hat, etc. when operating the machine.
 - Clear all persons and obstacles from area of operation and machine movement.

Always beware of the surroundings while operating.

When working in a small area surrounded by obstacles, take care not to hit the upperstructure against obstacles.

- When loading onto trucks, bring the bucket over the truck beds from the rear side. Take care not to swing the bucket over the cab or over any person.

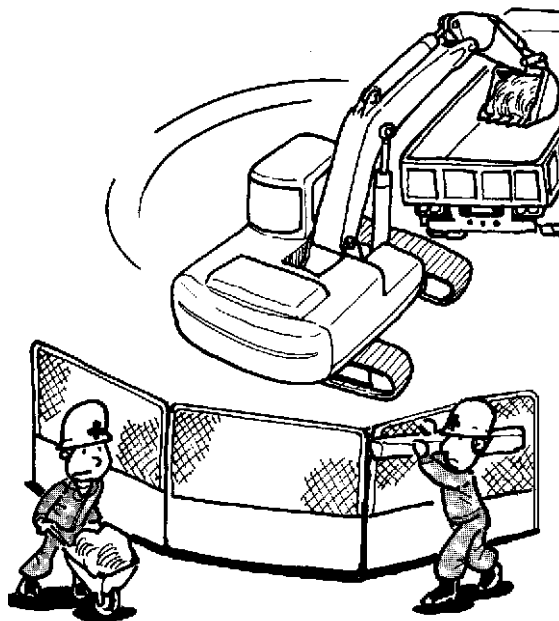

M178-05-007

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com