
1640, 1840, 2040 and 2040 S Tractors

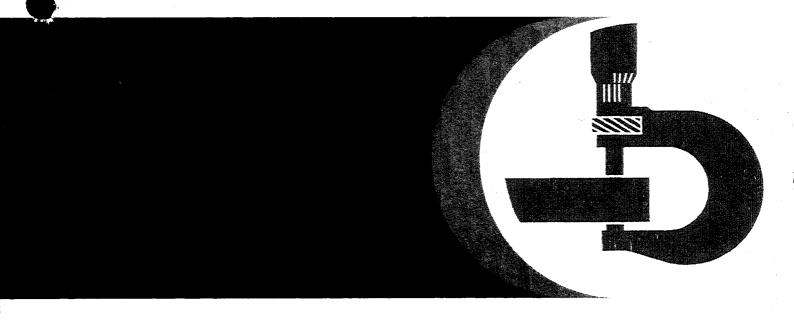



1640, 1840, 2040 and

CONTENTS

SECTION 10 — GENERAL Group 00 — Specifications and special tools

Group 05 - Pre-delivery, delivery and after-sales inspections

Group 10 - Lubrication and periodic service

Group 15 — Engine and tractor tune-up

- Group 20 Tractor separation (tractors without increased lifting capacity
- Group 25 Tractor separation (tractors with increased lifting capacity)

SECTION 20 - ENGINE

Group 00 - Specifications

Group 05 - Radiator

SECTION 30 – FUEL AND AIR INTAKE SYSTEM Group 00 – Specifications and special tools Group 05 – Diagnosing malfunctions

- Group 10 Fuel tank and water trap
- Group 15 Cold weather starting aids
- Group 20 Speed control linkage
- Group 25 Air cleaner

SECTION 40 - ELECTRICAL SYSTEM

Group 00 - Specifications and special tools

- Group 05 Description, diagnosing malfunctions and tests Group 10 Wiring harnesses
- Group 15 Controls and instruments Group 20 Lighting system
- Group 25 Wiring diagrams
- Group 30 Starting motor
- Group 35 Alternator

SECTION 50 - POWER TRAIN

- Group 00 Specifications and special tools
 - Group 05 Description, operation and lubricating system
 - Group 10 Clutch operating linkages
 - Group 15 Engine clutches
 - Group 20 Hi-Lo shift unit
 - Group 25 Creeper transmission
 - Group 30 Transmission shift linkage
 - Group 35 Synchronized transmission and transmission oil pump
 - Group 40 Collar shift transmission and transmission oil pump
 - Group 45 Differential
 - Group 50 Final drives
 - Group 55 Independent PTO
 - Group 60 Continuous-running PTO
- Group 61 Front PTO Group 65 Mechanical front wheel drive

CONTENTS (Contd.)	
 SECTION 60 — STEERING SYSTEM AND BRAKES Group 00 — Specifications and special tools Group 05 — Hydrostatic steering (operating pressure: 12000 kPa; 120 bar; 1740 ps Group 06 — Hydrostatic steering (operating pressure: 15000 kPa; 150 bar; 2180 ps Group 10 — Power steering Group 15 — Manual steering Group 20 — Brakes 	;i) ;i)
SECTION 70 – HYDRAULIC SYSTEM Group 00 – Specifications and special tools Group 05 – Description, diagnosing malfunctions and pressure tests Group 10 – Oil reservoir, filter, valves and oil cooler Group 15 – Hydraulic pumps Group 20 – Rockshaft Group 21 – Front hitch Group 25 – Selective control valves (spool type) Group 30 – Selective control valves (poppet valve type) Group 35 – Hose couplers Group 40 – Remote cylinder Group 45 – Selective control valves (for tractors manufactured in Spain)	
SECTION 80 – MISCELLANEOUS Group 00 – Specifications and special tools Group 05 – Front axle Group 10 – Belt pulley Group 15 – Front and rear wheels Group 20 – Axla trailer hitch	
SECTION ON OPERATOR'S CAR	

SECTION 90 - OPERATOR'S CAB

Group 00 – OPERATOR'S CAB Group 00 – Specifications and special tools Group 05 – Air conditioning system Group 10 – Cab ventilation and heating Group 15 – Operator's seats Group 20 – OPU cab Group 25 – SG2 cab Group 30 – Roll guard

2

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com